



USB232/485/422

Software Installation Guide

Shenzhen 3onedat Technology CO., LTD

Address: 3/B, Zone 1, Baiwangxin High Technology Industrial park, Song Bai Road, Nanshan
District, Shenzhen, 518108, China

Website: www.3onedata.com

Phone: +86 -755-26702668

Fax: +86 -755-26703485

Content

Content.....	2
1. Support operate system.....	1
2. Driver installation step (USB232/485/422)	1

1. Support operate system

©Support USB2.0 and USB1.1

©Virtual serial port driver support

windows 2000,server 2003, XP , windows 7, windows 7 64-bit,server 2008

Windows XP ,windows XP 64-bit,windows vista,

Windows vista 64-bit,windows XP embedded

Windows CE 4.2,5.0,5.2,6.0

Mac OS-X

©Dynamic Link Library support

windows 2000,server 2003, XP , windows 7, windows 7 64-bit,server 2008

Windows XP ,windows XP 64-bit,windows vista,

Windows vista 64-bit,windows XP embedded

Windows CE 4.2,5.0,5.2,6.0

Linux(> version 2.4), Linux x86_64

2. Driver installation step (USB232/485/422)


1. Plug USB port to PC first time, PC will note"Found New Hardware", Search new hardware guide automatic.



Choice"Install the software automatically (Recommended)", please indicate the driver path to drivers folder in CD's USB××× file



2. After install the driver, will have a virtual serial port in PC automatic, you can find the information in Device manager.

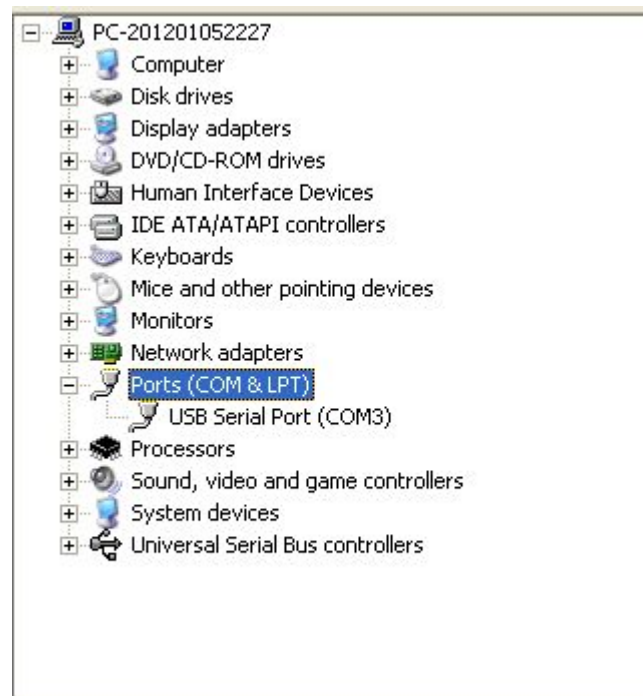

3. In order to install conveniently in next time, please uninstall the memory install, Click “uninstall” and “OK” and finished uninstall, the figure is as follows:

