


Fujitsu VRF systems with KNX, Serial and IP support

IN775FGL00XO000 GATEWAY

USER MANUAL

Version 1.0.7

Publication date 2023-12-20

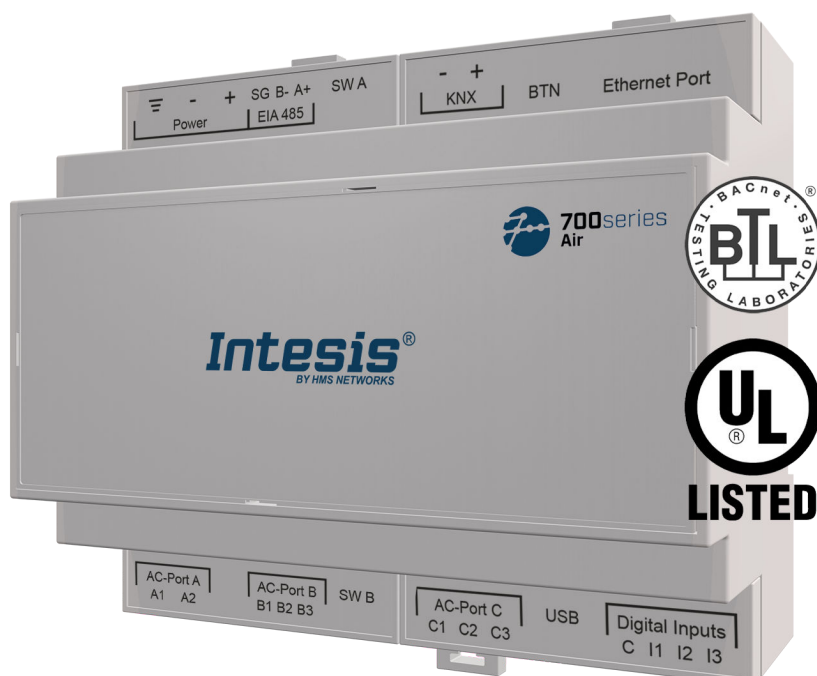

Copyright © 2023 Intesis

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Table of Contents

1. Description and Order Codes	1
2. Licensing	2
3. General Information	3
3.1. Intended Use of the User Manual	3
3.2. General Safety Information	3
3.3. Admonition Messages and Symbols	3
4. Overview	5
4.1. Inside the Package	6
4.2. Main Features	6
4.3. Gateway General Functionality	7
5. Hardware	8
5.1. Mounting	8
5.2. Connection	10
5.2.1. Gateway Connectors	10
5.2.2. Connection Procedure for the AC Unit	12
5.2.3. Connection Procedure for Modbus	12
5.2.4. Connection Procedure for KNX	13
5.2.5. Connection Procedure for BACnet	13
5.2.6. Connection Procedure for Home Automation	15
5.2.7. Connection to a PC for Configuration	15
5.3. Gateway Layout	16
5.4. LED Indicators	17
5.5. DIP Switches	17
5.6. Push Button	18
5.7. Technical Specifications	19
5.8. Dimensions	20
6. Available Applications	21
6.1. Integration into Modbus Systems	21
6.1.1. Modbus Registers	21
6.2. Integration into KNX Systems	25
6.2.1. KNX Signals	25
6.3. Integration into BACnet Systems	32
6.3.1. BACnet Objects	32
6.4. Integration into Home Automation Systems	37
6.4.1. Home Automation Signals	37
7. Late Configuration: Change the Gateway's Protocol	39
8. Error Codes	40

1. Description and Order Codes

IN775FGL00xO000 Gateway.

Modbus®, KNX®, BACnet®, and Home Automation® gateway for Fujitsu® air conditioning systems.

ORDER CODE	LEGACY ORDER CODE
IN775FGL00xO000	INMBSFGL016O000 INKNXFGL016O000
¹ The x stands for S or M, depending on the license you have purchased. To know more, see Licensing (page 2) .	



NOTE
The order code may vary depending on the product seller and the buyer's location.

2. Licensing

Distribution license(s) for the IN775FGL00xO000 gateway:

Order Code	License	Maximum AC units	
		Indoor units	Outdoor units
IN775FGL00SO000	Small	16	12
IN775FGL00MO000	Medium	64	12

**NOTE**

The order code may vary depending on the product seller and the buyer's location.

3. General Information

3.1. Intended Use of the User Manual

This manual contains the main features of this Intesis gateway and the instructions for its appropriate installation, configuration, and operation.

The contents of this manual should be brought to the attention of any person who installs, configures, or operates this gateway or any associated equipment.

Keep this manual for future reference during the installation, configuration, and operation.

3.2. General Safety Information



IMPORTANT

Follow these instructions carefully. Improper work may seriously harm your health and damage the gateway and/or any other equipment connected to it.

Only technical personnel, following these instructions and the country legislation for installing electrical equipment, can install and manipulate this gateway.

Install this gateway indoors, in a restricted access location, avoiding exposure to direct solar radiation, water, high relative humidity, or dust.

All wires (for communication and power supply, if needed) must only be connected to networks with indoor wiring. All communication ports are considered for indoor use and must only be connected to SELV circuits.

Disconnect all systems from power before manipulating and connecting them to the gateway.

Use a circuit breaker before the power supply. Rating: 250 V, 6 A.

Respect the expected polarity of power and communication cables when connecting them to the gateway.

3.3. Admonition Messages and Symbols



DANGER

Instructions that must be followed to avoid an imminently hazardous situation that, if not avoided, will result in death or severe injury.



WARNING

Instructions that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in death or severe injury.



CAUTION

Instruction that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in minor or moderate injury.

**IMPORTANT**

Instruction that must be followed to avoid a risk of reduced functionality and/or damage to the equipment or to avoid a network security risk.

**NOTE**

Additional information which may facilitate installation and/or operation.

**TIP**

Helpful advice and suggestions.

**NOTICE**

Remarkable Information.

4. Overview

This IN775FGL00x0000 gateway supports four applications.

Gateway's client interface	↔	Gateway's server interface
Fujitsu VRF HVAC systems	to	Modbus TCP and RTU
		KNX TP
		BACnet/IP or MS/TP
		Home Automation



IMPORTANT
This document assumes that the user is familiar with these technologies.

Figure 1. Integration of Fujitsu AC systems into Modbus installations

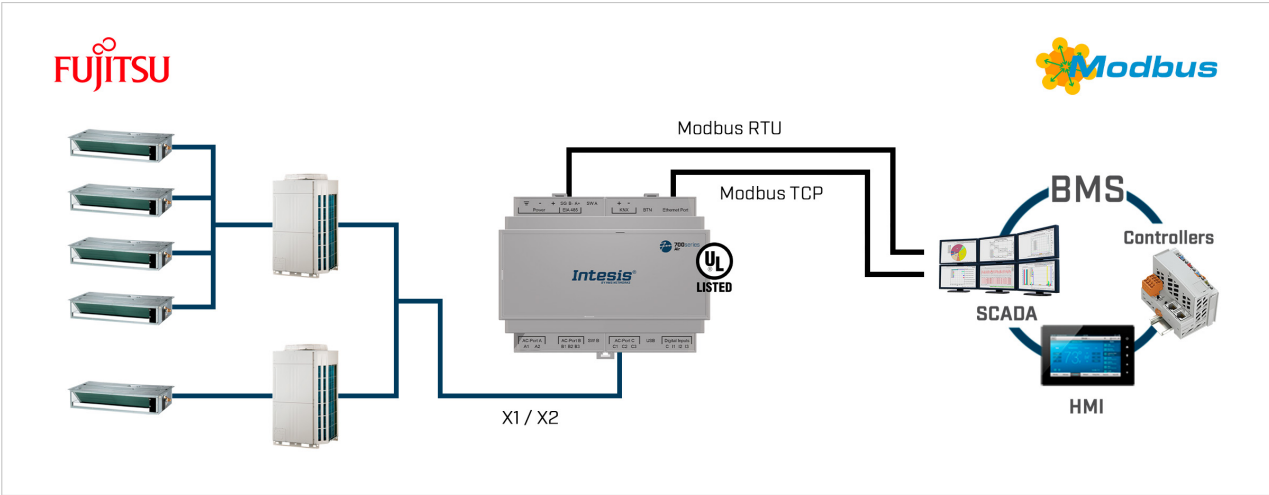


Figure 2. Integration of Fujitsu AC systems into KNX installations

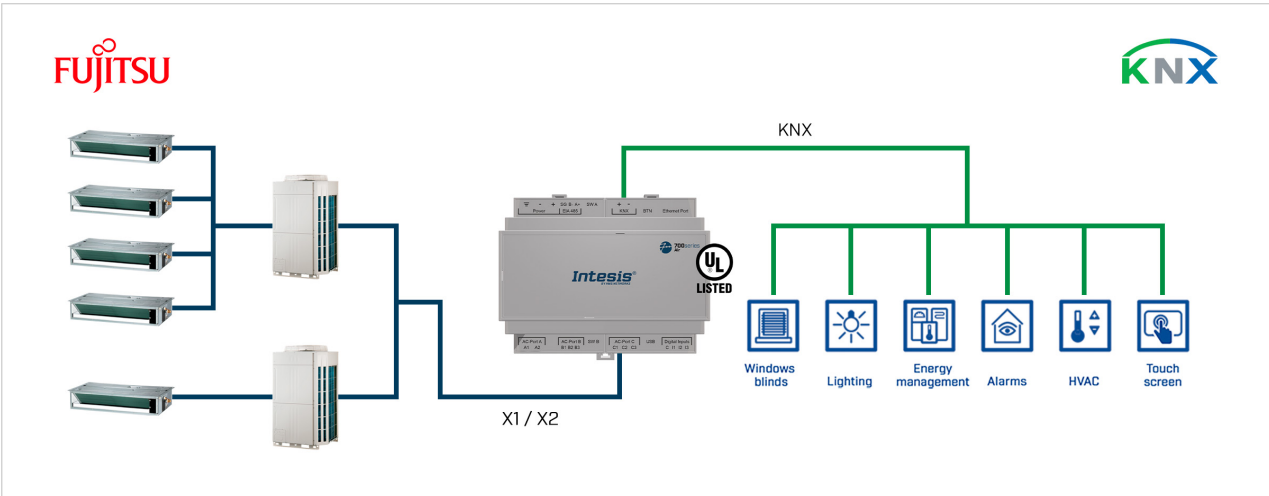


Figure 3. Integration of Fujitsu AC systems into BACnet installations


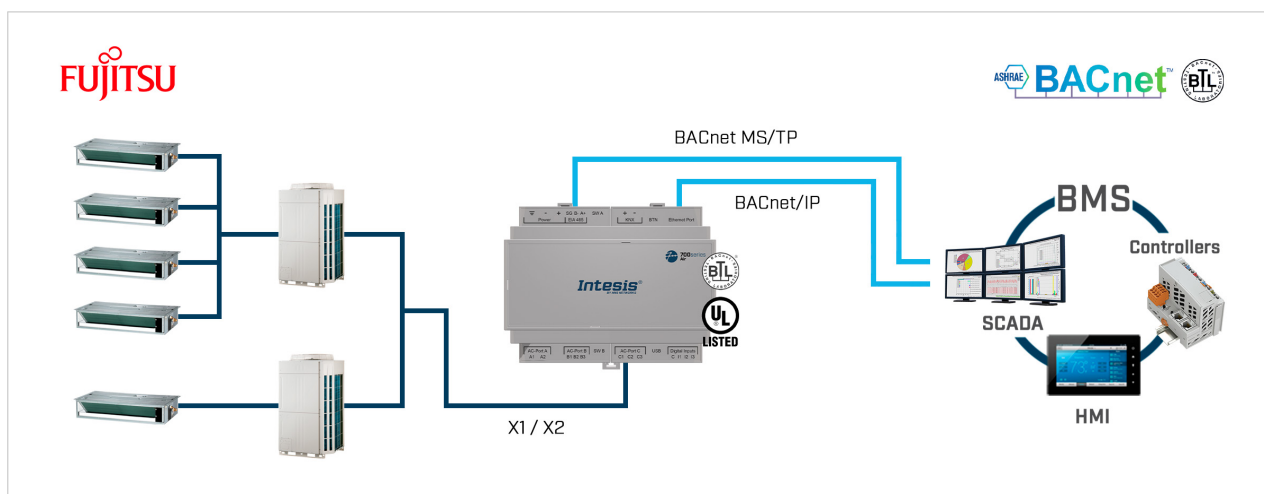


Figure 4. Integration of Fujitsu AC systems into Home Automation installations

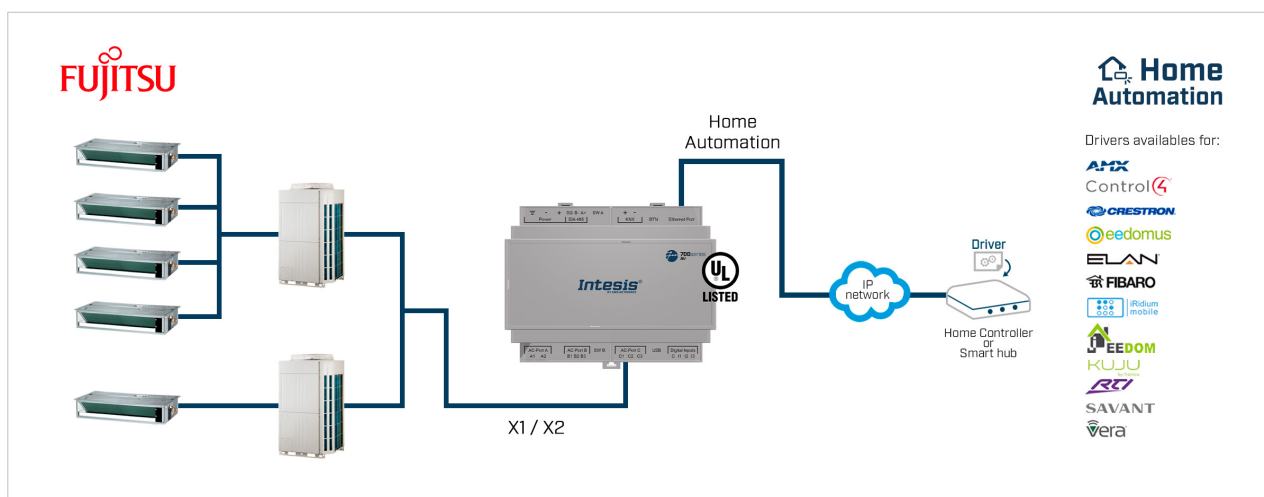

4.1. Inside the Package

Items included:

- Intesis IN775FGL00xO000 Gateway
- USB Mini-B type to USB Type-A cable
- Installation Sheet

4.2. Main Features

- Several applications available: Configurable for BACnet/IP and MS/TP, Modbus TCP and RTU, KNX, and Home Automation communication protocols.
- Late configuration: Change between applications easily.
- Scan function: Find the devices connected to the air conditioning bus.
- Specific signals to monitor outdoor units.
- 2 x DIP switches for the EIA-485 connector termination and polarization configuration.

- 14 LEDs indicate the operating status for both the gateway and the communication bus.
- DIN rail and wall mounting case.
- Accredited with the main certifications for electronic equipment.
- Multiple ports for serial and TCP/IP communication:
 - Green pluggable terminal block for EIA-485 (3 poles)
 - Orange pluggable terminal block for KNX (2 poles)
 - Ethernet
 - Green pluggable terminal block for binary inputs (4 poles)
 - USB Mini-B type 2.0 port for connection to the PC
 - Green pluggable terminal block for AC connection (2 poles)
 - Green pluggable terminal block for AC connection (3 poles)
 - Green pluggable terminal block for AC connection (3 poles)

**NOTE**

Depending on the AC bus, some of these AC connection ports are not used. See [Gateway Connectors \(page 10\)](#).

4.3. Gateway General Functionality

With this Intesis IN775FGL00xO000 gateway, you can easily integrate Fujitsu systems into an installation based on Modbus TCP, Modbus RTU, KNX, BACnet/IP, BACnet MS/TP, or Home Automation. To do so, the gateway acts as a server device of the installation itself, accessing all signals from each air conditioner unit and controlling the whole AC network.

The gateway is continuously polling the AC network, storing in its memory the current status of every signal you want to track and serving this data to the installation when requested. Also, when a signal status changes, the gateway sends a write telegram to the installation, waits for the response, and performs the corresponding action.

A lack of response from a signal activates a communication error, allowing you to know which signal from which AC unit is not correctly working.

5. Hardware

5.1. Mounting

**IMPORTANT**

Before mounting, please ensure that the chosen installation place preserves the gateway from direct solar radiation, water, high relative humidity, or dust.

**IMPORTANT**

Maximum mounting height: below 2 meters (6.5 feet).

**NOTE**


Mount the gateway on a wall or over a DIN rail. We recommend the DIN rail mounting option, preferably inside a grounded metallic industrial cabinet.

**IMPORTANT**

Ensure the gateway has sufficient clearances for all connections when mounted. See [Dimensions \(page 20\)](#).

Wall mounting

1. Press the top side mobile clips in the rear panel until you hear a *click*.

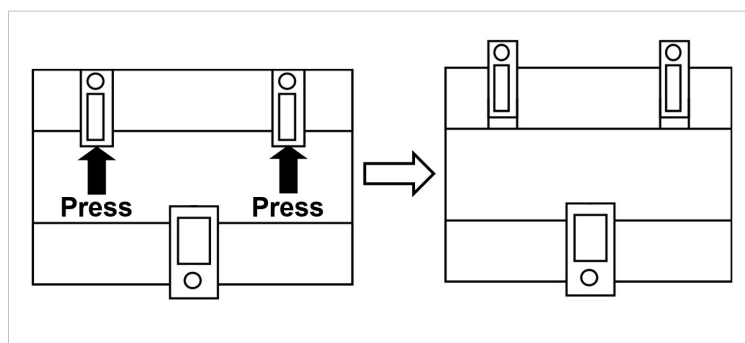

2. Use the clip holes to fix the gateway on the wall using screws.

**NOTE**

Use M3 screws, 25 mm (1") length.


3. Make sure the gateway is firmly fixed.

DIN rail mounting


1. Fit the gateway's top-side clips in the upper edge of the DIN rail.
2. Press the low side of the gateway gently to lock it in the DIN rail.
3. Make sure the gateway is firmly fixed.

**NOTE**


For some DIN rails, to complete step 2, you may need a small screwdriver or similar to pull the bottom clip down.

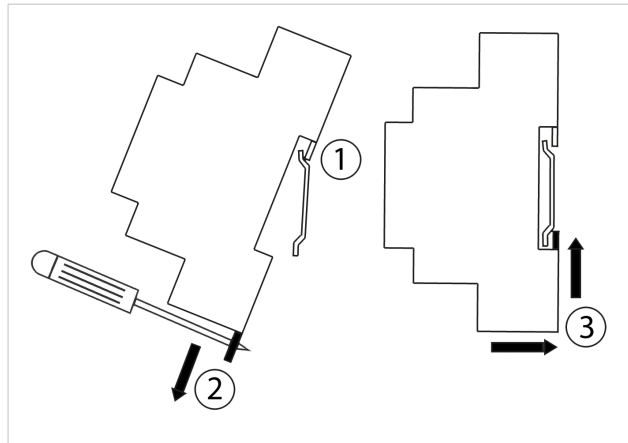

5.2. Connection




CAUTION
Disconnect all systems from power before manipulating and connecting them to the gateway.



IMPORTANT
Keep communication cables away from power and ground wires.

5.2.1. Gateway Connectors

Figure 5. Wiring diagram

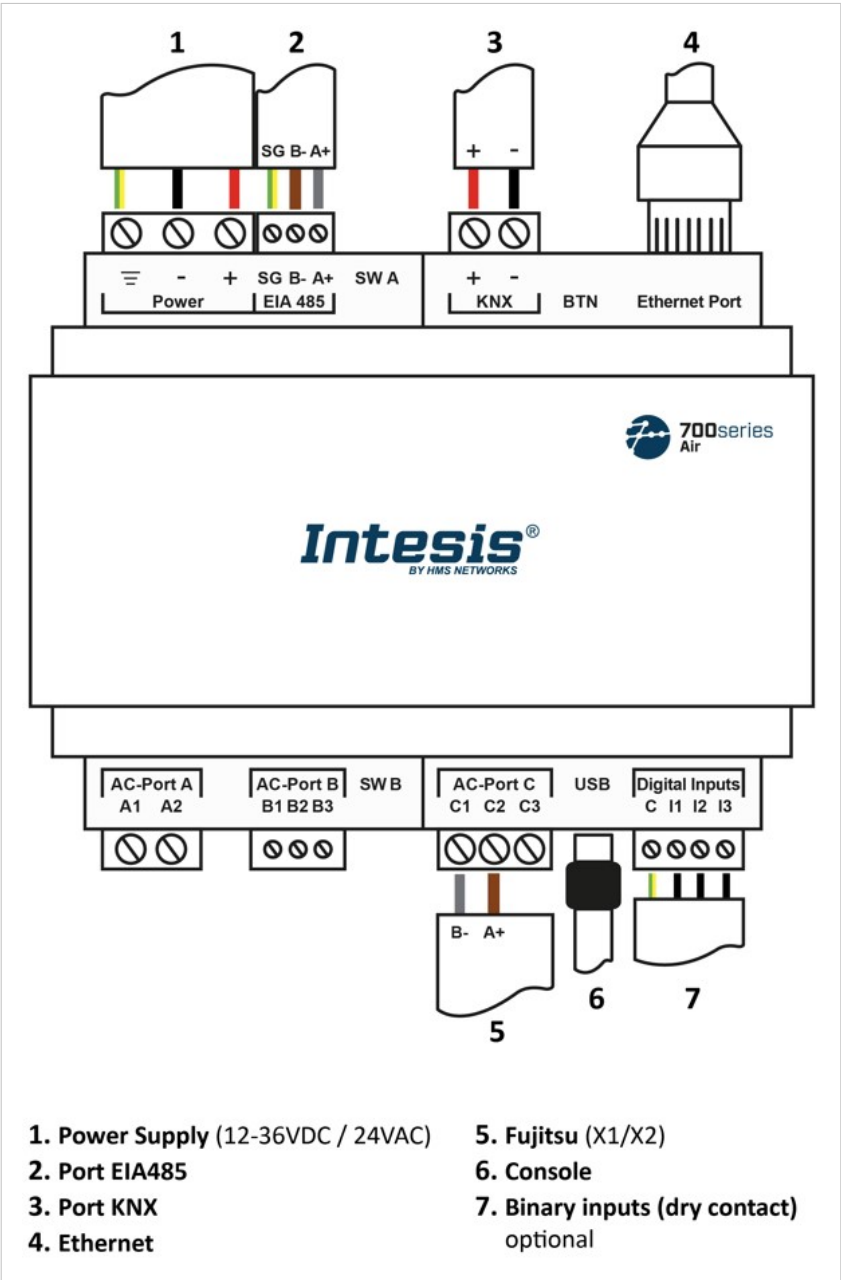

Connectors' wiring:**IMPORTANT**

For all connectors, use solid or stranded wires (twisted or with ferrule).

Cross-section/gauge per terminal:

- One core: 0.2 .. 2.5 mm² / 24 .. 11 AWG
- Two cores: 0.2 .. 1.5 mm² / 24 .. 15 AWG
- Three cores: Not permitted

**NOTE**

To know more about each port's specifications, see [Technical Specifications \(page 19\)](#).

Communication ports:

PORT	USAGE	WIRING			
EIA-485	BACnet MS/TP and Modbus RTU	SG: Signal ground	B-	A+	
KNX	KNX bus	+		-	
Ethernet	As an IP/TCP port: BACnet/IP, Modbus TCP, and Home Automation As a console port: Connection to a PC for configuration purposes	Ethernet cable (CAT5 or higher) When using the building LAN, contact the network administrator and make sure traffic is allowed. When starting up the gateway for the first time, DHCP will be enabled for 30 seconds. After that time, the default IP 192.168.100.246 will be set.			
AC-Port A	Not used				
AC-Port B	Not used				
AC-Port C No polarity to observe	Fujitsu bus	C1: X1	C2: X2	C3: Not used	
USB	Connection to a PC for configuration purposes	USB Mini-B type			
Digital Inputs	Dry contact for input devices	C: Common	I1: Input 1	I2: Input 2	I3: Input 3

Power supply:

The power supply connector is a green pluggable terminal block (three poles) labeled as **Power**.

Apply the voltage within the admitted range and of enough power:


- **For DC:** 12 .. 36 VDC (+/-10%), Max: 250 mA
- **For AC:** 24 VAC (+/-10 %), 50-60 Hz, Max: 127 mA

Recommended voltage: 24 VDC, Max: 127 mA

**IMPORTANT**

- **When using a DC power supply:** Respect the polarity labeled on the power connector for the positive and negative wires.
- **When using an AC power supply:** Ensure the same power supply is not powering any other device.

**IMPORTANT**

- Use SELV-rated NEC class 2 or limited power source (LPS) power supply.
- Respect the polarity.
- Connect the gateway's ground terminal  to the installation grounding.
- A wrong connection may cause earth loops and damage the Intesis gateway and/or other system equipment.

5.2.2. Connection Procedure for the AC Unit

Connect the Fujitsu air conditioning network bus (X1/X2) to the gateway using the **C1** and **C2** poles of the **AC-Port C**.

**NOTE**

There is no polarity to observe.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.2.3. Connection Procedure for Modbus

For Modbus TCP:

Connect the Modbus TCP Ethernet cable to the gateway's **Ethernet Port**. The correct cable to use depends on where the gateway is connected:

- **Connecting directly to a Modbus TCP device:** use a crossover Ethernet UTP/FTP CAT5 or higher cable.
- **Connecting to a hub or switch of the LAN of the building:** use a straight Ethernet UTP/FTP CAT5 or higher cable.

**NOTE**

Some devices detect the difference automatically and adjust themselves.

**NOTE**

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.

**IMPORTANT**

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.

For Modbus RTU:

Connect the Modbus RTU communication cable to the gateway's **EIA-485** port.

**IMPORTANT**

Observe polarity.

**IMPORTANT**

Remember the characteristics of the standard EIA-485 bus:

- Maximum distance of 1200 meters (0.75 miles).
- Maximum of 32 devices connected to the bus.
- A 120 ohms (Ω) termination resistor is needed at each end of the bus. The gateway has an internal bus biasing circuit already incorporating the termination resistor. It can be enabled using the DIP switch block (**SW A**) dedicated to the **EIA-485** port:

Position 1

- ON: 120 Ω termination active.
- OFF: 120 Ω termination inactive.

Positions 2 and 3

- ON: Polarization active.
- OFF: Polarization inactive.

For further details, see [DIP Switches \(page 17\)](#).

**IMPORTANT**

When installing the gateway at the end of the bus with the termination resistor enabled, do not install an additional termination resistor at that end.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.2.4. Connection Procedure for KNX

Connect the KNX TP communication cable to the gateway's **KNX** port.

**IMPORTANT**

Observe polarity.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.2.5. Connection Procedure for BACnet

For BACnet/IP:

Connect the BACnet/IP Ethernet cable to the gateway's **Ethernet Port**. The correct cable to use depends on where the gateway is connected:

- **Connecting directly to a BACnet/IP device:** use a crossover Ethernet UTP/FTP CAT5 or higher cable.

- **Connecting to a hub or switch of the LAN of the building:** use a straight Ethernet UTP/FTP CAT5 or higher cable.

**NOTE**

Some devices detect the difference automatically and adjust themselves.

**NOTE**

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.

**IMPORTANT**

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.

For BACnet MS/TP:

Connect the BACnet MS/TP communication cable to the gateway's **EIA-485** port.

**IMPORTANT**

Observe polarity.

**IMPORTANT**

Remember the characteristics of the standard EIA-485 bus:

- Maximum distance of 1200 meters (0.75 miles).
- Maximum of 32 devices connected to the bus.
- A termination resistor of 120 ohms (Ω) is needed at each end of the bus. The gateway has an internal bus biasing circuit already incorporating the termination resistor. It can be enabled using the DIP switch block dedicated to the EIA-485 port:

Position 1

- ON: 120 Ω termination active.
- OFF: 120 Ω termination inactive.

Position 2 and 3

- ON: Polarization active.
- OFF: Polarization inactive.

For further details, see [DIP Switches \(page 17\)](#).

**IMPORTANT**

When installing the gateway at the end of the bus with the termination resistor enabled, do not install an additional termination resistor at that end.

**NOTE**

See the [Wiring diagram \(page 10\)](#).

5.2.6. Connection Procedure for Home Automation

Connect the Home Automation Ethernet cable to the gateway's **Ethernet Port**. The correct cable to use depends on where the gateway is connected:

- **Connecting directly to a Home Automation device:** use a crossover Ethernet UTP/FTP CAT5 or higher cable.
- **Connecting to a hub or switch of the LAN of the building:** use a straight Ethernet UTP/FTP CAT5 or higher cable.



NOTE

When commissioning the gateway for the first time, DHCP will be enabled for 30 seconds. During that time, if there is a DHCP server, an IP address will be automatically assigned to the gateway. If there is no DHCP, you can type an IP address of your choice. After that time, the default IP address 192.168.100.246 will be automatically set.



IMPORTANT

If communicating through the LAN of the building, contact the network administrator and make sure traffic on the used port is allowed through all LAN paths.



NOTE

See the [Wiring diagram \(page 10\)](#).

5.2.7. Connection to a PC for Configuration

Use the supplied USB Mini-B type to USB Type-A cable to connect the gateway through its **Console** port to a PC to configure it with Intesis MAPS.



NOTE

Find all you need to know about the gateway configuration and Intesis MAPS in the [Intesis MAPS Configuration Guide for IN775FGL00xO000](#).




NOTE

See the [Wiring diagram \(page 10\)](#).

5.3. Gateway Layout

Figure 6. Disposition of hardware elements in the gateway

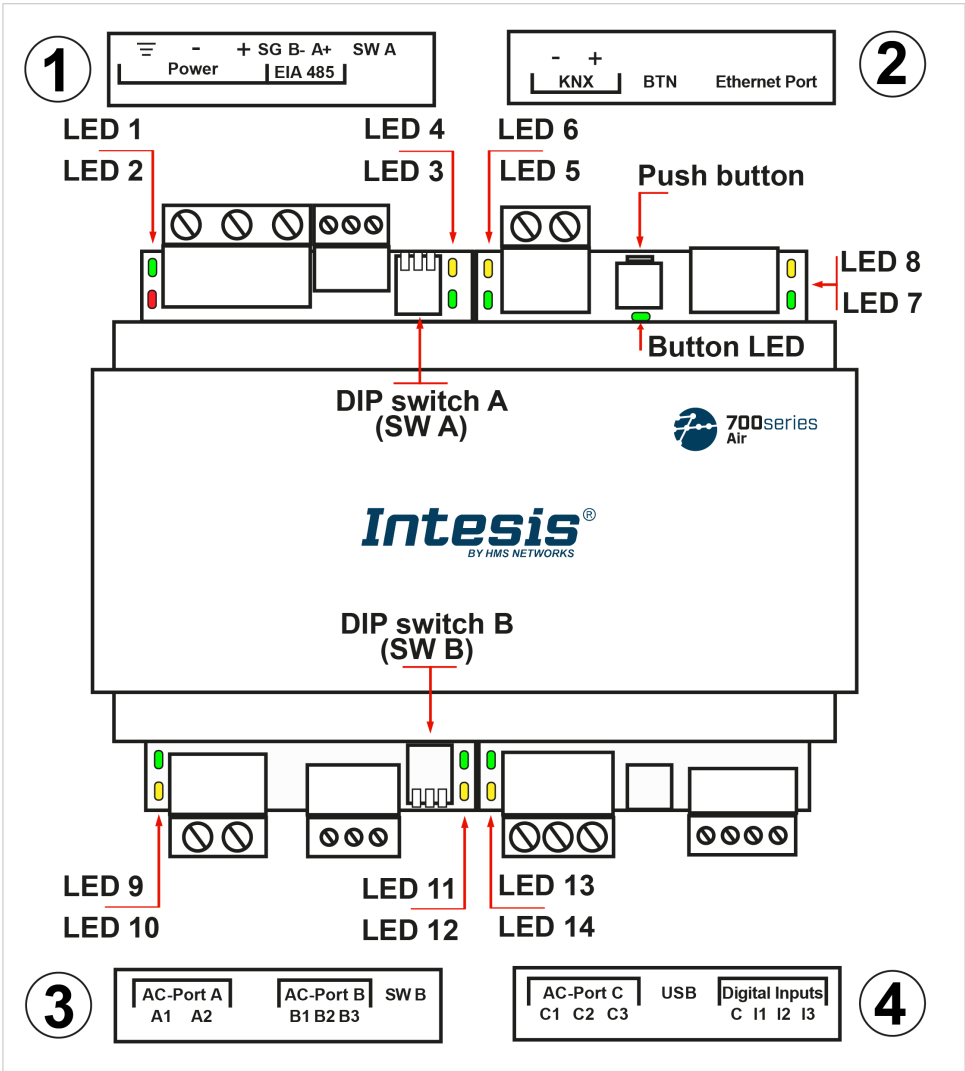

Plastic covers numbered in the image as ①, ②, ③, and ④ can be easily disassembled.

The following sections explain each element in more detail: LEDs, DIP switches, and the push button.

5.4. LED Indicators

Table 1. LEDs location and behavior

Cover	LED	Color	Description
Top side			
Under frontal cover ①	LED 1 (PWR)	Green	Power on (not programmable)
	LED 2 (ERR)	Red	Blinking: Hardware error
	LED 3	Green	485 Tx (RS485 for BACnet or Modbus)
	LED 4	Yellow	485 Rx (RS485 for BACnet or Modbus)
Under frontal cover ②	LED 5	Green	KNX Port Tx
	LED 6	Yellow	KNX Port Rx
	BUTTON LED	Green	KNX: Programming mode on BACnet: BACnet link established Modbus and Home Automation: Not used
	LED 7	Green	Ethernet link established
	LED 8	Yellow	Ethernet speed
Bottom side			
Under frontal cover ③	LED 9	Green	AC-Port A Tx (HBS)
	LED 10	Yellow	AC-Port A Rx (HBS)
	LED 11	Green	AC-Port B Tx (RS485)
	LED 12	Yellow	AC-Port B Rx (RS485)
Under frontal cover ④	LED 13	Green	AC-Port C Tx (UFO-SLQ)
	LED 14	Yellow	AC-Port C Rx (UFO-SLQ)



NOTE

LEDs are hidden behind the four frontal labeled covers (see the figure [Disposition of hardware elements in the gateway \(page 16\)](#)). These covers are assembled by pressure, so you just need to pull them to remove them.

5.5. DIP Switches

The gateway has two DIP switches (see the figure [Disposition of hardware elements in the gateway \(page 16\)](#)):

- DIP switch A (SW A)
- DIP switch B (SW B)

Each DIP switch is dedicated to a 485 port, and its function is to activate or deactivate the termination resistor and the polarization of each port:

Position			Description
1	2	3	
↑	X	X	120 Ω termination active
↓	X	X	120 Ω termination inactive (default position)
X	↑	↑	Polarization active (default position)
X	↓	↓	Polarization inactive

5.6. Push Button

Find the push button at the top side, between the KNX and the Ethernet connectors (see the figure [Disposition of hardware elements in the gateway \(page 16\)](#)).

**NOTE**

The button is hidden and only accessible using a thin object like a paper clip.

Common functionality:

Reset factory settings

1. Push the button.
2. Power on the gateway.
3. Wait four seconds.
4. Release the button.

Functionalities depending on the current project:

BACnet

- Push the button to send an I-Am message to all BACnet ports.

KNX

- Push the button to switch between normal mode and programming mode.

5.7. Technical Specifications

Housing	Plastic, type PC (UL 94 V-0). Color: Light Grey. RAL 7035 Net dimensions (dxwxh): Millimeters: 90 x 106 x 58 mm / Inches: 3.5 x 4.2 x 2.3"	
Mounting	Wall: Use M3 25 mm (1") length screws. Secure mounting: below 2 meters (6 feet) DIN rail (recommended mounting) EN60715 TH35	
Wires (for power supply and low-voltage signals)	Wire cross-section/gauge per terminal: One core: 0.2 .. 2.5 mm ² (24 .. 14 AWG) Two cores: 0.2 to 1.5 mm ² (24 .. 16 AWG) Three cores: Not permitted Use solid or stranded wires (twisted or with ferrule). For distances longer than 3.05 meters (10 feet), use class 2 cables	
Power	1 x Green pluggable terminal block (3 poles) 12 to 36 VDC +/-10%, Max.: 250 mA 24 VAC +/-10% 50-60 Hz, Max.: 127 mA Recommended: 24 VDC	
Ethernet	1 x Ethernet 10/100 Mbps RJ45	
Port EIA 485	1 x Green pluggable terminal block (3 poles) SGND (Reference ground or shield) 1500VDC isolation from other ports	
Port KNX	1 x Orange pluggable terminal block (2 poles): A, B	
AC Ports	AC-Port A (serial, 2 poles): Not used AC-Port B (serial, 3 poles): Not used AC-Port C: (serial, 3 poles): AC bus connection (X1/X2)	
LEDs	2 x Run (Power/Error) 2 x Port EIA-485 TX/RX 2 x Port KNX TX/TR 1 x Button indicator	2 x Ethernet Link/Speed 2 x AC-Port A TX/RX 2 x AC-Port B TX/RX 2 x AC-Port C TX/RX
Binary inputs	1 x Green pluggable terminal block (4 poles) I1, I2, I3, and Common 1500 VDC isolation from other ports	
Console port	USB Mini-B type 2.0 compliant 1500 VDC isolation	
SW A SW B	2 x DIP switch blocks for EIA-485 serial port configuration: Position 1: On: 120 Ω termination active Off: 120 Ω termination inactive Position 2 and 3: On: Polarization active Off: Polarization inactive	
Push button	1 x Push button Factory reset I-Am message (for BACnet only) Normal mode/programming mode switch (for KNX only)	
Operational temperature	Celsius: 0 .. 60°C Fahrenheit: 32 .. 140°F	
Operational humidity	5 to 95%. No condensation	
Protection	IP20 (IEC60529)	

5.8. Dimensions

- **Net dimensions (DxWxH)**


Millimeters: 90 x 106 x 58 mm

Inches: 3.5 x 4.2 x 2.3"



IMPORTANT

Leave enough clear space to wire the gateway easily and for the subsequent manipulation of elements such as connectors, DIP switches, etc.

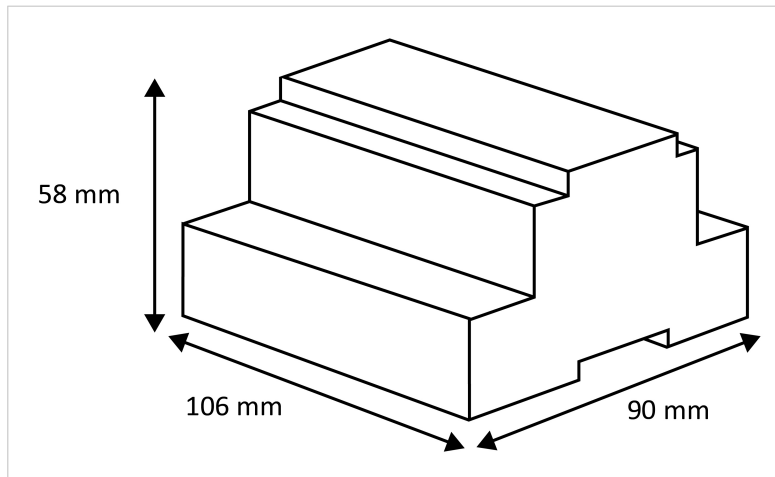

6. Available Applications

6.1. Integration into Modbus Systems

6.1.1. Modbus Registers



NOTICE

This part is common for Modbus RTU and TCP.

Functions to read Modbus registers:

- 03 Read Holding Registers.
- 04 Read Input Registers.

Function to write Modbus registers:

- 06 Single Holding Registers.

Modbus register contents are expressed in most significant bit (MSB) .. less significant bit (LSB).

The following tables list all available Modbus registers for the gateway.



NOTICE

Read/write parameter terminology:

- **R**: Read-only register.
- **W**: Write-only register.
- **RW**: Read and write register.
- **T**: Trigger-only register

Table 2. Global signals

Register name	Possible values	Modbus address	R/W
Gateway ES	0: Disable energy saving 1: Enable energy saving	0	RW
Gateway error	0: No error 1: Error	1	R
Gateway error code	0: No error X-Error	2	R
On (all the units)	1: Set the units On	3	T
Off (all the units)	1: Set the units Off	4	T
Operation Mode Auto (all the units)	1: Set Auto Mode	5	T
Operation Mode Heat (all the units)	1: Set Heat Mode	6	T
Operation Mode Dry (all the units)	1: Set Dry Mode	7	T
Operation Mode Fan (all the units)	1: Set Fan Mode	8	T
Operation Mode Cool (all the units)	1: Set Cool Mode	9	T
Fan Speed Auto (all the units)	1: Set Fan Speed Auto	10	T
Fan Speed Quiet (all the units)	1: Set Fan Speed Quiet	11	T
Fan Speed Low (all the units)	1: Set Fan Speed Low	12	T
Fan Speed Med-Low (all the units)	1: Set Fan Speed Med-Low	13	T

Register name	Possible values	Modbus address	R/W
Fan Speed Med-High (all the units)	1: Set Fan Speed Med-High	14	T
Fan Speed High (all the units)	1: Set Fan Speed High	15	T
Temperature Setpoint (all the units) (x10°C/°F)	Cool: 18 .. 30°C / 64 .. 86°F Heat: 16 .. 30 °C / 61 .. 86°	16	T

Table 3. Outdoor units signals

Register name	Possible values	Modbus address formula	R/W
Capacity save	0: Not set 1: 100 % 2: 90 % 3: 80 % 4: 70 % 5: 60 % 6: 50 % 7: 40 %	(OU ID[0 .. 11]+1)*25+10000+0	R
Forced Off	0: Not forced 1: Forced off	(OU ID[0 .. 11]+1)*25+10000+1	R
Error	0: No error 1: Error	(OU ID[0 .. 11]+1)*25+10000+2	R
Error code	0: No error X: Error	(OU ID[0 .. 11]+1)*25+10000+3	R

Table 4. Individual units signals

Register name	Possible values	Modbus address formula	R/W
On/Off	0: Off 1: On	(IU address[0 .. 63]+1)*100+0	RW
Operation Mode	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool	(IU address[0 .. 63]+1)*100+1	RW
Fan Speed	0: Auto 1: Quiet 2: Low 3: Med 4: High	(IU address[0 .. 63]+1)*100+2	RW
Fan Speed* *For models allowing med-low and med-high values	0: Auto 1: Quiet 2: Low 3: Med-Low 4: Med-High 5: High	(IU address[0 .. 63]+1)*100+2	RW
Vane Position U-D	1: Pos1 2: Pos2 3: Pos3 4: Pos4 10-Swing	(IU address[0 .. 63]+1)*100+3	RW

Register name	Possible values	Modbus address formula	R/W
Vane Position L-R	1: Pos1 2: Pos2 3: Pos3 4: Pos4 5: Pos5 10: Swing	(IU address[0 .. 63]+1)*100+4	RW
Temperature Setpoint (x10)	°C / °F	(IU address[0 .. 63]+1)*100+5	RW
Ambient Temperature (x10)	Celsius: 0 .. 63.5°C Fahrenheit: 32 .. 147°F	(IU address[0 .. 63]+1)*100+6	R
Temperature Limit Valid	0: Invalid 1: Valid	(IU address[0 .. 63]+1)*100+7	RW
Heat Setpoint Up Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+8	RW
Heat Setpoint Low Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+9	RW
Cool Setpoint Up Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+10	RW
Cool Setpoint Low Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+11	RW
Auto Setpoint Up Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+12	RW
Auto Setpoint Low Limit (x10)	Celsius: 10 .. 30°C Fahrenheit: 50 .. 86°F	(IU address[0 .. 63]+1)*100+13	RW
Unit Error	0: No error 1: Error	(IU address[0 .. 63]+1)*100+14	R
Unit Error code	0: No Error X-Error	(IU address[0 .. 63]+1)*100+15	R
Filter Alarm	0: Normal 1: Alarm	(IU address[0 .. 63]+1)*100+16	R
Filter Alarm Reset	1: Reset	(IU address[0 .. 63]+1)*100+17	T
Communication Error IU	0: No error 1: Error	(IU address[0 .. 63]+1)*100+18	R
Emergency	0: Off 1: On	(IU address[0 .. 63]+1)*100+19	R
Allow full control from RC	0: Allow 1: Not allow	(IU address[0 .. 63]+1)*100+20	RW
Allow On/Off from RC	0: Allow 1: Not allow	(IU address[0 .. 63]+1)*100+21	RW
Allow Mode from RC	0: Allow 1: Not allow	(IU address[0 .. 63]+1)*100+22	RW
Allow Setpoint from RC	0: Allow 1: Not allow	(IU address[0 .. 63]+1)*100+23	RW
Thermo Off	0: Thermo Off 1: Thermo On	(IU address[0 .. 63]+1)*100+24	RW
Consumption Yesterday	Wh/kWh	(IU address[0 .. 63]+1)*100+25	RW
Consumption Today	Wh/kWh	(IU address[0 .. 63]+1)*100+27	RW
Consumption Total	Wh/kWh	(IU address[0 .. 63]+1)*100+29	RW
Consumption Yesterday Heat	Wh/kWh	(IU address[0 .. 63]+1)*100+31	RW
Consumption Today Heat	Wh/kWh	(IU address[0 .. 63]+1)*100+33	RW
Consumption Total Heat	Wh/kWh	(IU address[0 .. 63]+1)*100+35	RW

Register name	Possible values	Modbuss address formula	R/W
Consumption Yesterday Cool	Wh/kWh	(IU address[0 .. 63]+1)*100+37	RW
Consumption Today Cool	Wh/kWh	(IU address[0 .. 63]+1)*100+39	RW
Consumption Total Cool	Wh/kWh	(IU address[0 .. 63]+1)*100+41	RW

6.2. Integration into KNX Systems

6.2.1. KNX Signals

The following tables list all available KNX signals for this gateway.



NOTE

Physical Address: The gateway supports (P/S) and (P/I/S) format levels.



NOTICE

Communication object flags:

- **Ri (Read on initialization):** The gateway requests this signal's updated data after an initialization instead of waiting for a change in the signal.
- **R:** The KNX system can read this signal.
- **W:** The KNX system can write this signal.
- **T:** The KNX system receives a telegram when this signal changes its value.
- **U:** This signal's data is updated after a reboot of either the gateway or the bus.

Table 5. Global signals

Object name	Possible values	DPT	Flags
Control_Gateway ES	0: Disable energy saving 1: Enable energy saving	1.003-DPT_Enable (1bit)	W
Status_Gateway ES	0: Disable energy saving 1: Enable energy saving	1.003-DPT_Enable (1bit)	T, R
Status_Gateway error	0: No error 1: Error	1.005-DPT_Alarm (1bit)	T, R
Status_Gateway error code	0: No error X-Error	8.x (2byte)	T, R
On/Off (all units)	0: Off 1: On	1.001-DPT_Switch (1bit)	W
Operating Mode (all units)	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	20.105-DPT_HVACContrMode (1byte)	W
Operating Mode (all units)	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool	5.x (1byte)	W
Fan Speed (all units)	1: Quiet 2: Low 3: Med-Low 4: Med-High 5: High	5.x (1byte)	W
Fan Speed AUTO (all units)	1: Set auto fan 0: Stop auto fan	1.001-DPT_Switch (1bit)	W

Object name	Possible values	DPT	Flags
Temperature Setpoint (all units)	Cool: 19 .. 30°C / 66 .. 86°F Heat: 17 .. 30°C / 63 .. 86°F	9.001-DPT_Value_Temp (2byte)	W
Remote control disablement	0: No disabled 1: Disabled	1.002-DPT_Boolean (1bit)	W

Table 6. Outdoor units signals

Object name	Possible values	DPT	Flags
Control_Capacity save	0 % 1 .. 40 % 41 .. 50 % 51 .. 60 % 61 .. 70 % 71 .. 80 % 81 .. 90 % 91 .. 100 %	5.001-DPT_Scaling (1byte)	W
Status_Capacity save	0 % 1 .. 40 % 41 .. 50 % 51 .. 60 % 61 .. 70 % 71 .. 80 % 81 .. 90 % 91 .. 100 %	5.001-DPT_Scaling (1byte)	R, T
Control_Forced off	0: Not forced 1: Forced off	1.002-DPT_Boolean (1bit)	W
Status_Forced off	0: Not forced 1: Forced off	1.002-DPT_Boolean (1bit)	R, T
Status_Error	0: No error 1: Error	1.005-DPT_Alarm (1bit)	R, T
Status_Error code	0: No error X: Error	8.x (2byte)	R, T

Table 7. Indoor unit signals

Object name	Possible values	DPT	Flags
Status_Exists	0: Not exist 1: Exists	1.001-DPT_Switch (1bit)	R, T
Control_On/Off	0: Off 1: On	1.001-DPT_Switch (1bit)	W
Status_On/Off	0: Off 1: On	1.001-DPT_Switch (1bit)	R, T
Control_Operation mode	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	20.105-DPT_HVACContrMode (1byte)	W
Status_Operation mode	0: Auto 1: Heat 3: Cool 9: Fan 14: Dry	20.105-DPT_HVACContrMode (1byte)	R, T

Object name	Possible values	DPT	Flags
Control_Operation mode	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool	5.x (1byte)	W
Status_Operation mode	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool	5.x (1byte)	R, T
Control_Mode Cool/Heat	0: Cool 1: Heat	1.100-DPT_Heat/Cool (1bit)	W
Status_Mode Cool/Heat	0: Cool 1: Heat	1.100-DPT_Heat/Cool (1bit)	R, T
Control_Heat mode&ON	0 %:Off 1 .. 100 %: On+Heat	5.001-DPT_Scaling (1byte)	W
Control_Cool mode&ON	0 %: Off 1 ..100 %: On+Cool	5.001-DPT_Scaling (1byte)	W
Control_Auto mode	1: Set auto mode	1.001-DPT_Switch (1bit)	W
Status_Auto mode	1: Auto mode active 0: Auto mode not active	1.001-DPT_Switch (1bit)	R, T
Control_Heat mode	1: Set heat mode	1.001-DPT_Switch (1bit)	W
Status_Heat mode	1: Heat mode active 0: Heat mode not active	1.001-DPT_Switch (1bit)	R, T
Control_Cool mode	1: Set cool mode	1.001-DPT_Switch (1bit)	W
Status_Cool mode	1: Cool mode active 0: Cool mode not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan mode	1: Set fan mode	1.001-DPT_Switch (1bit)	W
Status_Fan mode	1: Fan mode active 0: Fan mode not active	1.001-DPT_Switch (1bit)	R, T
Control_Dry mode	1: Set dry mode	1.001-DPT_Switch (1bit)	W
Status_Dry mode	1: Dry mode active 0: Dry mode not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed enumerated	1: Quiet 2: Low 3: Med 4: High	5.010 (DPT_Value_1_Ucount)	W
Status_Fan speed enumerated	1: Quiet 2: Low 3: Med 4: High	5.010 (DPT_Value_1_Ucount)	R, T
Control_Fan speed scaling	Thresholds: 0 .. 37 % 38 .. 62 % 63 .. 87 % 88 .. 100 %	5.001-DPT_Scaling (1byte)	W
Status_Fan speed scaling	Thresholds: 25 % 50 % 75 % 100 %	5.001-DPT_Scaling (1byte)	R, T

Object name	Possible values	DPT	Flags
Control_Fan speed enumerated	1: Quiet 2: Low 3: Med-Low 4: Med-High 5: High	5.010 (DPT_Value_1_Ucount)	W
Status_Fan speed enumerated	Thresholds: 25 % 50 % 75 % 100 %	5.010 (DPT_Value_1_Ucount)	R, T
Control_Fan speed scaling	Thresholds: 0 .. 29 % 30 .. 49 % 50 .. 69 % 70 .. 89 % 90 .. 100 %	5.001-DPT_Scaling (1byte)	W
Status_Fan speed scaling	Thresholds: 20 % 40 % 60 % 80 % 100 %	5.001-DPT_Scaling (1byte)	R, T
Control_Fan speed low	1: Set fan speed low	1.001-DPT_Switch (1bit)	W
Status_Fan speed low	1: Speed low active 0: Speed low not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed med-low	1: Set fan speed med-low	1.001-DPT_Switch (1bit)	W
Status_Fan speed med-low	1: Speed med-low active 0: Speed med-low not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed med	1: Set fan speed med	1.001-DPT_Switch (1bit)	W
Status_Fan speed med	1: Speed med active 0: Speed med not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed med-high	1: Set fan speed med-high	1.001-DPT_Switch (1bit)	W
Status_Fan speed med-high	1: Speed med-high active 0: Speed med-high not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed high	1: Set fan speed high	1.001-DPT_Switch (1bit)	W
Status_Fan speed high	1: Speed high active 0: Speed high not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed quiet	1: Set fan speed quiet	1.001-DPT_Switch (1bit)	W
Status_Fan speed quiet	1: Speed quiet active 0: Speed quiet not active	1.001-DPT_Switch (1bit)	R, T
Control_Fan speed Man/Auto	0: Manual 1: Auto	1.001-DPT_Switch (1bit)	W
Status_Fan speed Man/Auto	0: Manual 1: Auto	1.001-DPT_Switch (1bit)	R, T
Control_Vanes U-D enumerated	1 .. 4: Position 1 .. Position 4	5.010 (DPT_Value_1_Ucount)	W
Status_Vanes U-D enumerated	1 .. 4: Position 1 .. Position 4	5.010 (DPT_Value_1_Ucount)	R, T
Control_Vanes U-D scaling	Thresholds: 0 .. 37 % 38 .. 62 % 63 .. 87 % 88 .. 100 %	5.001-DPT_Scaling (1byte)	W

Object name	Possible values	DPT	Flags
Status_Vanes U-D scaling	Thresholds: 25 % 50 % 75 % 100 %	5.001-DPT_Scaling (1byte)	R, T
Control_Vanes U-D pos-1	1: Set pos-1 vanes U-D	1.001-DPT_Switch (1bit)	W
Status_Vanes U-D pos-1	1: Vanes U-D pos-1 active 0: Vanes U-D pos-1 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes U-D pos-2	1: Set pos-2 vanes U-D	1.001-DPT_Switch (1bit)	W
Status_Vanes U-D pos-2	1: Vanes U-D pos-2 active 0: Vanes U-D pos-2 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes U-D pos-3	1: Set pos-3 vanes U-D	1.001-DPT_Switch (1bit)	W
Status_Vanes U-D pos-3	1: Vanes U-D pos-3 active 0: Vanes U-D pos-3 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes U-D pos-4	1: Set pos-4 vanes U-D	1.001-DPT_Switch (1bit)	W
Status_Vanes U-D pos-4	1: Vanes U-D pos-4 active 0: Vanes U-D pos-4 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes U-D swing	0: Swing off 1: Swing on	1.001-DPT_Switch (1bit)	W
Status_Vanes U-D swing	0: Swing off 1: Swing on	1.001-DPT_Switch (1bit)	R, T
Control_Vanes L-R enumerated	1 .. 5: Position 1 .. Position 5	5.010 (DPT_Value_1_Ucount)	W
Status_Vanes L-R enumerated	1 .. 5: Position 1 .. Position 5	5.010 (DPT_Value_1_Ucount)	R, T
Control_Vanes L-R scaling	Thresholds: 0 .. 29 % 30 .. 49 % 50 .. 69 % 70 .. 89 % 90 .. 100 %	5.001-DPT_Scaling (1byte)	W
Status_Vanes L-R scaling	Thresholds: 20 % 40 % 60 % 80 % 100 %	5.001-DPT_Scaling (1byte)	R, T
Control_Vanes L-R pos-1	1: Set pos-1 vanes L-R	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R pos-1	1: Vanes L-R pos-1 active 0: Vanes L-R pos-1 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes L-R pos-2	1: Set pos-2 vanes L-R	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R pos-2	1: Vanes L-R pos-2 active 0: Vanes L-R pos-2 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes L-R pos-3	1: Set pos-3 vanes L-R	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R pos-3	1: Vanes L-R pos-3 active 0: Vanes L-R pos-3 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes L-R pos-4	1: Set pos-4 vanes L-R	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R pos-4	1: Vanes L-R pos-4 active 0: Vanes L-R pos-4 not active	1.001-DPT_Switch (1bit)	R, T
Control_Vanes L-R pos-5	1: Set pos-5 vanes L-R	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R pos-5	1: Vanes L-R pos-5 active 0: Vanes L-R pos-5 not active	1.001-DPT_Switch (1bit)	R, T

Object name	Possible values	DPT	Flags
Control_Vanes L-R swing	0: Swing off 1: Swing on	1.001-DPT_Switch (1bit)	W
Status_Vanes L-R swing	0: Swing off 1: Swing on	1.001-DPT_Switch (1bit)	R, T
Control_Temperature setpoint	Celsius: 0 .. 63.5°C Fahrenheit: 32 .. 146°F	9.001-DPT_Value_Temp (2byte)	W
Status_Temperature setpoint	Celsius: 0 .. 63.5°C Fahrenheit: 32 .. 146°F	9.001-DPT_Value_Temp (2byte)	R, T
Status_AC Ambient temperature	Celsius: 0 .. 63.5°C Fahrenheit: 32 .. 146°F	9.001-DPT_Value_Temp (2byte)	R, T
Control_KNX ambient temperature	°C / °F	9.001-DPT_Value_Temp (2byte)	W
Status_Unit error	0: No error 1: Error	1.005-DPT_Alarm (1bit)	R, T
Status_Unit error code	0: No Error X: Error	8.x (2 byte)	R, T
Status_Emergency	0: Off 1: On	1.001-DPT_Switch (1bit)	R, T
Status_FilterSign	0: Normal 1: Alarm	1.005-DPT_Alarm (1bit)	R, T
Control_FilterReset	0: No reset 1: Reset	1.015-DPT_Reset (1bit)	W
Control_Remote control disablement (all)	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	W
Status_Remote control disablement (all)	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	R, T
Control_On/Off Remote control disablement	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	W
Status_On/Off Remote control disablement	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	R, T
Control_Mode Remote control disablement	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	W
Status_Mode Remote control disablement	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	R, T
Control_Setpoint Remote control disablement	0: No disabled, 1: Disabled	1.002 DPT_Bool (1bit)	W
Status_Setpoint Remote control disablement	0: No disabled 1: Disabled	1.002 DPT_Bool (1bit)	R, T
Control_Thermostat off	0: Thermostat on 1: Thermostat off	1.001-DPT_Switch (1bit)	W
Status_Thermostat off	0: Thermostat on 1: Thermostat off	1.001-DPT_Switch (1bit)	R, T
Status_Consumption Yesterday	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Today	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Total	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Yesterday_Heat	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Today_Heat	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T

Object name	Possible values	DPT	Flags
Status_Consumption Total_Heat	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Yesterday_Cool	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Today_Cool	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T
Status_Consumption Total_Cool	Wh/KWh	13.010-DPT_ActiveEnergy (Wh) (4byte)	R, T

**NOTE**

The default unit for the consumption signals is Wh, but you can set it in KWh instead. If so, the DPT number changes from 13.010 to 13.013.

6.3. Integration into BACnet Systems



NOTICE

You can see the Protocol Implementation Conformance Statement (PICS) document on

6.3.1. BACnet Objects



NOTICE

This part is common for BACnet MS/TP and BACnet/IP.

Input object types:

- Binary input

Output object types:

- Binary output
- Multistate output
- Analog output

The following tables list all available BACnet objects for this gateway.

Table 8. Global signals

Object name	Possible values	Object type	Object instance
Gateway_ES_C	0: Not used 1: Energy saving	4-Binary Output	0
Gateway_ES_S	0: Not used 1: Energy saving	3-Binary Input	0
Gateway_Error_S	0: Normal 1: Abnormal	3-Binary Input	1
Gateway_ErrorCode_S	1: No error 2: Hardware Comm. Error 3: No Config Error	13-Multistate Input	0
Batch_Operation_C	0: Off 1: On	4-Binary Output	1
Batch_OperationMode_C	1: Cool 2: Heat 3: Fan 4: Dry 5: Auto	14-Multistate Output	0
Batch_Fanspeed_C	1: Low 2: High 3: Med 4: Auto 5: Quiet 6: Med_Low 7: Med_High	14-Multistate Output	1
Batch_SetTemp_C	°C / °F	1-Analog Input	0
Batch_RC_Prohibition_C	1: No disabled 0: Disabled	14-Multistate Output	2

Table 9. Outdoor units signals

Object name	Possible values	Object type	Object instance
OUIX_CapacitySave_C	1: Not set 2: 100% 3: 90% 4: 80% 5: 70% 6: 60% 7: 50% 8: 40%	14-Multistate Output	(OU[0..63]×25) + 10000+0
OUIX_CapacitySave_S	1: Not set 2: 100% 3: 90% 4: 80% 5: 70% 6: 60% 7: 50% 8: 40%	13-Multistate Input	(OU[0..63]×25) + 10000+0
OUIX_ForcedOff_C	0: Reset 1: Set	4-Binary Output	(OU[0..63]×25) + 10000+0
OUIX_ForcedOff_S	0: Reset 1: Set	3-Binary Input	(OU[0..63]×25) + 10000+0
OUIX_LowNoiseOp_C	1: Stop 2: Lev1_Quiet 3: Lev1_Ability 4: Lev2_Quiet 5: Lev2_Ability 6: Lev3_Quiet 7: Lev3_Ability	14-Multistate Output	(OU[0..63]×25) + 10000+1
OUIX_LowNoiseOp_S	1 .. 16 (Consult the AC user manual)	13-Multistate Input	(OU[0..63]×25) + 10000+1
OUIX_Error_S	0: Normal 1: Fault	3-Binary Input	(OU[0..63]×25) + 10000+1
OUIX_ErrorCode_S	1: No error X: Error	13-Multistate Input	(OU[0..63]×25) + 10000+2

Table 10. Indoor unit signals

Object name	Possible values	Object type	Object instance
IUIX_Exists_S	0: Not Exist 1: Exist	3-Binary Input	(U[1..64]×100)+0
IUIX_Operation_C	0: Off 1: On	4-Binary Output	(U[1..64]×100)+0
IUIX_Operation_S	0: Off 1: On	3-Binary Input	(U[1..64]×100)+1
IUIX_OperationMode_C	1: Cool 2: Heat 3: Fan 4: Dry 5: Auto	14-Multistate Output	(U[1..64]×100)+0

Object name	Possible values	Object type	Object instance
IUXX_OperationMode_S	1: Cool 2: Heat 3: Fan 4: Dry 5: Auto	13-Multistate Input	(U[1..64]×100)+0
IUXX_FanSpeed_C	1: Low 2: High 3: Med 4: Auto 5: Quiet 6: Med_Low 7: Med_High	14-Multistate Output	(U[1..64]×100)+1
IUXX_FanSpeed_S	1: Low 2: High 3: Med 4: Auto 5: Quiet 6: Med_Low 7: Med_High	13-Multistate Input	(U[1..64]×100)+1
IUXX_FanSpeed_C	1: Low 2: High 3: Med 4: Auto 5: Quiet	14-Multistate Output	(U[1..64]×100)+1
IUXX_FanSpeed_S	1: Low 2: High 3: Med 4: Auto 5: Quiet	13-Multistate Input	(U[1..64]×100)+1
IUXX_AirFlowDirVT_C	1: Pos1 2: Pos2 3: Pos3 4: Pos4 5: Swing	14-Multistate Output	(U[1..64]×100)+2
IUXX_AirFlowDirVT_S	1: Pos1 2: Pos2 3: Pos3 4: Pos4 5: Swing	13-Multistate Input	(U[1..64]×100)+2
IUXX_AirFlowDirHZ_C	1: Pos1 2: Pos2 3: Pos3 4: Pos4 5: Pos5 6: Swing	14-Multistate Output	(U[1..64]×100)+3
IUXX_AirFlowDirHZ_S	1: Pos1 2: Pos2 3: Pos3 4: Pos4 5: Pos5 6: Swing	13-Multistate Input	(U[1..64]×100)+3

Object name	Possible values	Object type	Object instance
IUXX_SetTemp_C	°C / °F	1-Analog Output	(U[1..64]×100)+0
IUXX_SetTemp_S	°C / °F	0-Analog Input	(U[1..64]×100)+0
IUXX_SpaceTemp_S	°C / °F	0-Analog Input	(U[1..64]×100)+1
IUXX_RC_Prohibit_C	1 .. 65 (Consult the AC user manual)	14-Multistate Output	(U[1..64]×100)+4
IUXX_RC_Prohibit_S	1 .. 65 (Consult the AC user manual)	13-Multistate Input	(U[1..64]×100)+4
IUXX_ThermostatOFF_C	0: Reset 1: Set	4-Binary Output	(U[1..64]×100)+1
IUXX_ThermostatOFF_S	0: Reset 1: Set	3-Binary Input	(U[1..64]×100)+2
IUXX_Reset_Filter_C	0: No Reset 1: Reset	4-Binary Output	(U[1..64]×100)+2
IUXX_FilterSign_S	0: No Sign 1: Sign	3-Binary Input	(U[1..64]×100)+3
IUXX_Emergency_S	0: Normal 1: Stop	3-Binary Input	(U[1..64]×100)+4
IUXX_Error_S	0: Normal 1: Fault	3-Binary Input	(U[1..64]×100)+5
IUXX_ErrorCode_S	1: No Error, X: Error	13-Multistate Input	(U[1..64]×100)+5
IUXX_TempLimValid_C	0: Invalid 1: Valid	4-Binary Output	(U[1..64]×100)+3
IUXX_TempLimValid_S	0: Invalid 1: Valid	3-Binary Input	(U[1..64]×100)+6
IUXX_AutoTempLoLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+1
IUXX_AutoTempLoLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+2
IUXX_AutoTempHiLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+2
IUXX_AutoTempHiLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+3
IUXX_CoolTempLoLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+3
IUXX_CoolTempLoLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+4
IUXX_CoolTempHiLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+4
IUXX_CoolTempHiLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+5
IUXX_HeatTempLoLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+5
IUXX_HeatTempLoLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+6
IUXX_HeatTempHiLim_C	°C / °F	1-Analog Output	(U[1..64]×100)+6
IUXX_HeatTempHiLim_S	°C / °F	0-Analog Input	(U[1..64]×100)+7
IUXX_Managed_Mode_S	1: None 2: Master 3: Slave 4: External	13-Multistate Input	(U[1..64]×100)+6
IUXX_Consumption Yesterday	Wh/kWh	0-Analog Input	(U[1..64]×100)+8
IUXX_Consumption Today	Wh/kWh	0-Analog Input	(U[1..64]×100)+9
IUXX_Consumption Total	Wh/kWh	0-Analog Input	(U[1..64]×100)+10
IUXX_Consumption Yesterday Heat	Wh/kWh	0-Analog Input	(U[1..64]×100)+11
IUXX_Consumption Today Heat	Wh/kWh	0-Analog Input	(U[1..64]×100)+12
IUXX_Consumption Total Heat	Wh/kWh	0-Analog Input	(U[1..64]×100)+13

Object name	Possible values	Object type	Object instance
IUXX_Consumption Yesterday Cool	Wh/KWh	0-Analog Input	(U[1..64]×100) +14
IUXX_Consumption Today Cool	Wh/KWh	0-Analog Input	(U[1..64]×100) +15
IUXX_Consumption Total Cool	Wh/KWh	0-Analog Input	(U[1..64]×100) +16

6.4. Integration into Home Automation Systems

6.4.1. Home Automation Signals

The following tables list all available Home Automation signals for this gateway.



NOTE

- **SET:** Command used to control the indoor unit. It is sent by the client.
- **CHN:** Command used to get notifications of changes in the status of a specific function of the gateway. It is sent spontaneously by the gateway itself.
- **GET:** Command used to get the status of a specific function. It is sent by the client.

To know more about the Home Automation protocol, see the [Protocol Specifications Manual](#).

Table 11. Indoor units signals

Name	Possible values	acNum ¹	Commands supported
On/Off	ON OFF	See the note below	SET/CHN/GET
Operation Mode	HEAT COOL FAN DRY AUTO		SET/CHN/GET
Fan Speed	1 2 3 4 5 AUTO		SET/CHN/GET
Vane Position UD	1 2 3 4 SWING		SET/CHN/GET
Vane Position L-R	1 2 3 4 5 SWING		SET/CHN/GET
Temperature Setpoint (x10)	°C / °F		SET/CHN/GET
AC Ambient Temperature (x10)	°C / °F		CHN/GET
Unit Error code	0: No Error X: Error		CHN/GET
Error IU	OK ERR		CHN/GET
Outdoor unit error code	0-No Error X-Error		CHN/GET
Error OU	OK ERR		CHN/GET

**NOTE**

¹ This index must be set according to the Unit ID Index.

For outdoor units, the acNum value must be the same as the minimum indoor unit associated in the CONFIGURATION section.

7. Late Configuration: Change the Gateway's Protocol

Reconfiguring the gateway with a different protocol is very easy:

1. Connect the gateway to the PC and open the configuration tool Intesis MAPS.
2. Select the new template you need.
3. Click **Next** or double-click the template in the list.
4. A message will pop up, asking if you want to save the project currently loaded in the gateway.
5. Click **Yes** or **No**, depending on your needs.
6. Configure the needed parameters and signals for your new project.
7. Send the configuration to the gateway.



NOTE

For a complete gateway configuration guide, please refer to the [Intesis MAPS Configuration Guide for IN775FGL00xO000](#).

8. Error Codes



NOTE

These error codes are the same for all applications.

BACnet value	Modbus/KNX/Home automation value	Error code	Description
18	17	12	Remote controller communication error
19	18	13	Communication error between Outdoor unit
20	19	14	Network communication error
21	20	15	Scan error
22	21	16	Peripheral device communication error
23	22	17	Electricity charge apportionment error
33	32	21	Initial setting error
38	37	26	Address setting error
39	38	27	Master unit, slave unit set-up error
40	39	28	Other setting error
41	40	29	Connection unit number error in wired remote controller system
49	48	31	Indoor unit power supply abnormal
50	49	32	Indoor unit main PCB error
53	52	35	Manual auto switch error
55	54	37	Indoor unit transmission PCB error
56	55	38	Network convertor PCB error
58	57	3A	Indoor unit communication circuit (wired remote controller) error
65	64	41	Room temp. sensor error
66	65	42	Indoor unit Heat Ex. sensor error
81	80	51	Indoor unit fan motor1 error
82	81	52	Indoor unit coil (Expansion Valve) error
83	82	53	Water Drain Abnormal
95	94	5U	Indoor unit error
97	96	61	Outdoor unit power supply abnormal
98	97	62	Outdoor unit main PCB error
99	98	63	Inverter PCB error
103	102	67	Short interruption detection protected operation
104	103	68	Magnetic relay error
105	104	69	Outdoor unit transmission PCB error
113	112	71	Discharge Temp Sensor Error
114	113	72	Compressor Temp Sensor Error
115	114	73	Outdoor unit Heat Ex. sensor error
116	115	74	Outdoor Temp Sensor Error
117	116	75	Suction Gas Temp Sensor Error
119	118	77	Heat sink temp. sensor error
130	129	82	Sub-cool Heat Ex. gas temp. sensor error
131	130	83	Liquid pipe temp. sensor error
132	131	84	Current sensor error
134	133	86	Pressure sensor error
146	145	92	Compressor 2 error

BACnet value	Modbus/KNX/Home automation value	Error code	Description
147	146	93	Compressor start up error
148	147	94	Trip detection
149	148	95	Compressor motor control error
151	150	97	Outdoor unit fan motor 1 error
152	151	98	Outdoor unit fan motor 2 error
153	152	99	4-way valve error
154	153	9A	Outdoor unit coil (Expansion Valve) error
159	158	9U	Outdoor unit error
161	160	A1	Discharge temperature 1 abnormal
162	161	A2	Discharge temperature 2 abnormal
163	162	A3	Compressor temperature abnormal
164	163	A4	Pressure abnormal 1
165	164	A5	Pressure abnormal 2
166	165	A6	Outdoor heat exchanger temperature abnormal
170	169	AA	Special operation error
171	170	AC	Ambient temperature abnormal
177	176	C1	Main PCB error
178	177	C2	Transmission PCB error
179	178	C3	PCB 1 error
180	179	C4	PCB 2 error
181	180	C5	PCB 3 error
182	181	C6	PCB 4 error
183	182	C7	PCB 5 error
184	183	C8	Input device error
185	184	C9	Display device error
186	185	CA	EEPROM error
187	186	CC	Sensor error
188	187	CF	External connector error (USB memory)
189	188	CJ	Other parts error
209	208	J1	RB unit error

**IMPORTANT**

These error codes may differ depending on the specific AC unit model.

**NOTE**

If you detect a non-listed error code, please contact Fujitsu technical support.