

User Manual

Revision 1.000
English

EnOcean / BACnet Slave - Converter

(Order Code: HD67C56-IP-B2, HD67C56-MSTP-B2)

For Website information:

www.adfweb.com?Product=HD67C56-B2

For Price information:

www.adfweb.com?Price=HD67C56-IP-B2

www.adfweb.com?Price=HD67C56-MSTP-B2

Benefits and Main Features:

- ⊕ Very easy to configure
- ⊕ Power Supply 18...35V DC and 8...24 V AC
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



For others EnOcean products, see also the following links:

Converter EnOcean to

- www.adfweb.com?Product=HD67C50
- www.adfweb.com?Product=HD67C52
- www.adfweb.com?Product=HD67C54
- www.adfweb.com?Product=HD67C57
- www.adfweb.com?Product=HD67C58
- www.adfweb.com?Product=HD67C61
- www.adfweb.com?Product=HD67C63
- www.adfweb.com?Product=HD67C65
- www.adfweb.com?Product=HD67C66
- www.adfweb.com?Product=HD67C67
- www.adfweb.com?Product=HD67C70
- www.adfweb.com?Product=HD67C72
- www.adfweb.com?Product=HD67C73
- www.adfweb.com?Product=HD67C75
- www.adfweb.com?Product=HD67C77
- www.adfweb.com?Product=HD67C79

- (Serial)
- (Modbus Slave)
- (Modbus TCP Slave)
- (CAN)
- (CANopen)
- (DeviceNet Slave)
- (EtherNet/IP Slave)
- (IEC61850 Server)
- (J1939)
- (KNX)
- (MQTT)
- (NMEA 0183)
- (NMEA 2000)
- (PROFIBUS Slave)
- (PROFINET Slave)
- (SNMP Agent)

Do you need to choose a device? Do you want help?

www.adfweb.com?Cmd=helpme



User Manual

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	7
CONFIGURATION	7
POWER SUPPLY	8
FUNCTION MODES	9
LEDS	10
ETHERNET	11
ENOCEAN	12
RS485 (FOR BACNET MS/TP)	13
USE OF COMPOSITOR SW67C56	14
NEW CONFIGURATION / OPEN CONFIGURATION	15
SOFTWARE OPTIONS	16
SET COMMUNICATION	18
ENOCEAN ACCESS	20
SET BACNET ACCESS	23
BACNET EDE FILE	24
UPDATE DEVICE	25
MECHANICAL DIMENSIONS	27
ORDERING INFORMATIONS	28
ACCESSORIES	28
DISCLAIMER	29
OTHER REGULATIONS AND STANDARDS	29
WARRANTIES AND TECHNICAL SUPPORT	30
RETURN POLICY	30

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✚ Updated
- ✚ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	05/12/2019	Ff	All	First release version

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning. ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLE OF CONNECTION:

EnOcean / BACnet - Converter
HD67C56-IP-B2 and HD67C56-MSTP-B2

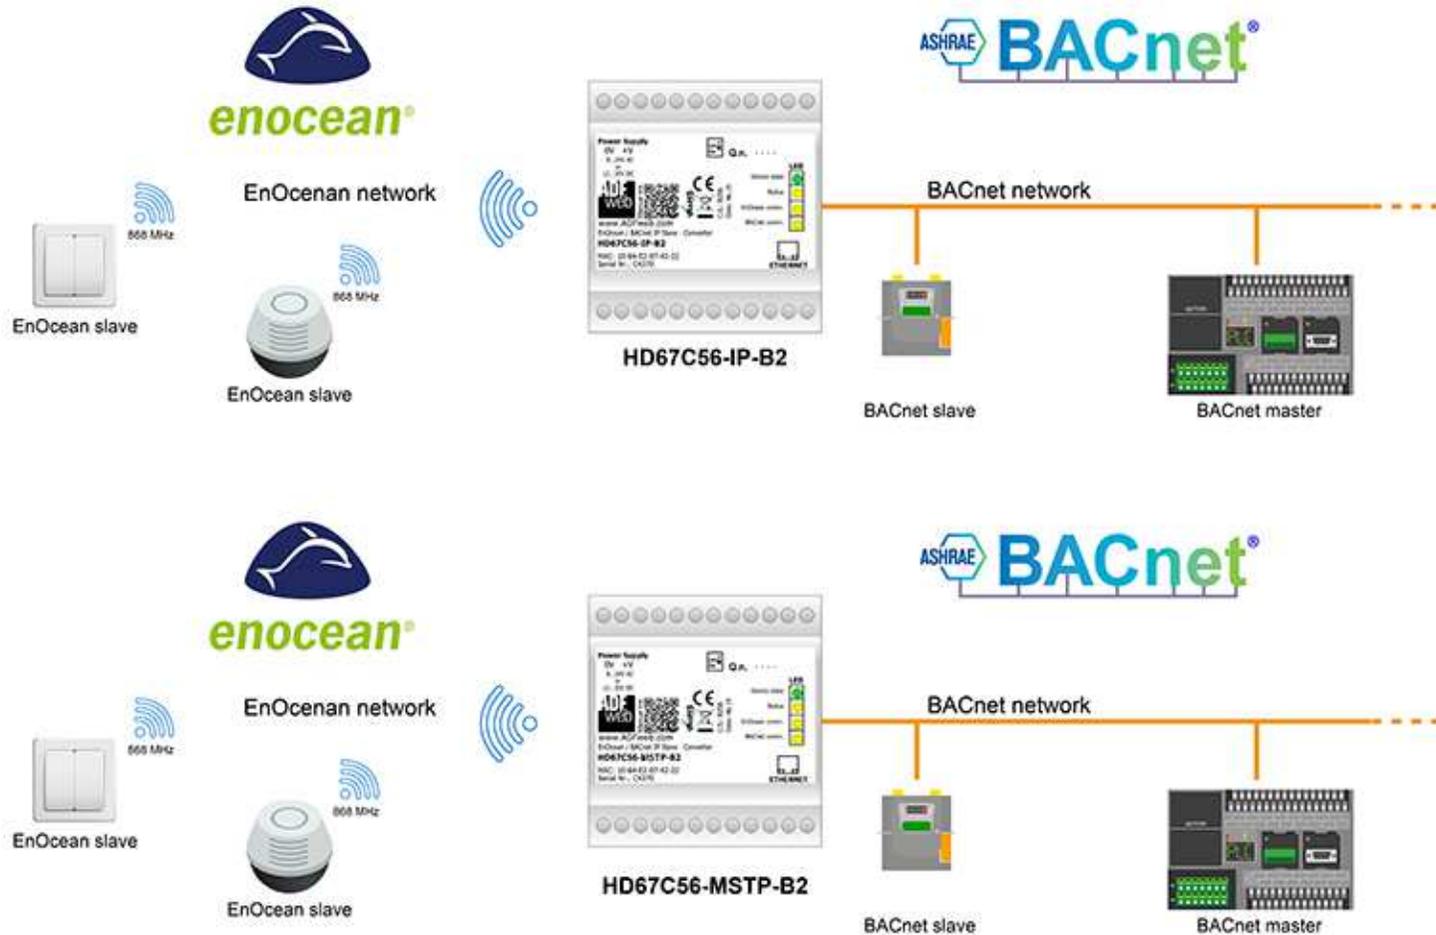

ADFweb.com



+39 0438 309 131



+39 349 440 9592



support@adfweb.com

CONNECTION SCHEME:

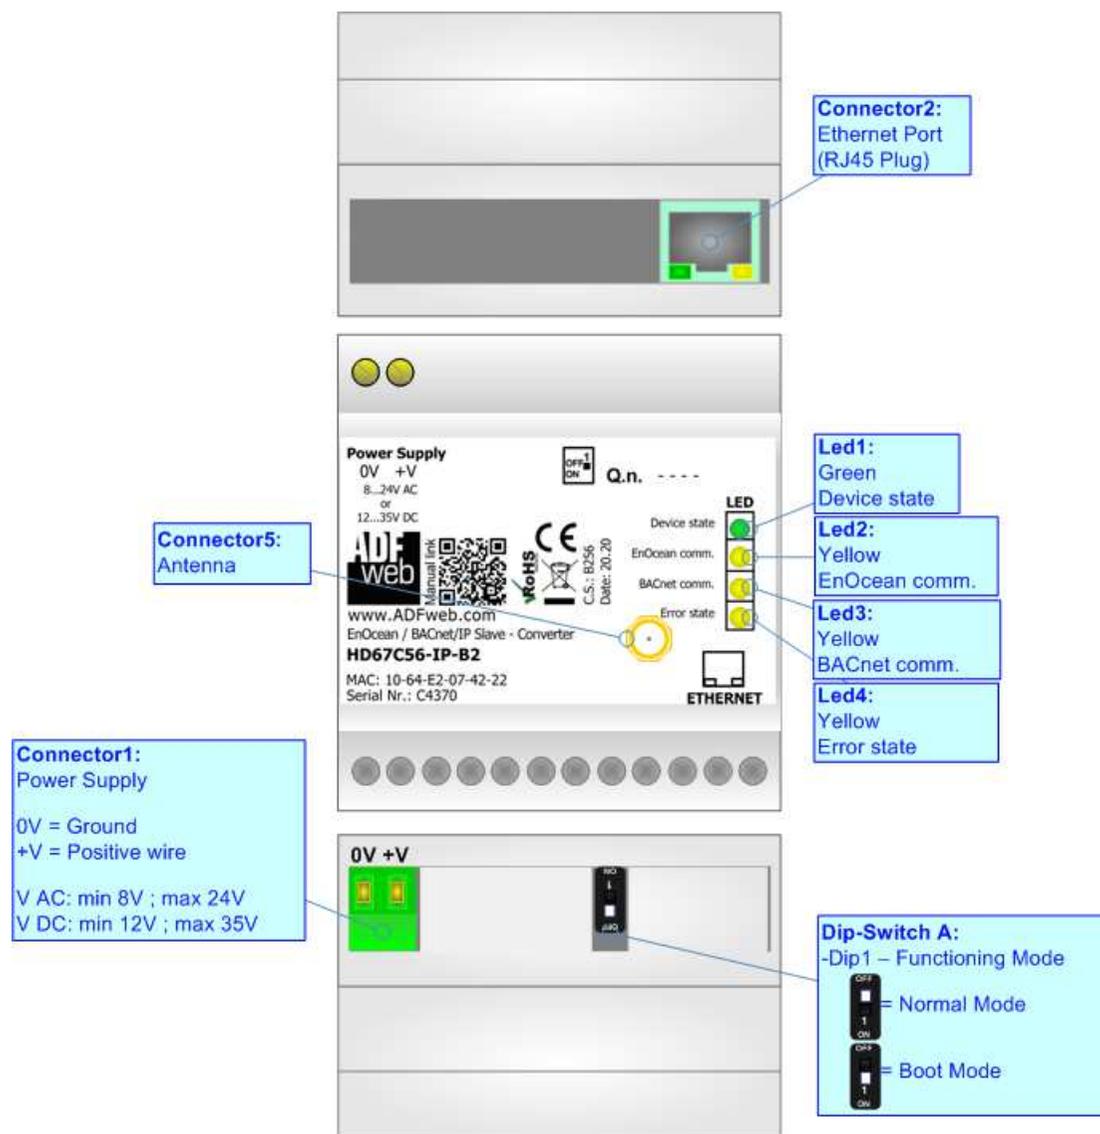


Figure 1a: Connection scheme for HD67C56-IP-B2

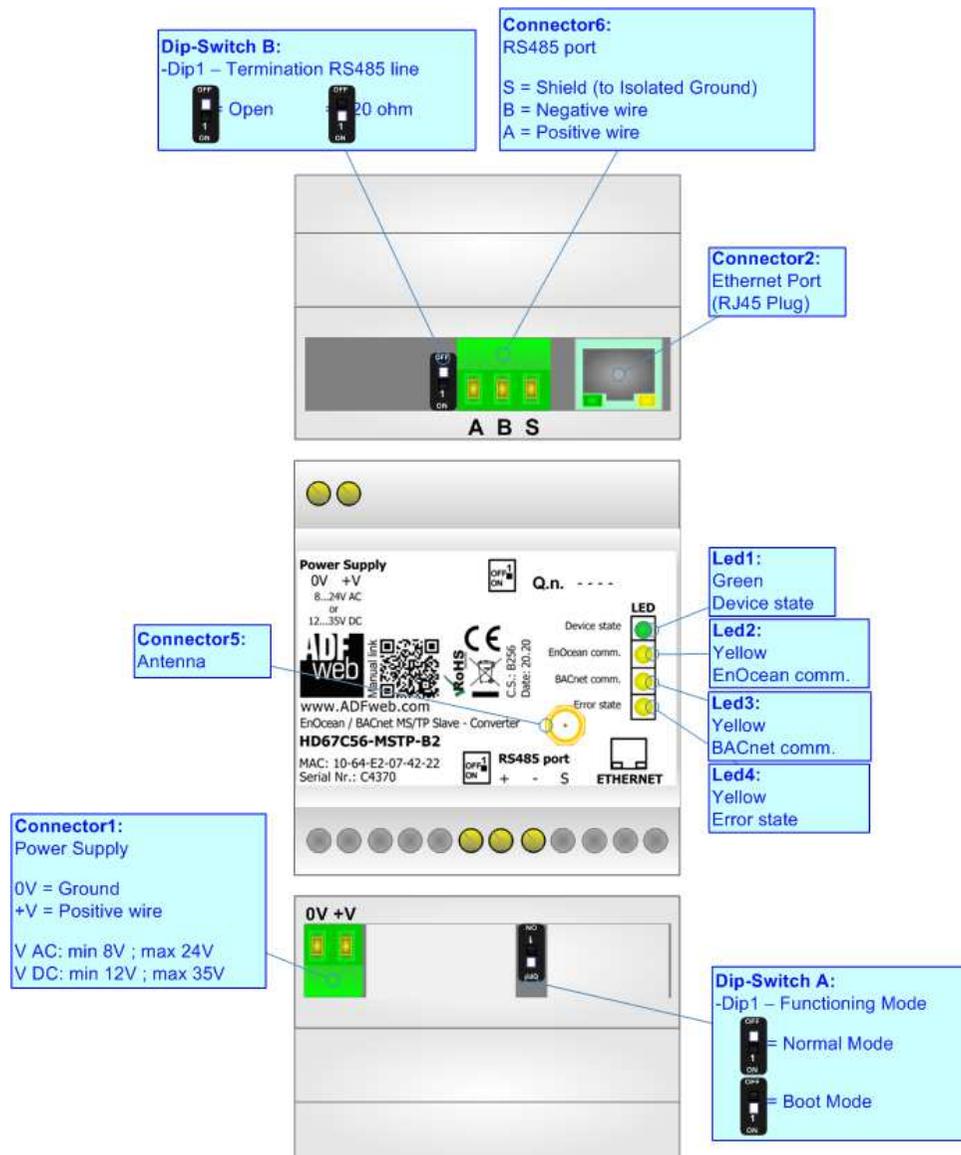


Figure 1b: Connection scheme for HD67C56-MSTP-B2

CHARACTERISTICS:

The HD67C56-B2 is a EnOcean / BACnet Slave Converter.

It allows the following characteristics:

- Electrical isolation between BACnet and Power Supply;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 18...35V DC and 8...24V AC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].

CONFIGURATION:

You need Compositor SW67C56 software on your PC in order to perform the following:

- Define the parameter of BACnet line;
- Define the parameter of EnOcean line;
- Define the list of BACnet objects accessible by the BACnet Master;
- Update the device.


POWER SUPPLY:

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.


VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V

Consumption at 24V DC:

Device	Consumption [W/VA]
HD67C56-xxxx-B2	3.5

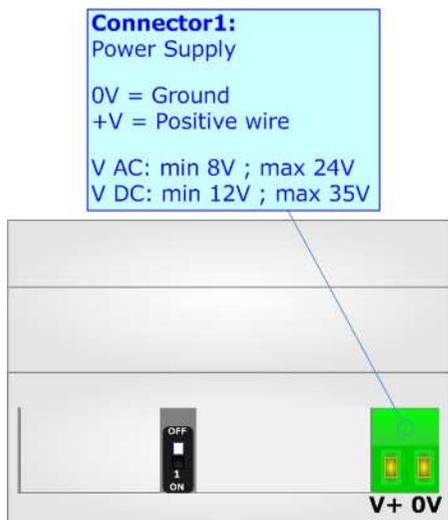

Caution: Not reverse the polarity power

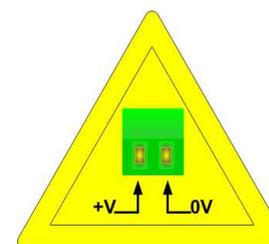

HD67C56-xxxx-B2


FUNCTION MODES:

The device has got two functions mode depending of the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for upload the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.


According to the functioning mode, the LEDs will have specifics functions, see 'LEDS' section.

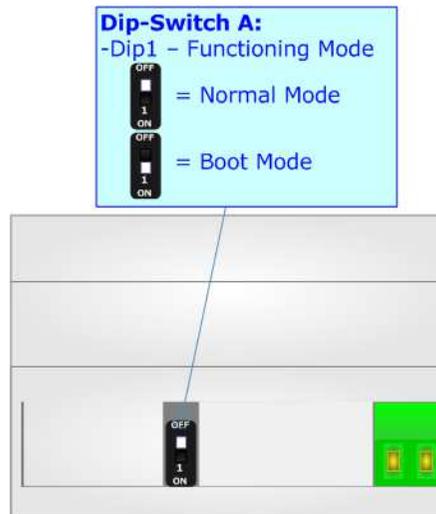

LEDS:

The device has got four LEDs that are used to give information of the functioning status. The various meanings of the LEDs are described in the table below.


LED	Normal Mode	Boot Mode
1: Device State (green)	Blinks slowly (~1Hz)	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
2: EnOcean communication (yellow)	Blinks when EnOcean data is received	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
3: BACnet communication (yellow)	Blinks when a BACnet request is received	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
4: Error state (yellow)	ON: An error in the communication busses occurs OFF: No errors are present	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress

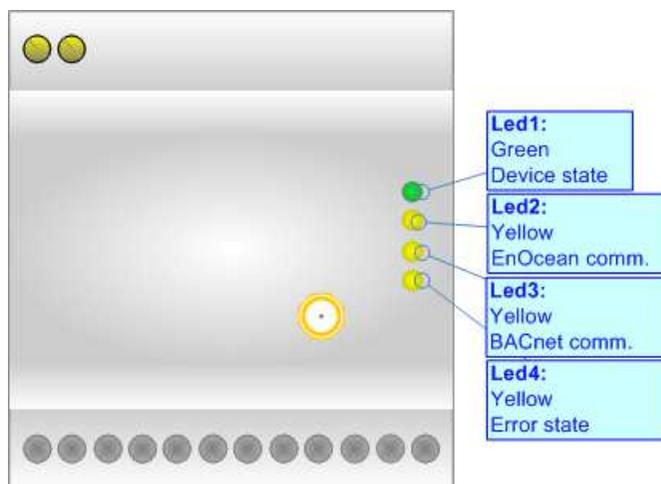

ETHERNET:

The Ethernet port is used for programming the device and for BACnet/IP communication.

The Ethernet connection must be made using Connector2 of HD67C77-B2 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC is recommended the use of a cross cable.

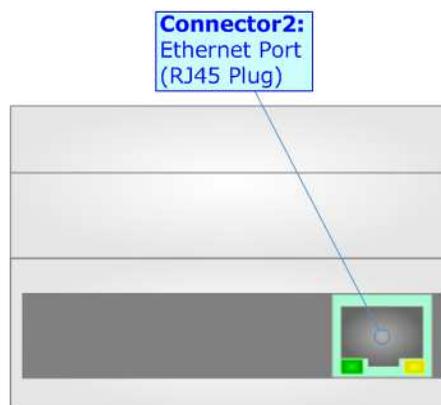

ENOCEAN:


EnOcean is a protocol designed for energy harvesting devices communication. The main fields of application are building automation and domotics, but it can also be potentially used in the industrial field.

EnOcean products include solutions for environment monitoring, smart metering and lighting. Each device uses a unique ID for identification and one of the standardized profiles (EEPs) for data transmission. Communication process may be secure or unsecure and may be unidirectional or bidirectional (for devices that support Smart Acknowledge operating mode).

EnOcean is based on wireless communication on 868.3 MHz ASK.


It is possible to connect up to 100 EnOcean devices to a single converter, where up to 32 can be in Secure Mode and up to 19 with Smart Acknowledge.

The Antenna connector is a SMA Female ('Female Outer Shell' and 'Female Receptacle') so the Antenna must have a SMA Male connector.

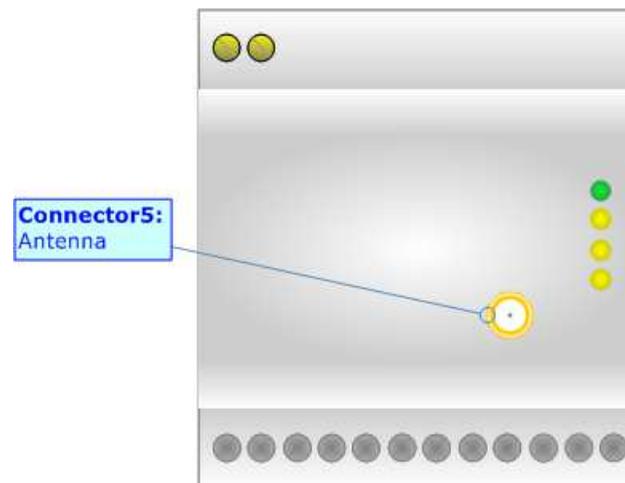

RS485 (for BACnet MS/TP):

For terminating the RS485 line with a 120Ω resistor it is necessary to put ON dip 1, like in figure.

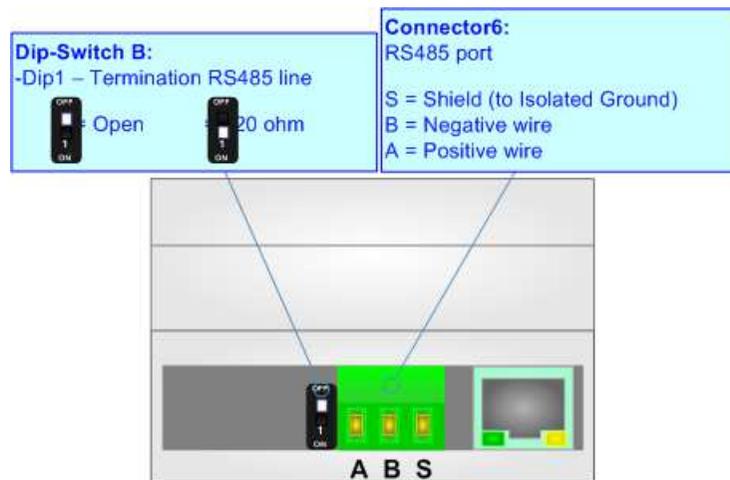

The maximum length of the cable should be 1200m (4000 feet).

Here some codes of cables:

- Belden: p/n 8132 - 2x 28AWG stranded twisted pairs conductor + foil shield + braid shield;
- Belden p/n 82842 - 2x 24AWG stranded twisted pairs conductor + foil shield + braid shield;
- Tasker: p/n C521 - 1x 24AWG twisted pair conductor + foil shield + braid shield;
- Tasker: p/n C522 - 2x 24AWG twisted pairs conductor + foil shield + braid shield.

USE OF COMPOSITOR SW67C56:

To configure the Converter, use the available software that runs with Windows called SW67C56. It is downloadable on the site www.adfweb.com and its operation is described in this document. The software works with MS Windows (XP, Vista, Seven, 8, 10; 32/64bit).

When launching the SW67C56, the window below appears (Fig. 2).



Note:

It is necessary to have installed .Net Framework 4.


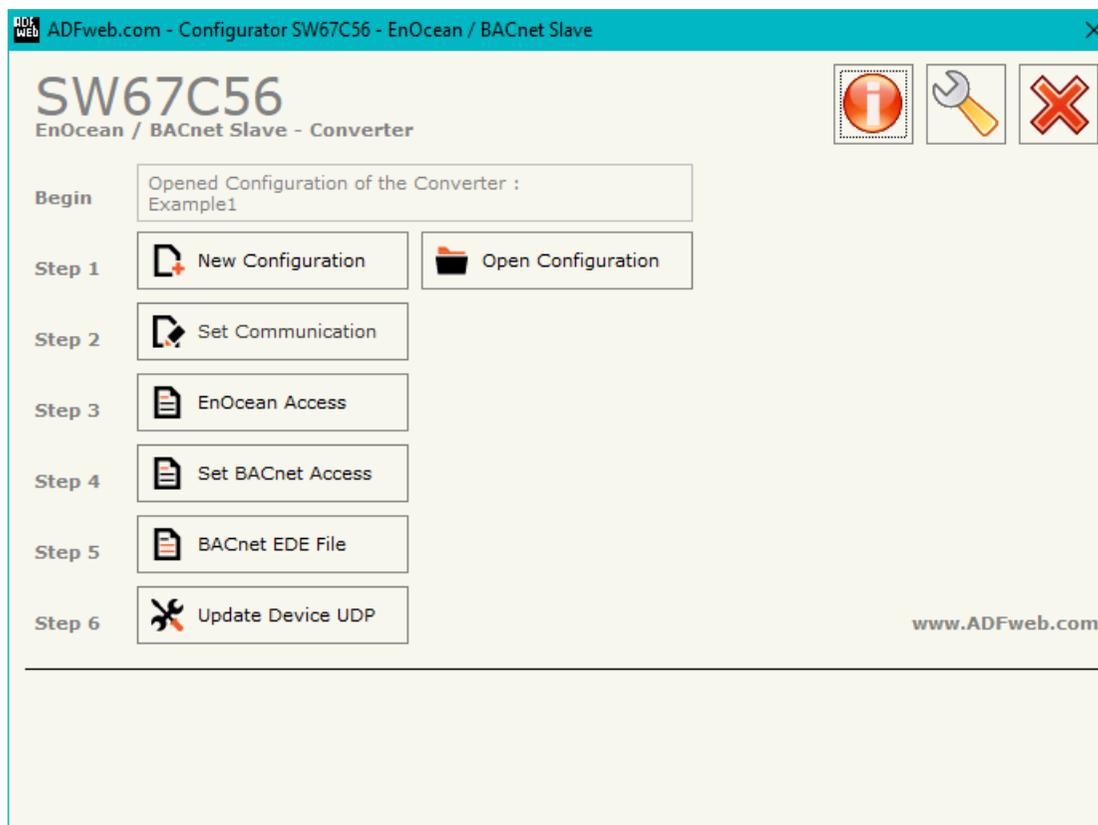


Figure 2: Main window for SW67C56


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

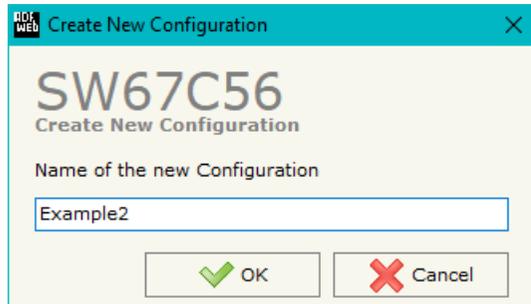

A device’s configuration can also be imported or exported:


- To clone the configurations of a Programmable “EnOcean / BACnet Slave - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

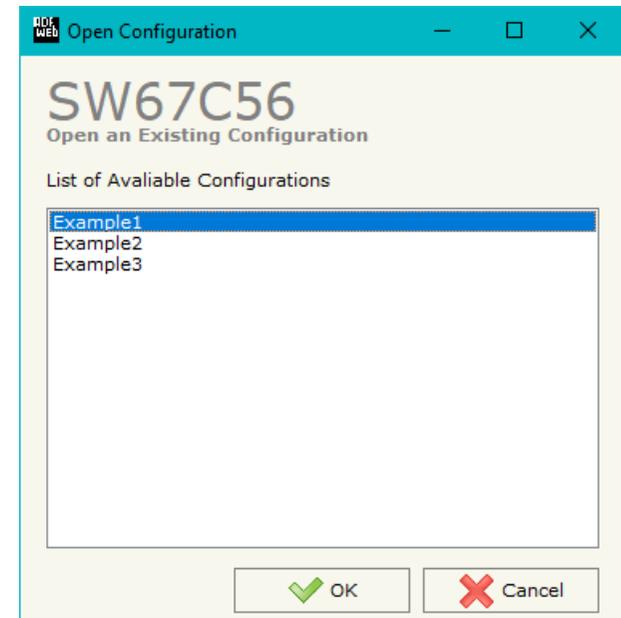


SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

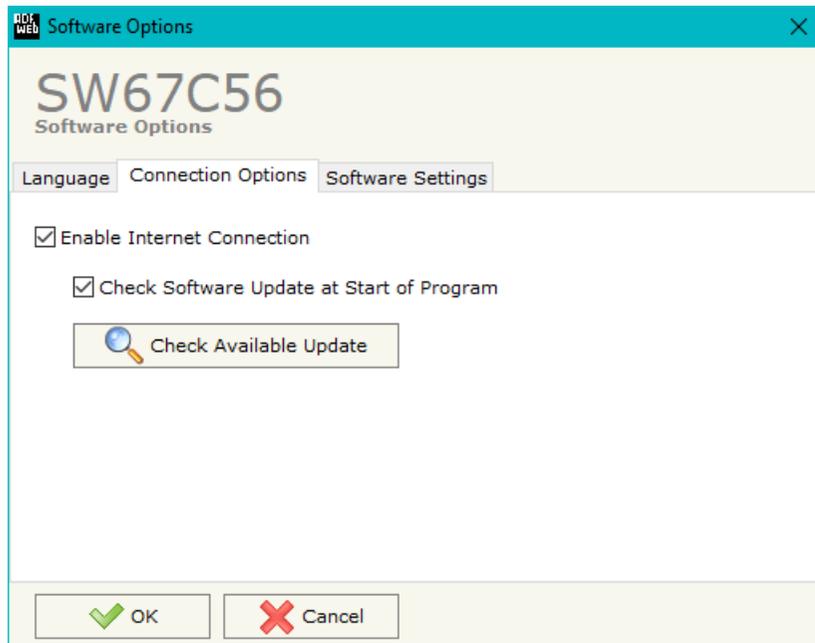

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67C56 check automatically if there are updatings when it is launched.

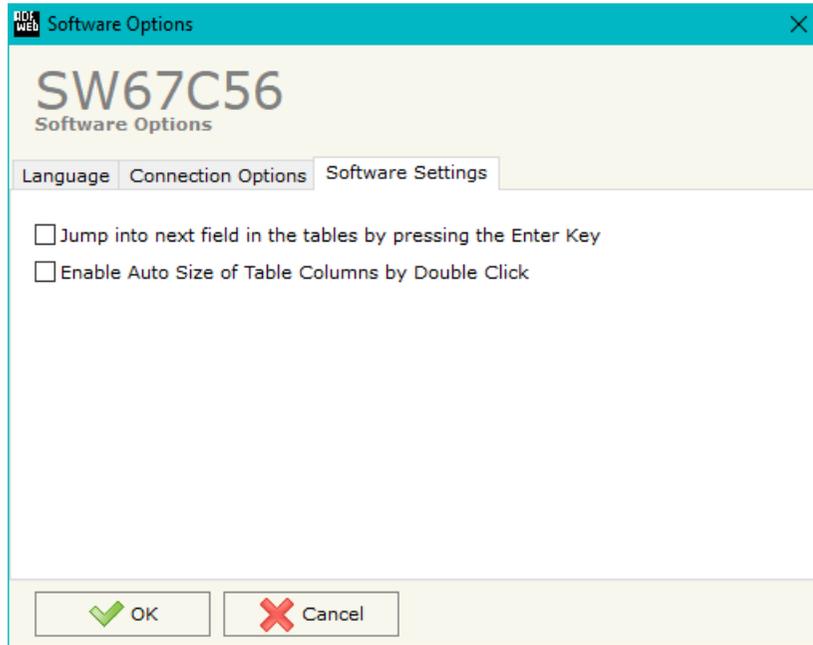

In the section "Software Settings", it is possible to enable/disable some keyboard's commands for an easier navigation inside the tables contained in the different sections of the software.

SET COMMUNICATION:

By Pressing the "**Set Communication**" button from the main window for SW67C56 (Fig. 2) the window "Set Communication" appears (Fig. 3).

In the section "BACnet Slave" is possible to select the type of BACnet to use from:

- BACnet/IP (uses Ethernet);
- BACnet MS/TP (uses RS485).

If selected "BACnet/IP" the means of the fields for "BACnet" are:

- In the fields "**IP ADDRESS**" the IP address of BACnet/IP side of the converter is defined;
- In the fields "**SUBNET Mask**" the SubNet Mask of BACnet/IP side of the converter is defined;
- In the fields "**GATEWAY**" the default gateway of the network is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**Port**" the port used for BACnet communication is defined. The default port used for BACnet communication is 47808, but is possible to insert any value;
- In the field "**BACnet Device Name**" the name of BACnet/IP side of the converter is defined;
- In the field "**Device Identifier**" the ID of BACnet/IP side of the converter is defined;
- If the field "**BACnet description up to 32 chars**" is checked, the description of the BACnet objects can be up to 32 chars.

The screenshot shows a web-based configuration window titled "Set Communication" for device "SW67C56". The window is divided into sections. The top section is "1. BACnet Slave". Under this section, there are several fields for configuration:

- Type:** A dropdown menu set to "BACnet/IP".
- IP Address:** Four input boxes containing "192", ".168", ".0", and ".5".
- SubNet Mask:** Four input boxes containing "255", ".255", ".255", and ".0".
- Gateway:** A checkbox (unchecked) followed by four input boxes containing "192", ".168", ".0", and ".1".
- Port:** An input box containing "47808".
- BACnet Device Name:** An input box containing "devicename1".
- Device Identifier:** An input box containing "1".
- BACnet description up to 32 chars:** A checkbox (unchecked).

At the bottom of the window, there are two buttons: "OK" (with a green checkmark icon) and "Cancel" (with a red X icon).

Figure 3a: "Set Communication" window

If selected "BACnet MS/TP", the means of the fields for "BACnet" are:

- In the field "**Baudrate**" the data rate of the BACnet line is defined;
- In the field "**Parity**" the parity of the line is defined;
- In the field "**BACnet Device Name**" the name to give to the BACnet node is defined;
- In the field "**MAC Address**" the MAC of BACnet node (from 0 to 254) is defined;
- The field "**Max Master**" specifies the highest allowable address for master nodes. The value shall be less than or equal to 127;
- The field "**Max Info Frames**" specifies the maximum number of information frames the node may send before it must pass the token;
- In the field "**Device Instance**" the of the BACnet MS/TP side of the converter is defined;
- In the field "**Network**" the BACnet MS/TP network number is defined;
- If the field "**BACnet description up to 32 chars**" is checked, the description of the BACnet objects can be up to 32 chars.

The means of the fields for the "Ethernet Update" section are:

- In the fields "**IP ADDRESS**" the IP address of the converter is defined;
- In the fields "**SUBNET Mask**" the SubNet Mask of the converter is defined;
- In the fields "**GATEWAY**" the default gateway of the network is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net.

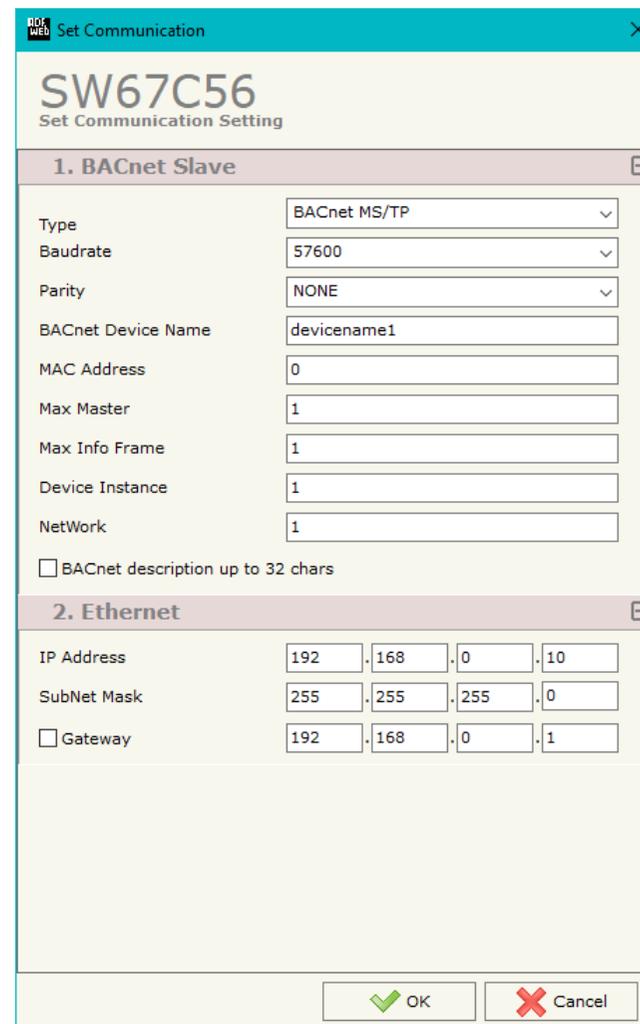


Figure 3b: "Set Communication" window

ENOCEAN ACCESS:

By Pressing the “**EnOcean Set Access**” button from the main window for SW67C56 (Fig. 2) the window “EnOcean Set Access” appears (Fig. 4). This section is used to define the list of the EnOcean devices to read/write.

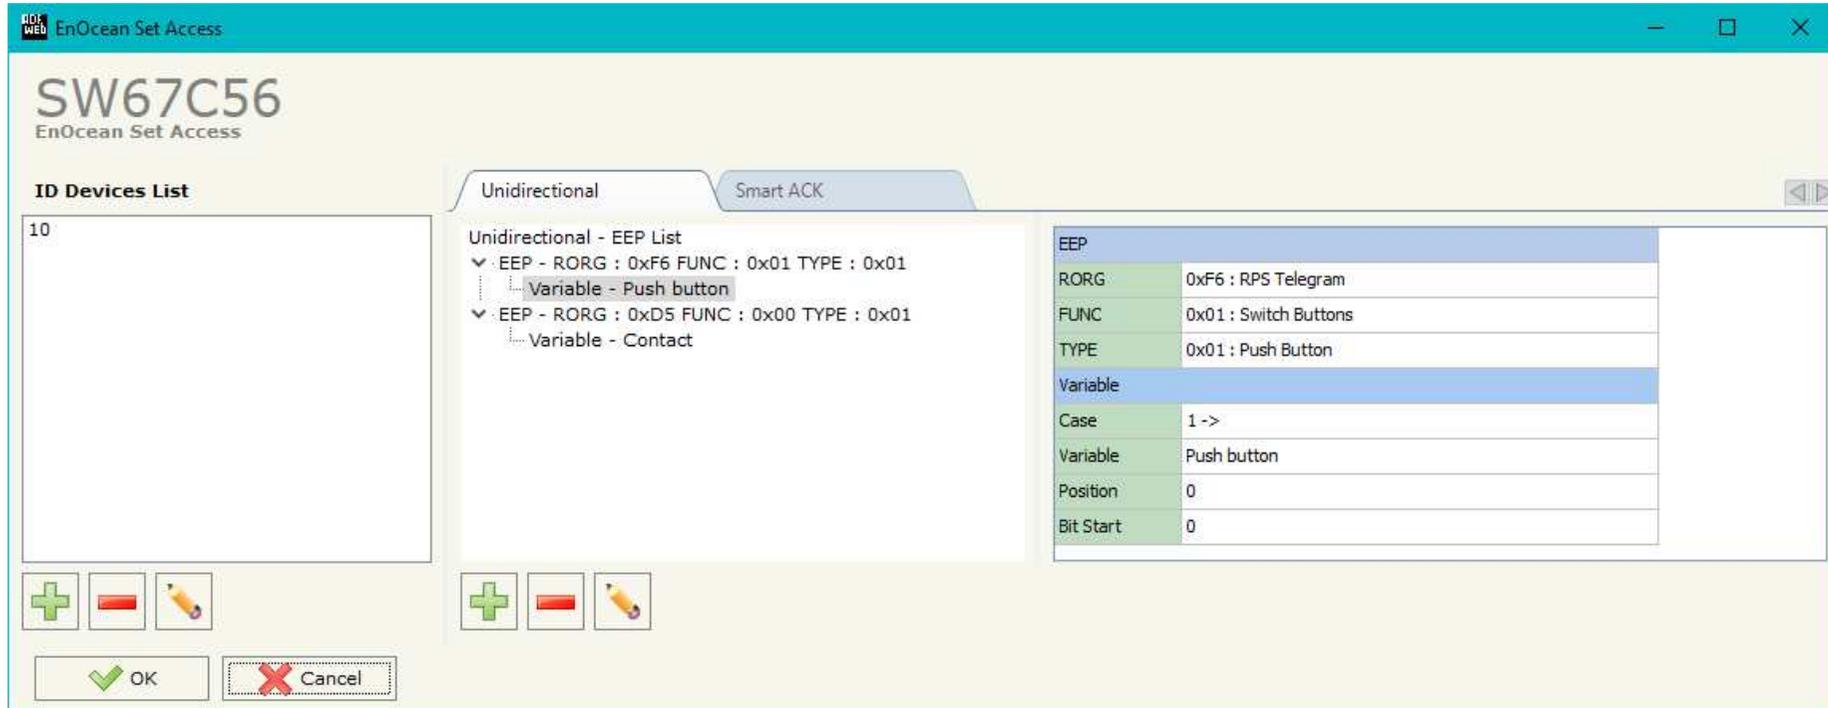


Figure 4: “EnOcean Access” window

By clicking on “+” or “**Modify**” under “ID Devices List”, it is possible to add/modify a new EnOcean device inserting its characteristics. The window “Add/Modify EnOcean device” appears (Fig. 5).

The means of the fields are:

- In the field “**Device ID**” the ID of the EnOcean device is defined;
- In the field “**Secure Type**” the type of EnOcean communication is defined;
- In the field “**Key**” the key used for encryption of frames in Secure Mode is defined;
- In the field “**Rolling Code**” the Rolling Code for the EnOcean communication is defined;
- In the field “**Rolling Code Algorithm**” the type of Rolling Code is defined;
- In the field “**Rolling Code Tx**” the transmission of the Rolling Code is enabled/disabled;
- In the field “**CMAC Algorithm**” the MAC field at the end of the EnOcean frame is defined;
- In the field “**Data Encrypted**” the encryption of the data is enabled/disabled;
- In the field “**PTM**” the type of EnOcean device is defined.



The screenshot shows a web-based configuration window titled "Add EnOcean Device" for device "SW67C56". The window contains the following fields and options:

Field Name	Value / Option
Device ID	[Empty text box]
Secure Type	Secure with Manual Setting
Key	[Empty text box]
Rolling Code	[Empty text box]
Rolling Code Algorithm	No RLC algorithm
Rolling Code Tx	No
CMAC Algorithm	No MAC
Data Encrypted	No data encryption
PTM	No PTM

At the bottom of the window, there are two buttons: "OK" (with a green checkmark icon) and "Cancel" (with a red X icon).

Figure 5: "Add/Modify EnOcean device" window

By clicking on "+" or **Modify**, it is possible to add/modify a new variable for the selected ID. The window "Add/Modify EnOcean variable" appears (Fig. 6).

The means of the EEP fields are:

- In the field **Rorg** the type of EnOcean telegram is defined;
- In the field **Func** the type of EnOcean instance is defined;
- In the field **Type** the type of event is defined.

The means of the Variable fields are:

- In the field **Case** the format of the EnOcean telegram is defined;
- In the field **Variable** the variable to read/write is defined;
- In the field **Position** the starting byte of the internal array where mapping/taking the variable is defined;
- In the field **Bit Start** the starting bit of the defined Position where mapping/taking the variable is defined.

The screenshot shows a web-based configuration window titled "Add EnOcean Variable" for device "SW67C56". The window is divided into two main sections: "EEP" and "Variable".

EEP Section:

- Rorg:** 0xF6 : RPS Telegram
- Func:** 0x01 : Switch Buttons
- Type:** 0x01 : Push Button

Variable Section:

- Case:** 1 ->
- Variable:** Push button : 3, 1
- Position:** 0
- Bit Start:** 0

At the bottom of the window, there are two buttons: "OK" (with a green checkmark icon) and "Cancel" (with a red X icon).

Figure 6: "Add/Modify EnOcean variable" window

SET BACNET ACCESS:

By Pressing the “**Set BACnet Access**” button from the main window for SW67C56 (Fig. 2) the window “BACnet Set Access” appears (Fig. 7).

The window is divided in two parts, the “**BACnet in Read**” that contains the BACnet objects readable by a BACnet Master (EnOcean data read); and “**BACnet in Write**” that contains the BACnet objects writeable by a BACnet Master (EnOcean data written).

The meaning of the fields in the window are the follows:

- In the field “**Data Type**” is possible to select the BACnet object data type;
- In the field “**Eng. Unit**”, with double click the window “*Select the BACnet Engineering Unit*” appears (Fig. 8);
- In the field “**Position**” is possible to select the position where take/save the data from internal memory array;
- The field “**Start Bit**” is used for the “Binary In” and “Binary Out” BACnet objects;
- The field “**Length**” is used for all the others BACnet objects;
- In the field “**Mnemonic**” a description of the object is defined.

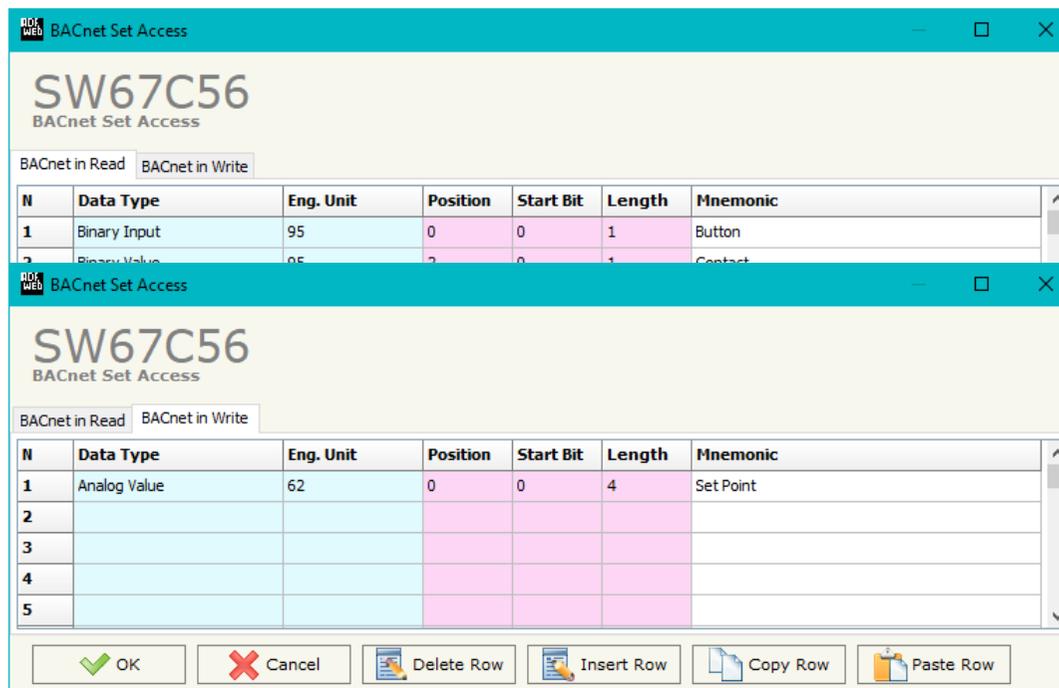


Figure 7: “BACnet Set Access” window

Is possible to insert directly the Unit (using its unique number) by compiling the "**Selected BACnet Engineering Unit**" field; or by selecting with the fields "**Select the Type**" and "**Select unit**" the Type/Unit desired. If the second way is used, is necessary to press the "**Select Engineering Unit**" button for confirm the choice.

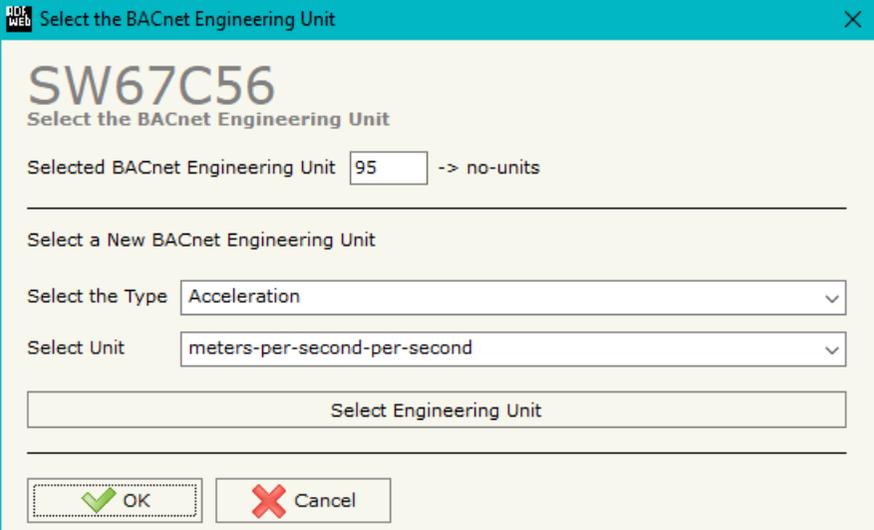


Figure 8: "Select the BACnet Engineering Unit" window

BACNET EDE FILE:

By pressing the "**BACnet EDE File**" button it is possible to save the EDE file for the BACnet Master.

UPDATE DEVICE:

By pressing the **“Update Device”** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **“192.168.2.205”**;
- Select which operations you want to do;
- Press the **“Execute update firmware”** button to start the upload;
- When all the operations are “OK” turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **“Execute update firmware”** button to start the upload;
- When all the operations are “OK” the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

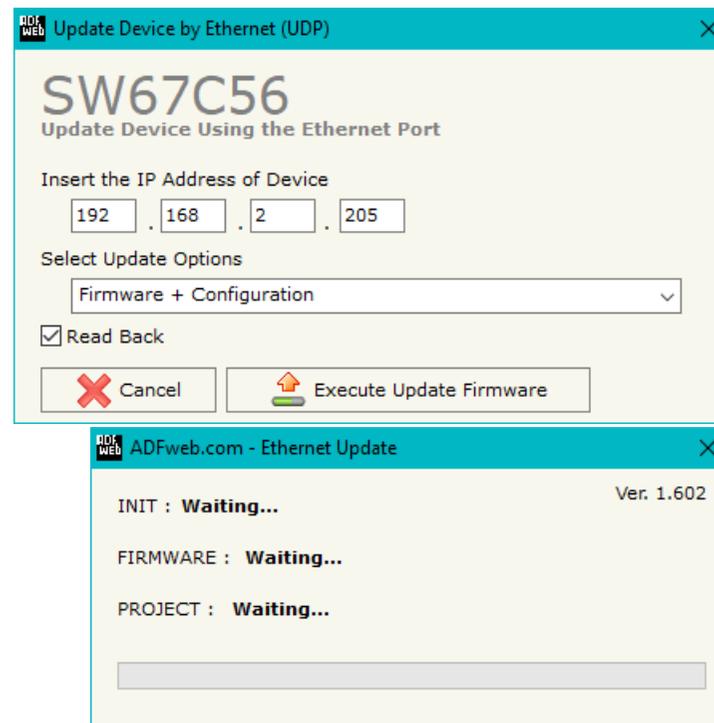


Figure 9: “Update device” windows

**Note:**

When you receive the device, for the first time, you also have to update the Firmware in the HD67C56 device.

**Warning:**

If Fig. 10 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8 or 10 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

**Warning:**

In the case of HD67C56 you have to use the software "SW67C56": www.adfweb.com/download/filefold/SW67C56.zip.


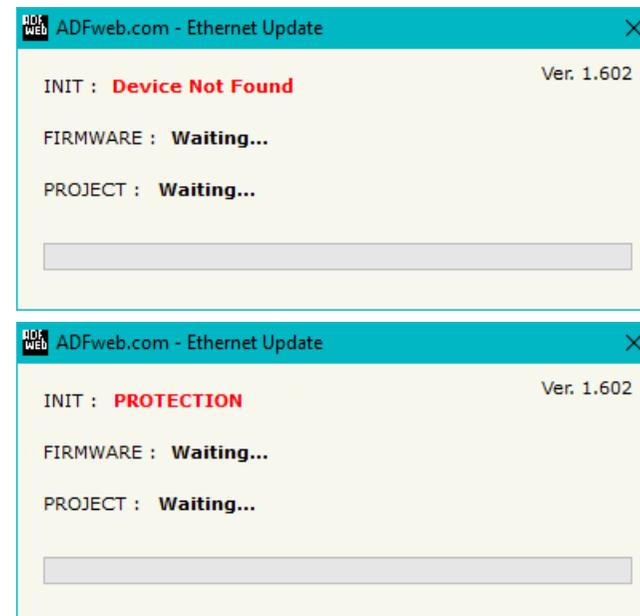


Figure 10: "Error" window

MECHANICAL DIMENSIONS:

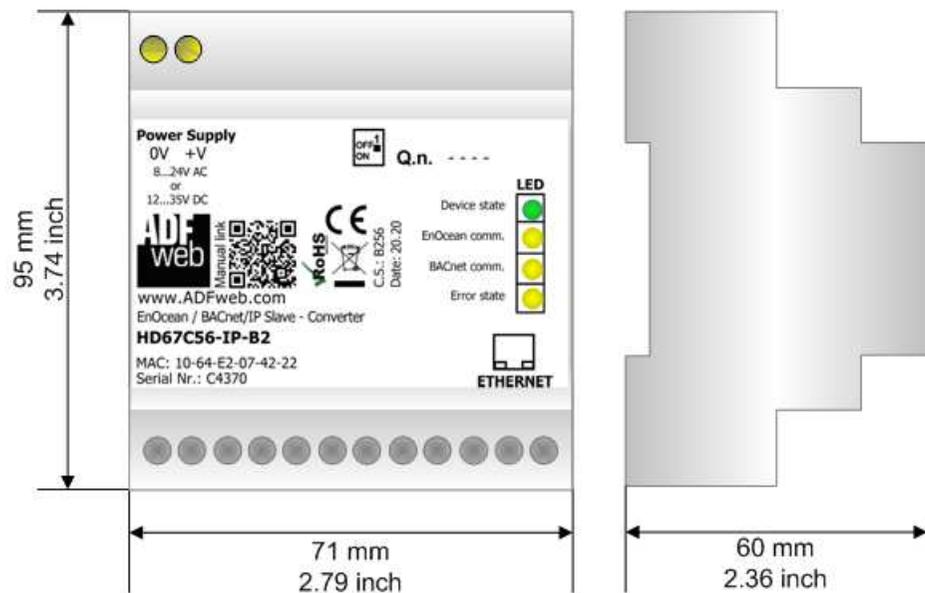


Housing: PVC
Weight: 200g (Approx)

Figure 11: Mechanical dimensions scheme for HD67C56-B2

ORDERING INFORMATIONS:

The ordering part number is formed by a valid combination of the following:

HD67C56 - xxx - B 2

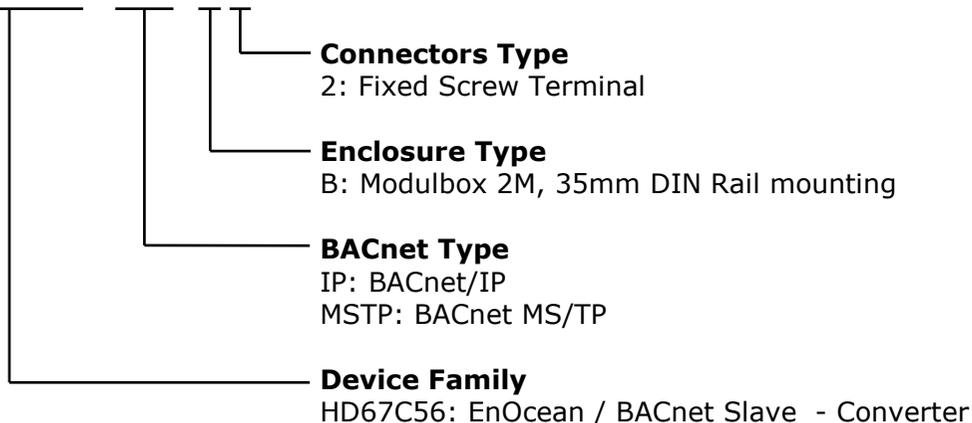

- Order Code: **HD67C56-IP-B2** - EnOcean / BACnet/IP Slave - Converter
- Order Code: **HD67C56-MSTP-B2** - EnOcean / BACnet MS/TP Slave - Converter

ACCESSORIES:

- Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz - 12 V DC
- Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz - 24 V DC

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:**WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING

The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com.
Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



ADFweb.com S.r.l.
Via Strada Nuova, 17
IT-31010 Mareno di Piave
TREVISO (Italy)
Phone +39.0438.30.91.31
Fax +39.0438.49.20.99
www.adfweb.com

