

TKS-088c-TOUCH-SCHUBL



FEATURES

- Designed for integration in 19" racks
- approx. 15° angled when completely extended
- Integrated touchpad
- Key relief printing
- Chemical, abrasion and scratch resistant frontsheet
- Resistant against dirt, dust and liquids (IP65)

TECHNICAL DATA

Number of keys:	88
Keyswitch technology:	short travel keys
Operating force:	2.6 N
Switch travel:	0.3 mm
Switching cycles:	approx. 3 mill. (per key)
Protection level (max):	IP65 (front)
Front panel material:	aluminium
Drawer housing material:	aluminium
Interfaces:	PS/2; USB
USB compatibility:	USB V1.1 compliance
Operating temperature:	0 °C to +70 °C

Storage temperature:	-25 °C to +80 °C
Dimensions:	482.6 x 280 x 58.4 mm
Weight:	5100 g

TECHNICAL DATA TOUCHPAD

Operating principle:	capacitive
Resolution:	1400 dpi
Dimensions:	65 x 49 mm
USB compatibility:	compliant with USB 2.0

Cat.No.	Product description	Interface	Layout
KS18348	TKS-088c-TOUCH-SCHUBL-USB-DE	USB	German
KS18349	TKS-088c-TOUCH-SCHUBL-USB-US	USB	US
KS18346	TKS-088c-TOUCH-SCHUBL-PS/2-DE	PS/2	German
KS18347	TKS-088c-TOUCH-SCHUBL-PS/2-US	PS/2	US

Other language versions/interfaces/configurations available on request.


Subject to modifications and errors

Additional functions of the new touch pad

Your device has a new touch pad and it provides the following additional functions:

1. You can adjust the sensitivity level
2. You can reproduce the mouse buttons
 - Left mouse click: a short tap on the touch pad with one finger
 - Right mouse click: a short tap on the touch pad with two fingers
3. You can reproduce the scroll wheel
4. You can reproduce holding down the left mouse button and moving it [tap and hold]

1. Adjusting the sensitivity level

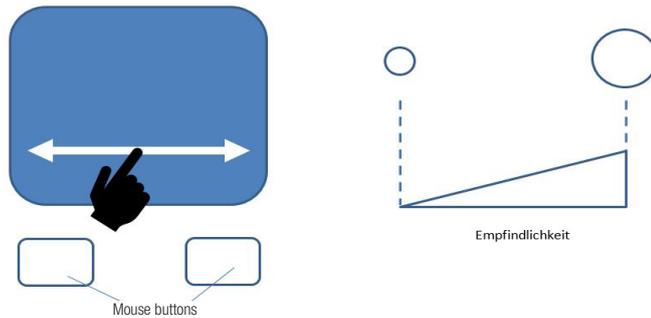


You can adjust the sensitivity level of the touch pad.

When delivered, the sensitivity is set at the lowest level.

You can adjust the sensitivity of the touch pad as follows:

- Press and hold both mouse buttons for approx. 5 sec. → the cursor starts to rotate.
- You can adjust the sensitivity level by moving your fingers across the touch pad horizontally; the level is displayed by the rotation circle of the cursor:
 - Small circle - lower sensitivity
 - Large circle - higher sensitivity
- The cursor stops rotating 5 seconds after you release the mouse buttons and the touch pad is then ready for use.

2. Activating the reproduction of mouse button functions

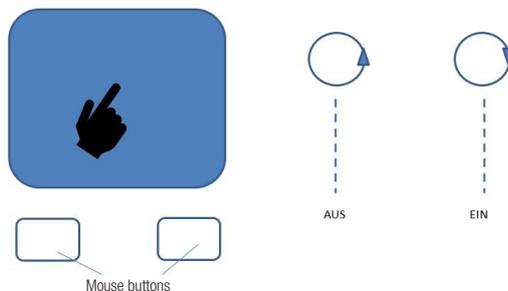

The touch pad can detect a left mouse click or a right mouse click.


This function – reproducing the mouse buttons – is active when the unit is delivered and you can turn it on or off as follows:

- Press and hold both mouse buttons for approx. 5 sec. → the cursor starts to rotate
- You can switch on or off the reproduction of mouse button functions by briefly tapping the touch pad and this is displayed by the direction of rotation of the cursor:
 - Reproducing the mouse button ON – clockwise rotation
 - Reproducing the mouse button OFF – counterclockwise rotation
- The cursor stops rotating 5 seconds after you release the mouse buttons; the touch pad is then ready to use.

Additional functions

3. Scroll wheel	Stroke the touch pad with two fingers in a vertical direction
4. Hold down the left mouse button and move [tap and hold]	Tap the touch pad and keep your finger on the touch pad for a short time

TECHNICAL DRAWING (in mm)

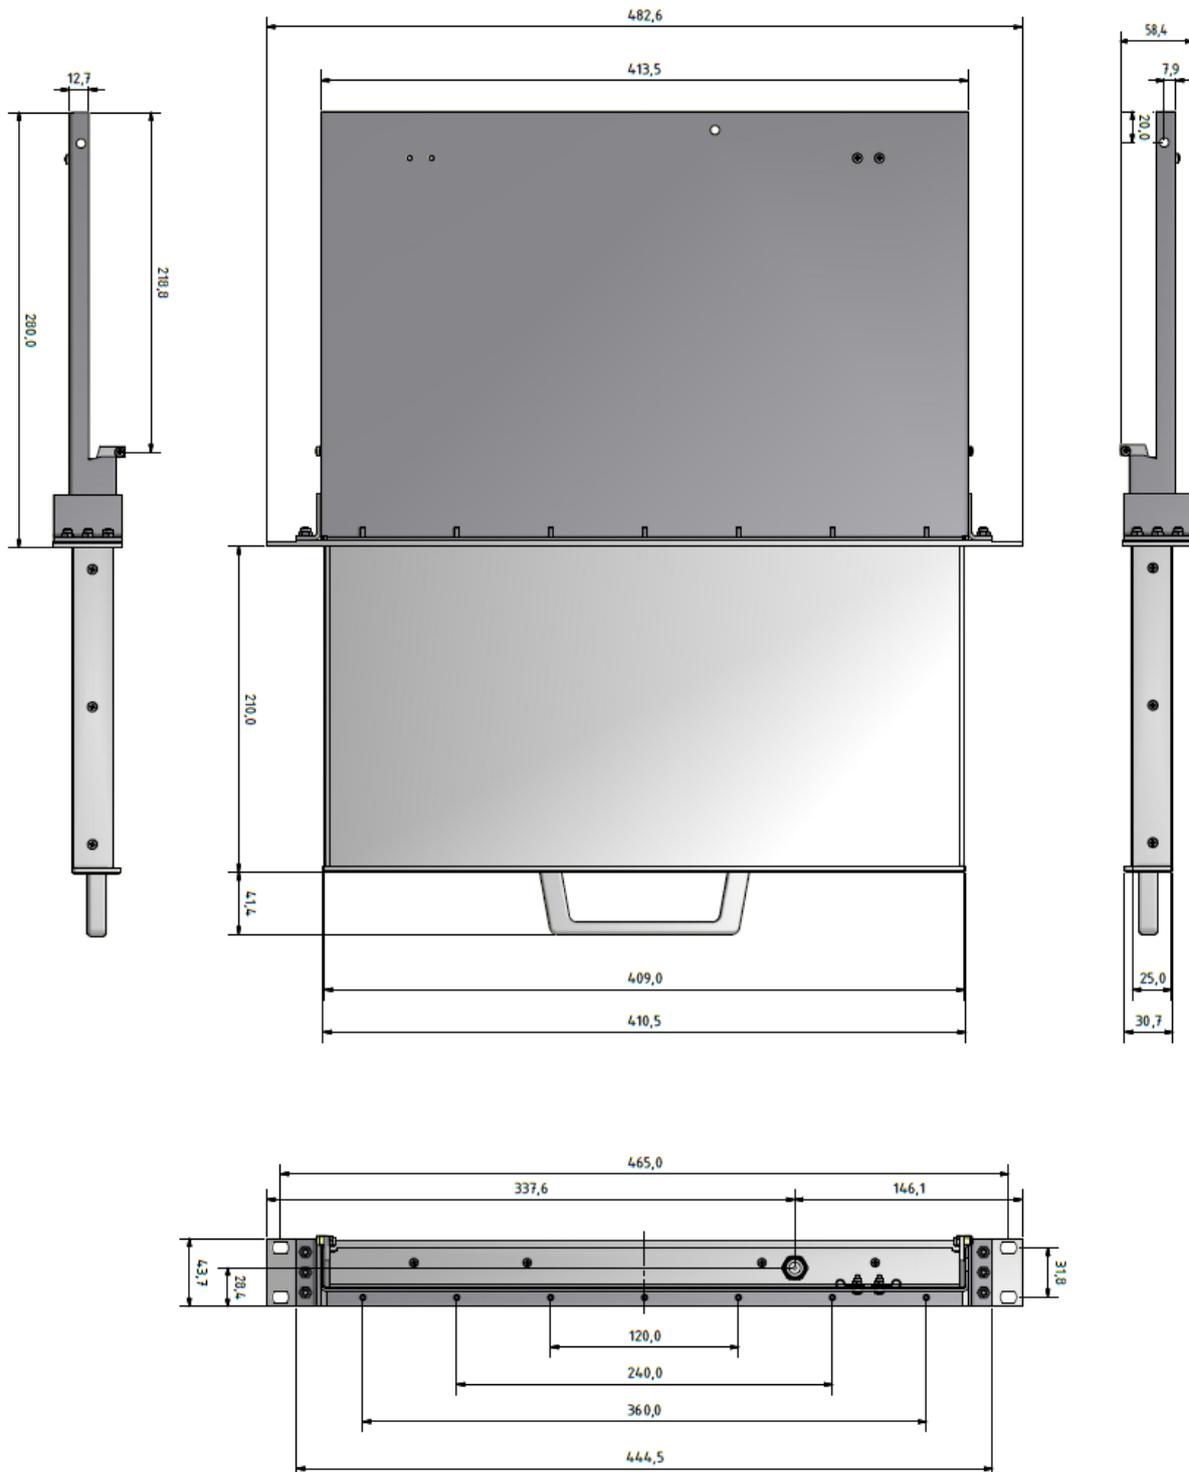

Subject to modifications and errors