

CAN104

CANbus® Network Interface Module for PC/104 Bus Computers

INSTALLATION GUIDE

INTRODUCTION

The CAN104 is a Controller Area Network (CAN) adapter for PC/104 bus computers. CAN is the data link layer technology used by DeviceNet and Smart Distributed System. The CAN104 supports 8-bit transfers and takes advantage of the additional interrupts on the expanded bus.

The CAN104 incorporates the Philips SJA1000 CAN stand-alone controller chip which is used widely in both the automotive and general industrial environments. Besides being backward compatible with the older 82C200, the SJA1000 has more features than its predecessor. The 82C200 is restricted to BasicCAN (11-bit identifiers) while the SJA1000 operates in either BasicCAN or a new mode called PeliCAN™ which supports the CAN 2.0B specification (29-bit identifiers). The SJA1000 maintains extended frame passivity while in the BasicCAN mode.

The SJA1000 features a 16 MHz clock, a larger receive buffer and better acceptance-filtering — including the ability to extend the acceptance mask to the data field. It has the ability to operate at data rates as great as 1 Mbps.

The CAN104 incorporates the DeviceNet physical layer with an optically isolated transceiver providing reverse voltage and short-circuit protection. Field connectors include the DeviceNet 5-position open style and DB-9 as defined by CAN in Automation (CiA).

The PeliCAN mode includes:

- Error counters with read/write access
- Programmable error warning limit
- Last error code register
- Error interrupt for each CANbus error
- Arbitration lost interrupt with detailed bit position
- Single-shot transmission (no re-transmission)
- Listen only mode (no acknowledge, no active error flags)
- Hot plugging support (software driven bit rate detection)
- Acceptance filter extension (4-byte code, 4-byte mask)
- Reception of 'own' messages (self reception request)

SPECIFICATIONS

Power Requirements +5 V
 80 mA

Environmental
Operating temperature: 0°C to +60°C
Storage temperature: -40°C to +85°C

Data Rates
50 kbps, 100 kbps, 125 kbps, 250 kbps, 500 kbps, 1 Mbps

Dimensions
3.55" x 3.775" (90 mm x 95 mm)

Shipping Weight
1 lb. (.45kg)

I/O Mapping — BasicCAN

The CAN104 can occupy any of the following 32-byte blocks of I/O space.

000 020 040 060 080 0A0 0C0 0E0 100 120 140 160 180 1A0 1C0 1E0
200 220 240 260 280 2A0 2C0 2E0 300 320 340 360 380 3A0 3C0 3E0

I/O Mapping — PeliCAN

The CAN104 can occupy any of the following 128-byte blocks of I/O space.

000 080 100 180 200 280 300 380

Interrupt Lines

Supports selection of IRQ3 through IRQ15

Compatibility

Compliant with CAN 2.0A and CAN 2.0B

Regulatory Compliance

CE Mark
CFR 47, Part 15 Class A

INSTALLATION

HARDWARE: The CAN104 can be installed in any PC/104 computer bus. With power removed from the computer, remove its cover. Take care when installing the CAN104 because both it and the exposed computer motherboard are sensitive to electrostatic discharge. To prevent inadvertent damage, touch the metal chassis of the internal power supply to discharge yourself, then remove the CAN104 from its protective ESD package.


Before proceeding with the installation, configure the jumpers according to the instructions in the section entitled “Configuring Jumper Settings.”

The CAN104 incorporates stack-through connectors and is shipped with four 0.6" standoffs for mounting in the PC/104 stack. Some older modules have only two mounting holes and two standoffs. The CAN104 should be mounted closer to the motherboard than any 8-bit modules that may be in the stack. If the CAN104 is the last module in the stack, secure it with panhead screws (not provided) to complete the mounting.

Once the CAN104 is mounted, it can be attached to the CANbus with either the screw terminals or the DB-9 connector. To facilitate use of the screw terminals, a mating female connector has been provided. The CAN104 complies to the physical layer specification for isolated ports, therefore bus power (V+, V-) must be present in order for its transceiver to function. Hardware installation is completed by replacing the computer’s cover.

Connector Pin Assignments

Function	Screw Terminal	DB-9
V -	1	3,6
CAN_L	2	2
Drain	3	5
CAN_H	4	7
V +	5	9
Not Used	—	1,4,8

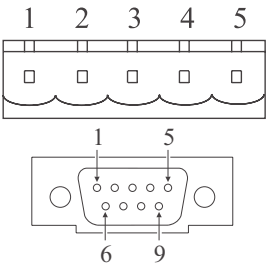

SOFTWARE: The CAN104 comes with a disk which contains the driver files that allows the operating system to allocate computer resources to the card. The instructions for installing these files are provided on the disk in the file named **README.TXT**.

CONFIGURING JUMPER SETTINGS

Power Selection

A set of four jumpers, labeled **POWER**, offers the choice between powering the CAN104 transceiver circuitry from the host computer or from the CANbus. By default the jumpers are set to **INT**. To power the transceiver from the CANbus, move all four jumpers to the **EXT** setting.

DeviceNet Reverse Voltage Protection

By default, diode **D1** protects the CAN104 from overvoltage which would occur if the DeviceNet power connections were accidentally reversed. This protection results in the CAN104 ground being about 700 mV different from the CAN ground. If desired, the CAN104 ground potential can be made equal to the CAN ground by installing a jumper on **JP7**.

Termination

If the CAN104 is located at the end of a trunk, line-matching impedance is required. A 121-ohm resistor is supplied for this purpose. If a different impedance is needed, jumper **JP8** should be removed and the alternative impedance connected to screw terminals CAN_H and CAN_L.

Interrupts

Jumper block **JP6** makes available all possible interrupt selections. Interrupt 5 has been chosen as the default.

I/O Address Map

The CAN104 has two modes of operation—BasicCAN and PeliCAN—that affect how the I/O space is defined. I/O addressing is set with jumper block **JP9** using jumpers S0–S4 and RA. By default, jumper **RA** (Range) is open causing the I/O space to be 32 contiguous bytes in size. This setting is used in BasicCAN, but may also be used in PeliCAN. For full PeliCAN functionality, jumper RA must be installed, extending the I/O space to 128 contiguous bytes.

The CAN104 uses an I/O space within the range 0x000–0x3FF as illustrated in **Tables 1–3**. Regardless of the RA setting, jumpers **S0–S4** are used to select the address at which the I/O space begins. The default setting is 0x300. Remember, RA determines only the *size* of the I/O space: 32 or 128 bytes.

An unused jumper may be left on the board with no effect, by attaching the jumper to only one of the two pins that constitute a jumper pair.

BasicCAN Jumper Settings

(■ = jumper installed)

Table 1 — 32-byte Addressing for BasicCAN

RA	S4	S3	S2	S1	S0	I/O Address
	■	■	■	■	■	000
	■	■	■	■		020
	■	■	■		■	040
	■	■	■			060
	■	■		■	■	080
	■	■		■		0A0
	■	■			■	0C0
	■	■				0E0
	■		■	■	■	100
	■		■	■		120
	■		■		■	140
	■		■			160
	■			■	■	180
	■			■		1A0
	■				■	1C0
	■					1E0
		■	■	■	■	200
		■	■	■		220
		■	■		■	240
		■	■			260
		■		■	■	280
		■		■		2A0
		■			■	2C0
		■				2E0
			■	■	■	300
			■	■		320
			■		■	340
			■			360
				■	■	380
				■		3A0
					■	3C0
						3E0

PeliCAN Jumper Settings

(■ = jumper installed X = don't care)

Table 2 — 32-byte Addressing

RA	S4	S3	S2	S1	S0	I/O Address
	■	■	■	■	■	000
	■	■		■	■	080
	■		■	■	■	100
	■			■	■	180
		■	■	■	■	200
		■		■	■	280
			■	■	■	300
				■	■	380

Table 3 — 128-byte Addressing

RA	S4	S3	S2	S1	S0	I/O Address
■	■	■	■	X	X	000
■	■	■		X	X	080
■	■		■	X	X	100
■	■			X	X	180
■		■	■	X	X	200
■		■		X	X	280
■			■	X	X	300
■				X	X	380

CAN Operation

CAN is currently described by ISO 11898. In terms of the Open Systems Interconnection model (OSI), CAN partially defines the services for layer 1 (physical) and layer 2 (data link). Higher-layer protocols such as DeviceNet and Smart Distributed System define additional services of the seven layer OSI model. Both of these protocols use CAN circuitry and, therefore, comply with the data link layer defined by CAN.

Medium access control (MAC) is accomplished through non-destructive bit-wise arbitration. If a station attempting transmission fails to confirm that its data is being accurately propagated, it assumes a higher priority message is present on the network. Consequently, it halts transmission and reverts to receiving mode. The highest priority message gets through and lower priority messages are resent later. In this way network collisions do not destroy data and eventually all stations gain access to the network.

Need More Help Installing this Product?

More help can be found at www.ccontrols.com. When contacting one of our offices, just ask for technical support.

Warranty

Contemporary Controls (CC) warrants this product to the original purchaser for two years from the product shipping date. Product returned to CC for repair is warranted for one year from the date the repaired product is shipped back to the purchaser or for the remainder of the original warranty period, whichever is longer.

If the product fails to operate in compliance with its specification during the warranty period, CC will, at its option, repair or replace the product at no charge. The customer is, however, responsible for shipping the product; CC assumes no responsibility for the product until it is received.

CC's limited warranty covers products only as delivered and does not cover repair of products that have been damaged by abuse, accident, disaster, misuse, or incorrect installation. User modification may void the warranty if the product is damaged by the modification, in which case this warranty does not cover repair or replacement.

This warranty in no way warrants suitability of the product for any specific application. IN NO EVENT WILL CC BE LIABLE FOR ANY DAMAGES INCLUDING LOST PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT EVEN IF CC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY PARTY OTHER THAN THE PURCHASER.

THE ABOVE WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE OR USE, TITLE AND NONINFRINGEMENT.

Returning Products for Repair

Return the product to the location where it was purchased by following the instructions at the URL below:

www.ccontrols.com/rma.htm

Declaration of Conformity

Information about the regulatory compliance of this product can be found at the URL below:

www.ccontrols.com/compliance.htm



TD990500-0IG

[This page was deliberately left blank.]