

User Manual

Revision 1.000
English

M-Bus Wireless / BACnet Slave - Converter

(Order Code: HD67086-IP-B2-169MHz-0, HD67086-IP-B2-868MHz-0, HD67086-IP-B2-169MHz-20, HD67086-IP-B2-868MHz-20, HD67086-IP-B2-169MHz-40, HD67086-IP-B2-868MHz-40, HD67086-IP-B2-169MHz-80, HD67086-IP-B2-868MHz-80) HD67086-IP-B2-169MHz-160, HD67086-IP-B2-868MHz-160, HD67086-IP-B2-169MHz-250, HD67086-IP-B2-868MHz-250)

For Website information:

www.adfweb.com?Product=HD67086

For Price information:

www.adfweb.com?Price=HD67086-IP-B2-169MHz-0
www.adfweb.com?Price=HD67086-IP-B2-868MHz-0
www.adfweb.com?Price=HD67086-IP-B2-169MHz-20
www.adfweb.com?Price=HD67086-IP-B2-868MHz-20
www.adfweb.com?Price=HD67086-IP-B2-169MHz-40
www.adfweb.com?Price=HD67086-IP-B2-868MHz-40
www.adfweb.com?Price=HD67086-IP-B2-169MHz-80
www.adfweb.com?Price=HD67086-IP-B2-868MHz-80
www.adfweb.com?Price=HD67086-IP-B2-169MHz-160
www.adfweb.com?Price=HD67086-IP-B2-868MHz-160
www.adfweb.com?Price=HD67086-IP-B2-169MHz-250
www.adfweb.com?Price=HD67086-IP-B2-868MHz-250

Benefits and Main Features:

- ✦ Very easy to configure
- ✦ Triple electrical isolation
- ✦ Temperature range: -40°C/85°C (-40°F/185°F)



User Manual

For others M-Bus products see also the following link:

Converter M-Bus Wireless to

www.adfweb.com?Product=HD67082
www.adfweb.com?Product=HD67084

(Modbus Slave)
(Ethernet)

Converter M-Bus to

www.adfweb.com?Product=HD67021
www.adfweb.com?Product=HD67022

(RS232)
(RS485)

Analyzer / Scanner / Sniffer M-Bus

www.adfweb.com?Product=HD67031

Isolator/Repeater M-Bus

www.adfweb.com?Product=HD67032M

Gateway M-Bus / Modbus RTU

www.adfweb.com?Product=HD67029M-232
www.adfweb.com?Product=HD67029M-485

(on RS232)
(on RS485)

Gateway M-Bus / Modbus TCP

www.adfweb.com?Product=HD67044

Gateway M-Bus / PROFIBUS

www.adfweb.com?Product=HD67053M

Gateway M-Bus Concentrator

www.adfweb.com?Product=HD67054M

Gateway M-Bus Slave / Modbus RTU master

www.adfweb.com?Product=HD67059M-232

Do you have an your customer protocol?

www.adfweb.com?Product=HD67003

Do you need to choose a device? do you want help?

www.adfweb.com?Cmd=helpme

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	7
CONFIGURATION	7
POWER SUPPLY	8
FUNCTION MODES	9
LEDS	10
ETHERNET	11
WM-BUS	11
M-BUS	12
USE OF COMPOSITOR SW67083	13
NEW CONFIGURATION / OPEN CONFIGURATION	14
SOFTWARE OPTIONS	15
SET COMMUNICATION	16
M-BUS	18
UPDATE DEVICE	31
MECHANICAL DIMENSIONS	33
ORDERING INFORMATIONS	34
ACCESSORIES	35
DISCLAIMER	36
OTHER REGULATIONS AND STANDARDS	36
WARRANTIES AND TECHNICAL SUPPORT	37
RETURN POLICY	37

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ➔ Updated
- ➔ Related to the product you own

To obtain the most recently updated document, note the "document code" that appears at the top right-hand corner of each page of this document.

With this "Document Code" go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper "Document Code" and download the updates.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	02/06/2016	FI	All	First Release

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning.
ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLE OF CONNECTION:

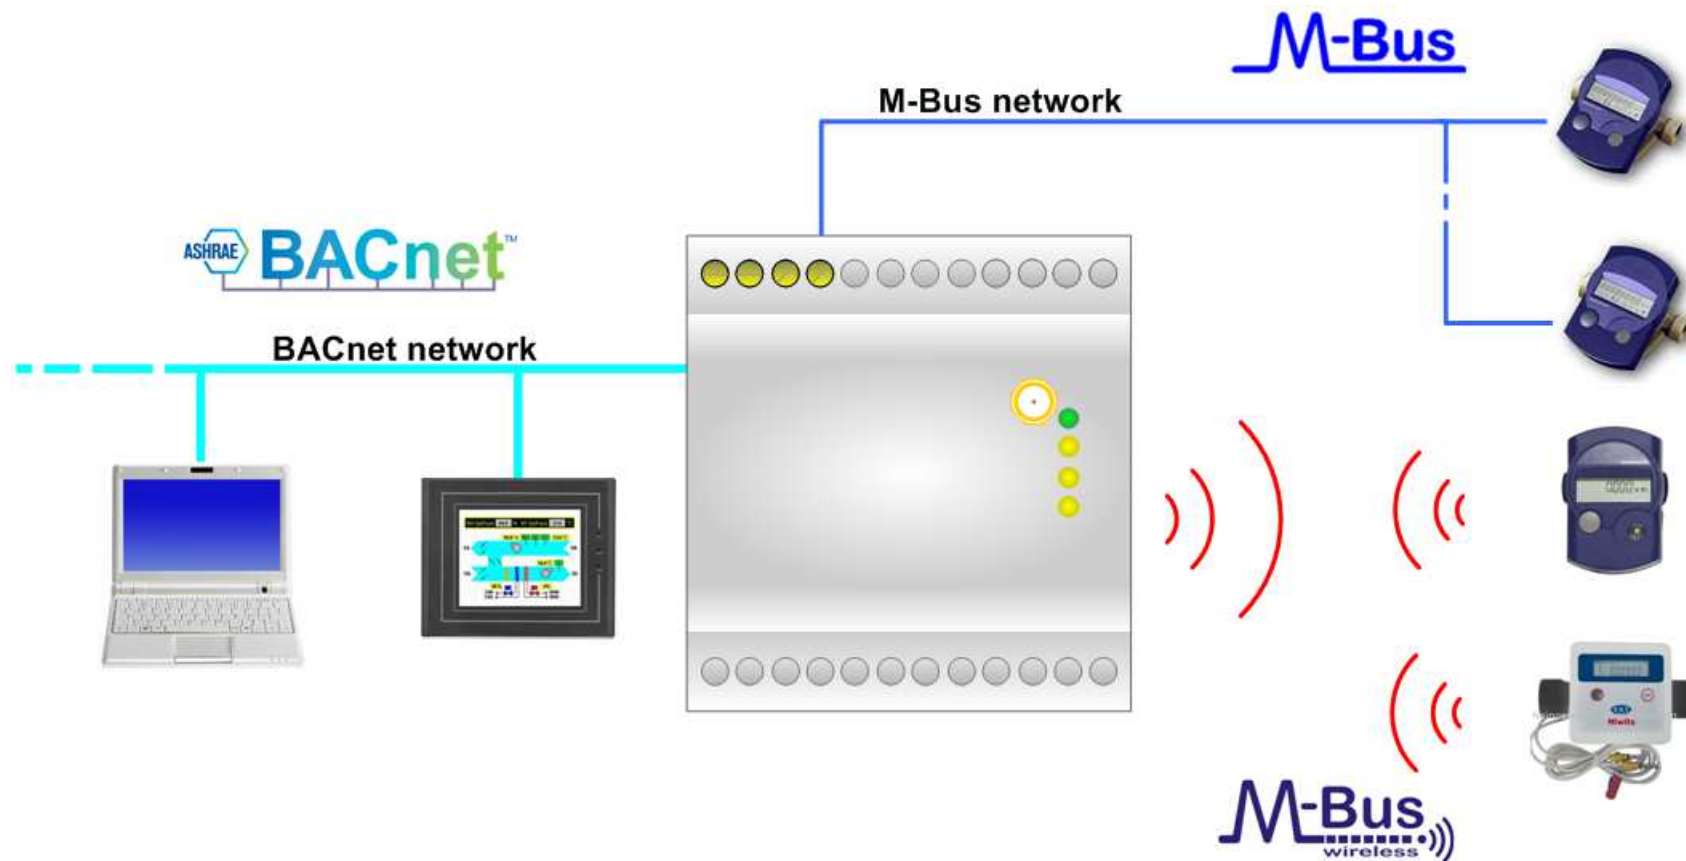

CONNECTION SCHEME:

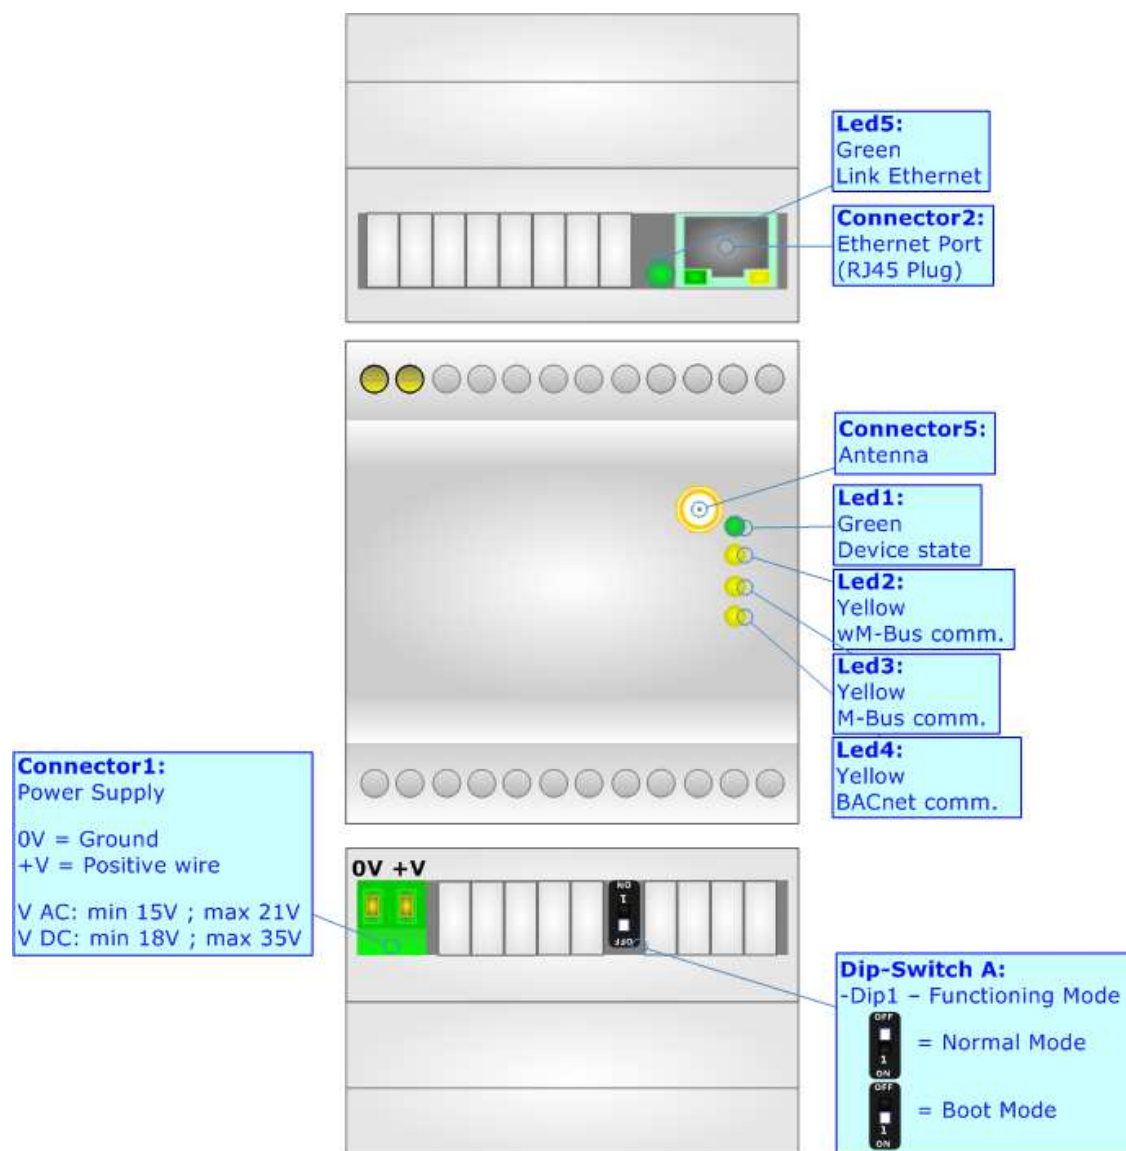


Figure 1a: Connection scheme for HD67086-B2-xxxMHz-0

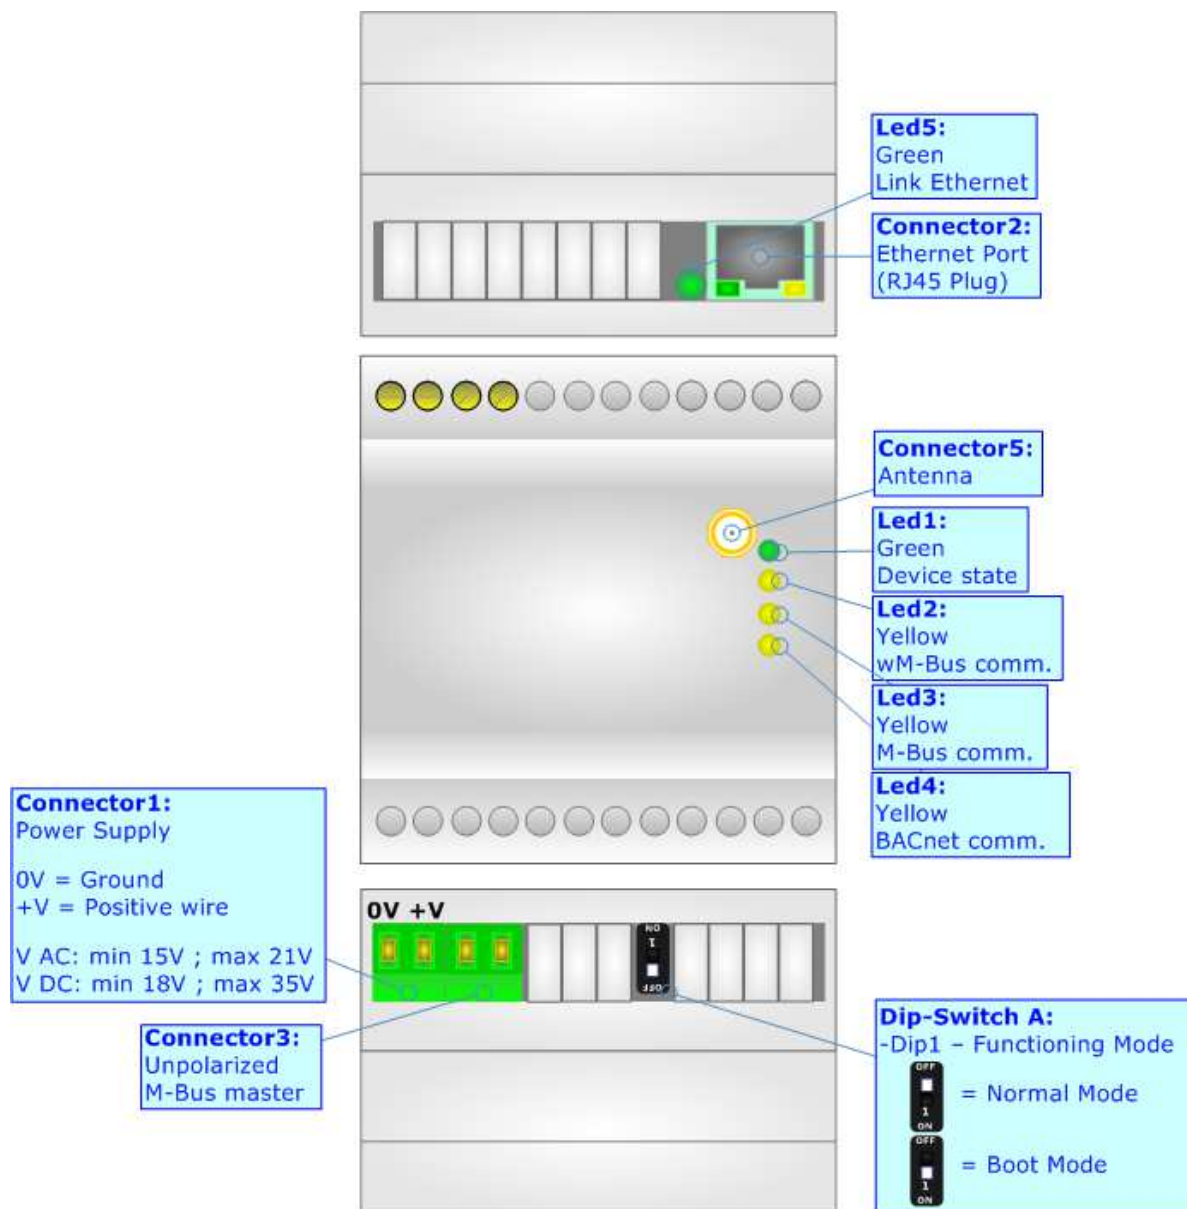


Figure 1b: Connection scheme for HD67086-B2-xxxMHz-xxx

CHARACTERISTICS:

The HD67086-B2-xxxMHz-0 and HD67086-B2-xxxMHz-xxx are converters from wM-Bus and M-Bus to BACnet Slave and vice-versa.

They allow the following characteristics:

- Electrical isolation between Ethernet and M-Bus;
- Baud Rate and Parity (for M-Bus on wire) changeable with software;
- Available wM-Bus frequency: 169 MHz, 433 MHz or 868 MHz (in relation to the order code);
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 15...21V AC or 18...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].



CONFIGURATION:

You need Compositor SW67086 software on your PC in order to perform the following:

- Define the parameter of BACnet;
- Define the parameter of M-Bus line;
- Define the parameter of wM-Bus line;
- Define which M-Bus variables are readable on BACnet;
- Update the device.

POWER SUPPLY:

The devices can be powered at 15...21V AC and 18...35V DC. The consumption depends to the code of the device. For more details see the two tables below.


VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
15V	21V	18V	35V

Consumption at 24V DC:


Device	[W/VA]
HD67086-B2-xxxMHz-0	3.5

Device	No Load [W/VA]	Full Load [W/VA]*
HD67086-B2-xxxMHz-20	3.5	4
HD67086-B2-xxxMHz-40		5
HD67086-B2-xxxMHz-80		8
HD67086-B2-xxxMHz-160		14
HD67086-B2-xxxMHz-250		30

* This value is with all the Slave M-Bus devices of the code (20, 40, 80, 160, 250) connected to the line (wired side)

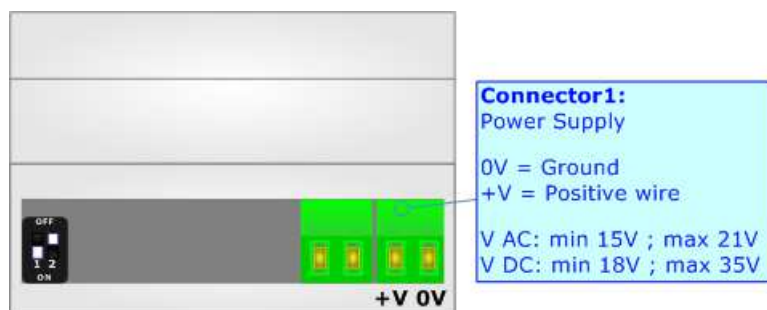

Caution: Not reverse the polarity power

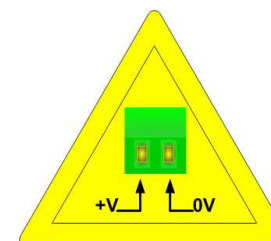

HD67086-B2-xxxMHz-0
HD67086-B2-xxxMHz-xxx


FUNCTION MODES:

The device has got two functions mode depending of the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device;
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for uploading the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.

According to the functioning mode, the LEDs will have specifics functions, see 'LEDS' section.

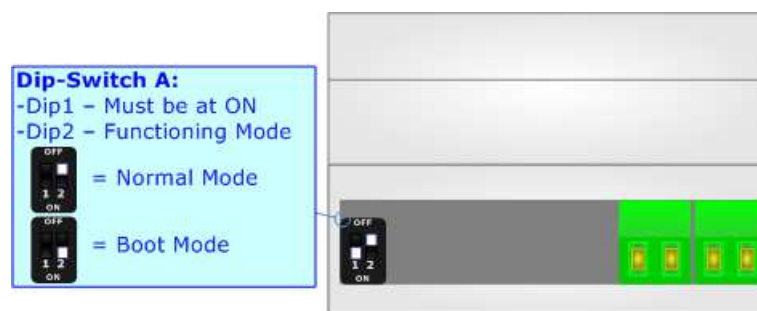
**Warning:**

Dip2 of 'Dip-Switch A' must be at ON position to work even if the Ethernet cable isn't inserted.

LEDS:

The device has got five LEDs that are used to give information of the functioning status.
The various meanings of the LEDs are described in the table below.


LED	Normal Mode	Boot Mode
1: Device state (green)	Blinks slowly (~1Hz)	Blinks quickly
2: wM-Bus comm. (green)	Blinks quickly when data on wM-Bus arrives	Blinks quickly
3: M-Bus comm. (green) (only for HD67083-B2-xxxMHz-xxx)	Blinks quickly when a reply to a M-Bus request arrives	Blinks quickly
4: BACnet comm.	Changes state when a BACnet request arrives	Blinks quickly
5: Link Ethernet (green)	ON: Ethernet cable connected OFF: Ethernet cable disconnected	ON: Ethernet cable connected OFF: Ethernet cable disconnected

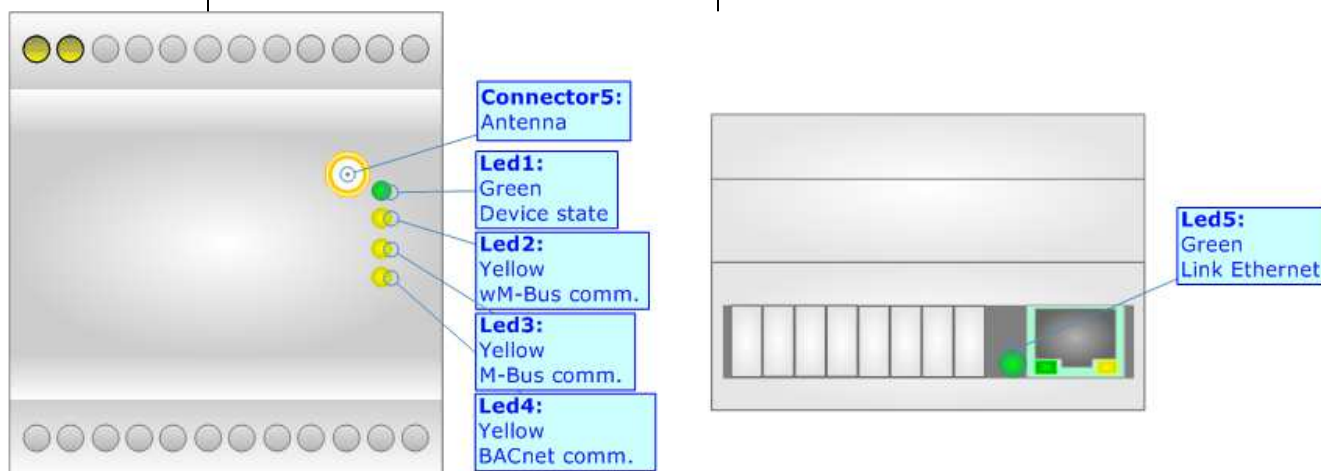

ETHERNET:

The Ethernet port is used for the BACnet communication and for programming the device.


The Ethernet connection must be made using Connector2 of HD67086-B2-xxxMHz-0 or HD67086-B2-xxxMHz-xxx with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

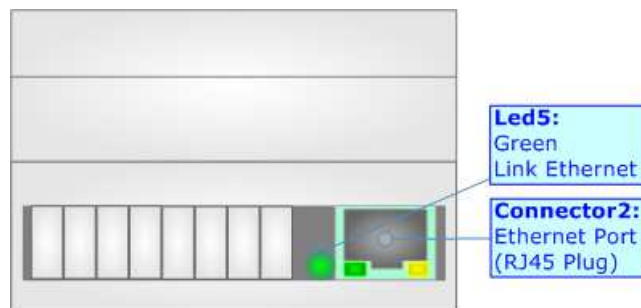

WM-BUS:

The standards of wM-Bus are specified in EN 13757-4. The signal is at 868Mhz, 433Mhz or 169 MHz (in relation to the order code). Our converter supports wM-Bus Mode S1 and Mode T1.


The Antenna connector is a SMA Female ('Female Outer Shell' and 'Female Receptacle') so the Antenna must have a SMA Male connector.

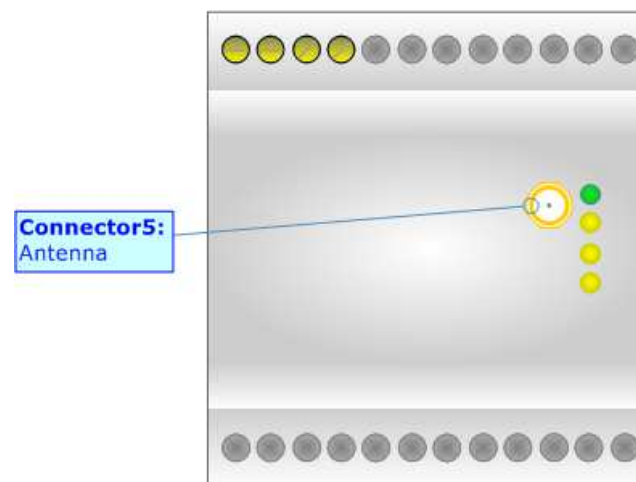

M-BUS:

The M-Bus is a unpolarized bus.

A two wire standard telephone cable (JYStY N*2*0.8 mm) is used as the transmission medium for the M-Bus. The maximum distance between a slave and the repeater is 350m; this length corresponds to a cable resistance of up 29 Ω . This distance applies for the standard configuration having Baud rates between 300 and 9600 Baud, and a maximum of 250 slaves. The maximum distance can be increased by limiting the Baud rate and using fewer slaves, but the bus voltage in the space state must at no point in a segment fall below 12V, because of the remote powering of the slaves. In the standard configuration the total cable length should not exceed 1000m, in order to meet the requirement of a maximum cable capacitance of 180nF. *(Taken from M-Bus specifics)*

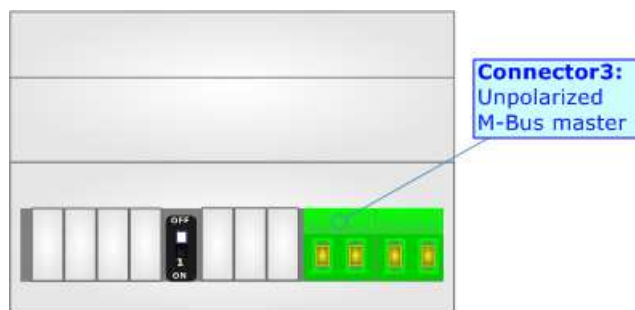

USE OF COMPOSITOR SW67086:

To configure the Converter, use the available software that runs with Windows called SW67086. It is downloadable from the site www.adfweb.com and its operation is described in this document (*this manual is referenced to the last version of the software present on our web site*). The software works with MSWindows (XP, Vista, Seven, 8; 32/64bit).

When launching the SW67086, the window below appears (Fig. 2).



Note:

It is necessary to have installed .Net Framework 4.


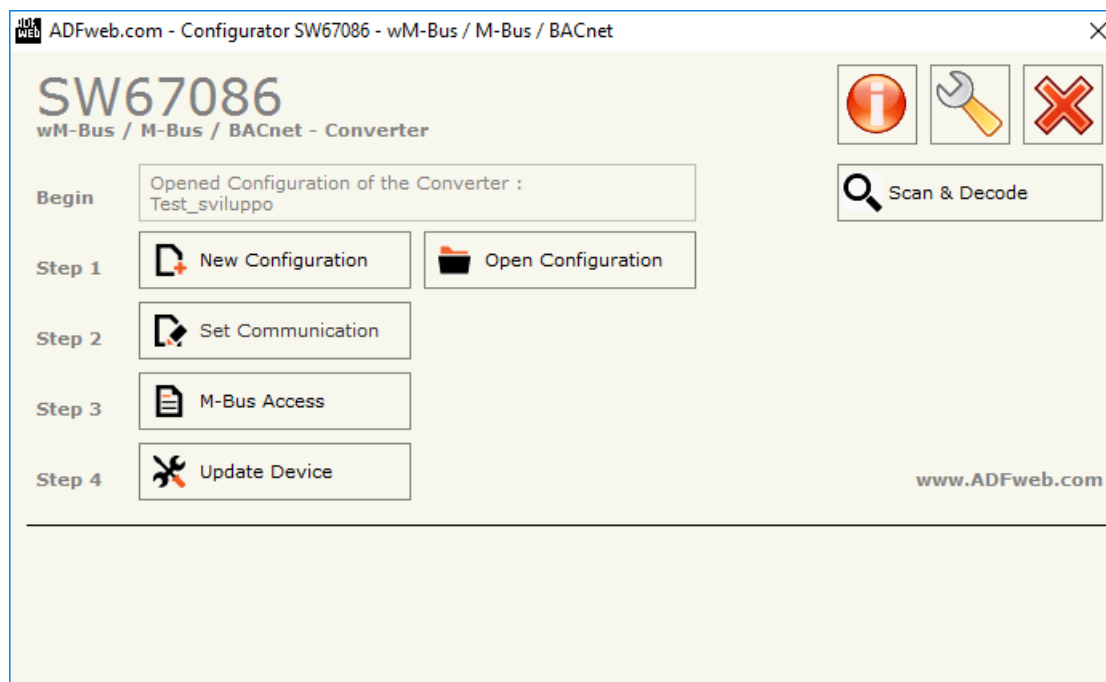


Figure 2: Main window for SW67086


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

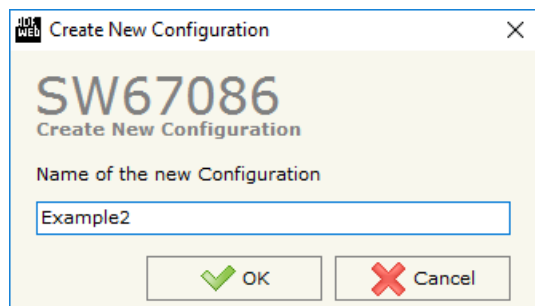


A device’s configuration can also be imported or exported:



- To clone the configurations of a Programmable “M-Bus Wireless / BACnet Slave - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

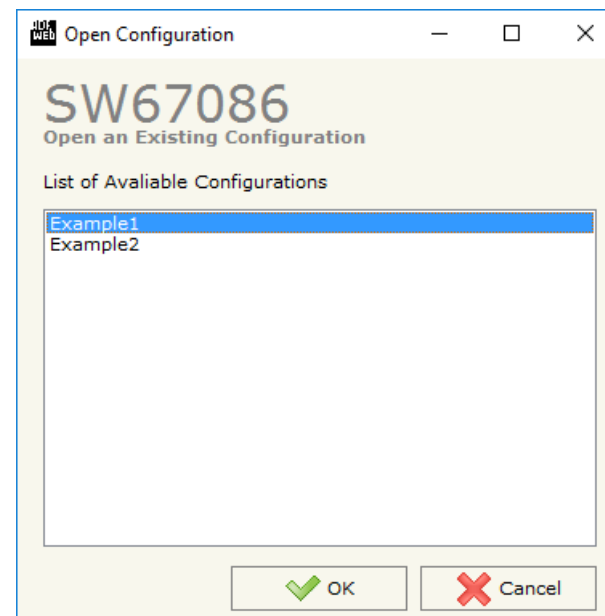

SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

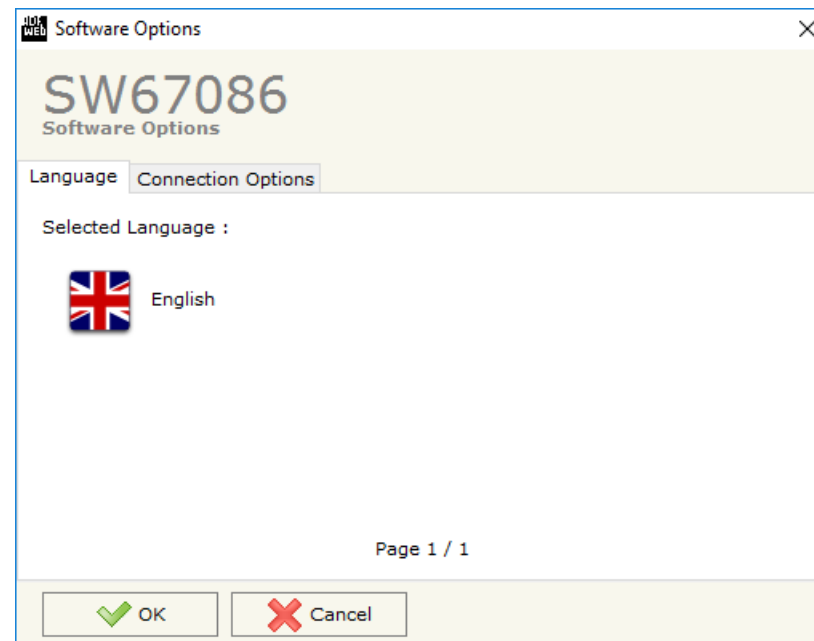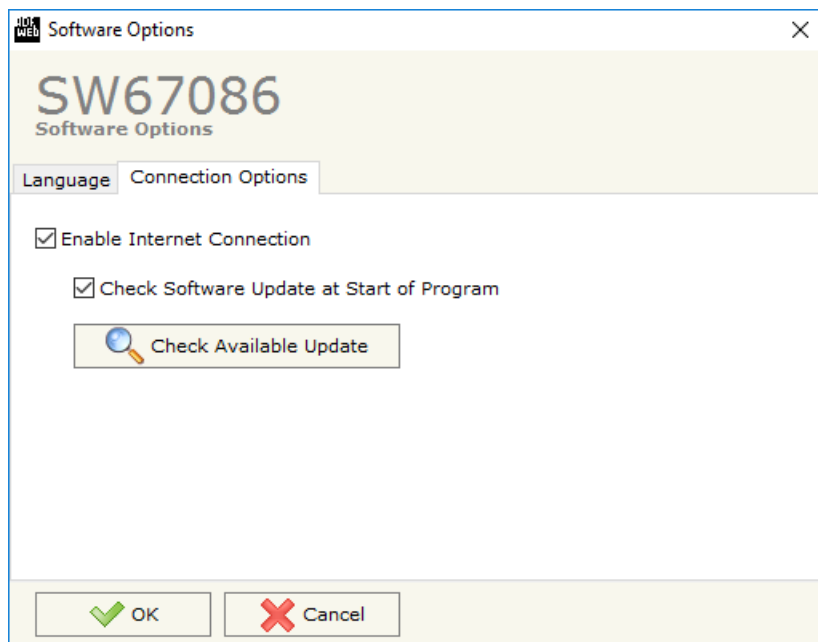

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website.

Checking the option “**Check Software Update at Start of Program**”, the SW67086 check automatically if there are updatings when it is launched.

SET COMMUNICATION:

This section define the fundamental communication parameters of buses, Modbus, M-Bus and wM-Bus.

By Pressing the **"Set Communication"** button from the main window for SW67083 (Fig. 2) the window "Set Communication" appears (Fig. 3). The window is divided in four sections.

In the section "Select Device" it is possible to select the type of converter (M-Bus port present or not).

In the field **"Type"** is possible to select the type of BACnet to use from:

- BACnet/IP (use ethernet);
- BACnet MS/TP (use RS485).

If selected "BACnet/IP" the means of the fields for "BACnet" are:

- In the fields **"IP ADDRESS"** insert the IP address that you want to give to the Converter;
- In the fields **"SubNet Mask"** insert the SubNet Mask;
- In the fields **"GATEWAY"** insert the default gateway that you want to use. This feature can be enabled or disabled pressing the Check Box field;
- In the field **"Port"** the port number used for BACnet communication is defined. The default port used for BACnet communication is 47808, but is possible to insert any value (except 10000 and 10001);
- In the field **"BACnet Device Name"** is possible to insert the name to give to the BACnet node;
- In the field **"Device Identifier"** is possible to insert a number used for the "Device Identifier" of the BACnet node.

If selected "BACnet MS/TP" the means of the fields for "BACnet" are:

- In the field **"Baudrate"** it is possible to select the baudrate of the BACnet line (1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200);
- In the field **"Parity"** it is possible to select the parity of the line (None, Odd, Even);
- In the field **"MAC Address"** is possible to define the MAC of BACnet node (from 0 to 254);
- The field **"Max Masters"** specifies the highest allowable address for master nodes. The value shall be less than or equal to 127;
- The field **"Max Info Frames"** specifies the maximum number of information frames the node may send before it must pass the token;

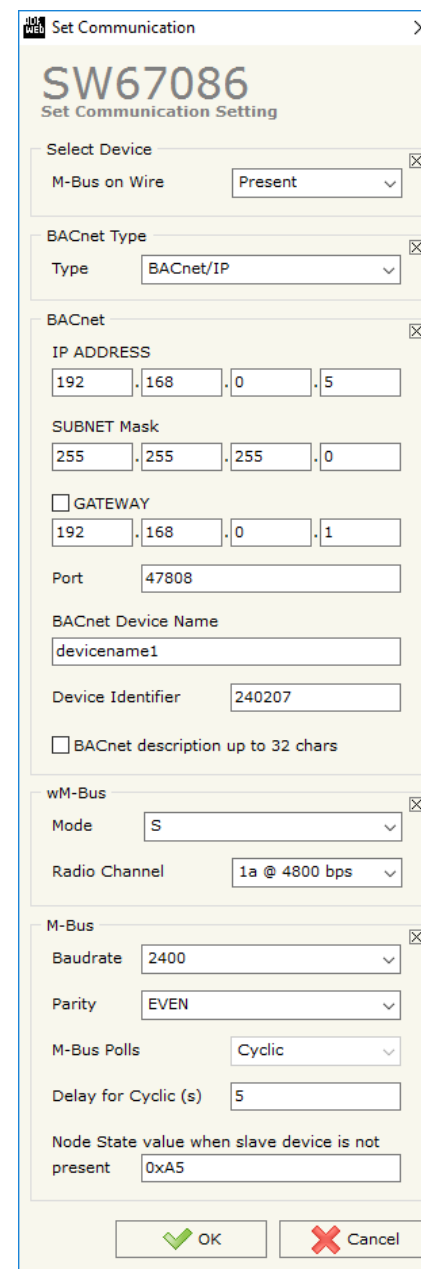


Figure 3: "Set Communication" window


- In the field "**Device Instance**" is possible to assign a number to the BACnet node (Used for the Device Identifier).
- In the field "**BACnet Device Name**" is possible to insert the name to give to the BACnet node (maximum 17 characters).

The means of the fields for "wM-Bus" are:

- In the field "**Mode**" it is possible to select the Communication Mode (S1 or T1 for 868 MHz version and N1 or N2 for 169 MHz version) used for the M-Wireless Communication;
- In the field "**Radio Channel**" it is possible to define the Radio Channel used for the wM-Bus communication (only for 169 MHz version).

The means of the fields for "M-Bus" are (present only if the M-Bus port is "Present"):

- In the field "**Baudrate**" it is possible to select the baudrate of the M-Bus line;
- In the field "**Parity**" it is possible to select the parity of the line;
- If the field "**M-Bus Polls**" it is possible to select the how the M-Bus polls are sent (fixed to "Cyclic");
- In the field "**Node State value when slave device is not present**" it is possible to insert the value to assign to the "Node State" when the Gateway doesn't find the interrogated M-Bus slave.

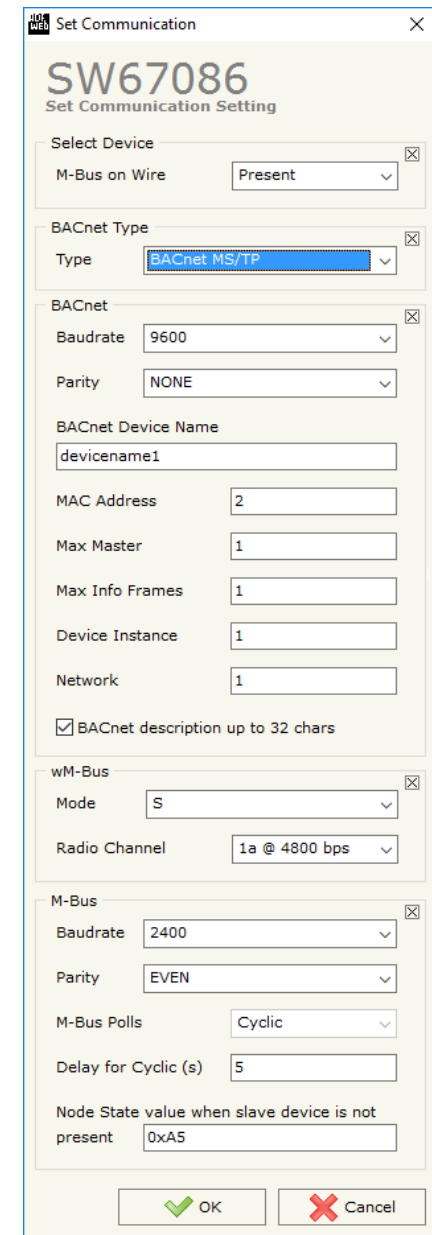

ADFweb

web

SW67086

Set Communication Setting

Select Device

M-Bus on Wire Present

BACnet Type

Type BACnet MS/TP

BACnet

Baudrate 9600

Parity NONE

BACnet Device Name devicename1

MAC Address 2

Max Master 1

Max Info Frames 1

Device Instance 1

Network 1

☒ BACnet description up to 32 chars

wM-Bus

Mode S

Radio Channel 1a @ 4800 bps

M-Bus

Baudrate 2400

Parity EVEN

M-Bus Polls Cyclic

Delay for Cyclic (s) 5

Node State value when slave device is not present 0xA5

OK

Cancel

M-BUS


By Pressing the “**M-Bus**” button from the main window for SW67086 (Fig. 2) the window “M-Bus Network” appears (Fig. 4).

In the section “Nodes” it is possible to create the nodes of M-Bus line:

- In the field “**Description**” it is possible to write a short description of the node.
- In the field “**M-Bus Type**” it is possible to select if the node uses M-Bus (on wire) or wM-Bus.

SECTION NODES (M-BUS NODES):

- In order to create a new node it is necessary to select which address use, selecting “**Primary ID**” or “**Secondary ID**”, to makes the requests and then insert the “Primary Address” (from 1 to 250) or the Secondary Address” (from 0 to 99999999) of M-Bus device.
- If the field “**Node State**” is checked the Converter creates a BACnet object (Positive Integer type) for saving the status of the counter;
- If the field “**Identification Number**” is checked the Converter creates a BACnet object (Positive Integer type) for saving the Secondary Address of the device;
- If the field “**Convert BCD in Integer Identification Num.**” is checked the Converter converts the Identification Number that is normally expressed in BCD in a Integer.
- In the field “**Swap Identification Num.**” it is possible to select the swap mode of the Identification Number. If swap isn’t necessary you have to select “None”; otherwise see the section “Swap Identification” (page 30) of this document for select the swap mode.

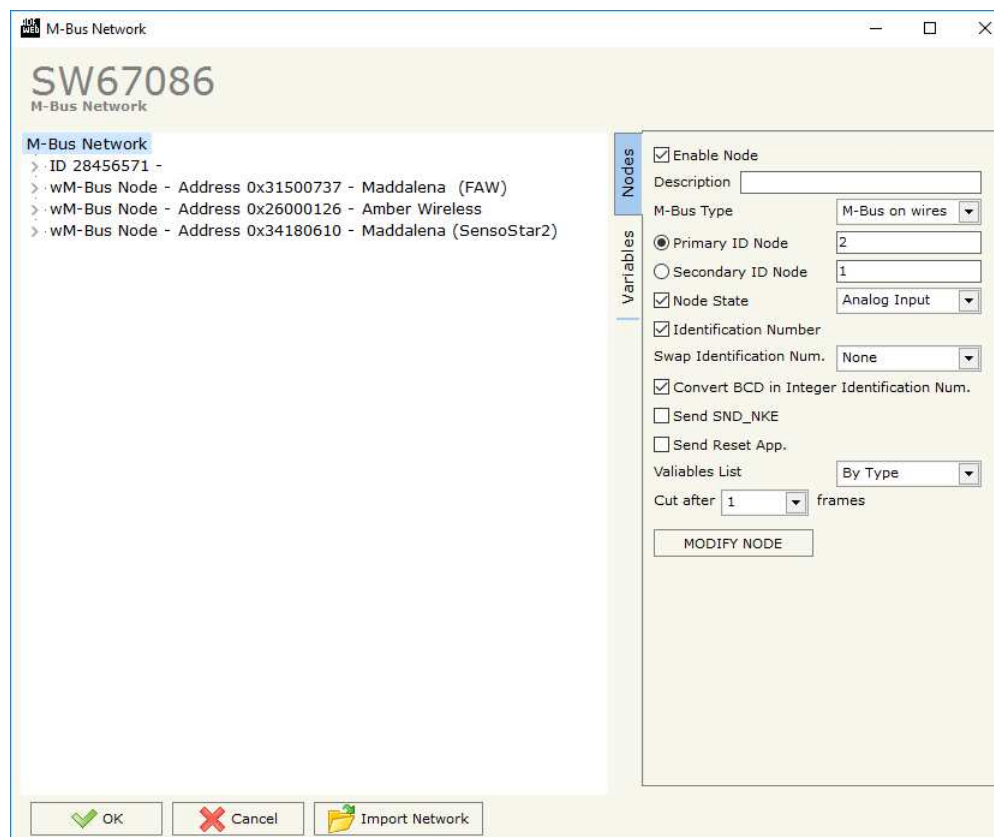


- If the field "**Send SND_NKE**" is checked, the Converter send the "SND_NKE" frame to start the communication.
- In the field "**Send Reset App.**" Is checked the Converter send the "Application Reset" command to the slave.
- In the field "**Variables List**" it is possible to select which type of variables definition to use. If is selected "By Type" it is necessary to fill all fields, in the section Variables, with the correct values; otherwise if "By Position" is selected you can insert the progressive number of the variable that you need (page 25 for more information).
- In the field "**Cut after**" it is possible to select after how many frames stops data requests. It is used when the slave has got many data frames and you don't need to read all them.

After that, pressing the "**ADD NODE**" button, a new node appears in the left side of the window. In order to modify a created node it is necessary to select the desired node, change the wrong items and then press the "**MODIFY NODE**" button.

SECTION NODES (WM-BUS NODES):

- In the field "**Manufacturer ID**" it is necessary to define the Manufacturer ID of the wM-Bus node.
- In the field "**Address**" it is necessary to define the ID of the wM-Bus node.
- If the field "**Version**" it is necessary to define the version of the wM-Bus node.
- In the field "**Device Type**" it is possible to define the Type of the wM-Bus node.
- The field "**Key Enable**" is used to decode the M-Bus frame sent by the wM-Bus node if it uses encrypted communication. In the following 16 fields, you have to specify the key to decode the message.
- If the field "**Node State**" is checked the Converter creates a BACnet object (Positive Integer type) for saving the status of the counter;
- If the field "**Identification Number**" is checked the Converter creates a BACnet object (Positive Integer type) for saving the Secondary Address of the device;
- If the field "**Convert BCD in Integer Identification Num.**" is checked the Converter converts the Identification Number that is normally expressed in BCD in a Integer.
- In the field "**Swap Identification Num.**" it is possible to select the swap mode of the Identification Number. If swap isn't necessary you have to select "None"; otherwise see the section "Swap Identification" (page 30) of this document for select the swap mode.
- In the field "**Variables List**" it is necessary to select which type of variables definition to use. If is selected "By Type" it is necessary to fill all fields, in the section Variables, with the correct values; otherwise if "By Position" is selected you can insert the progressive number of the variable that you need (page 25 for more information).

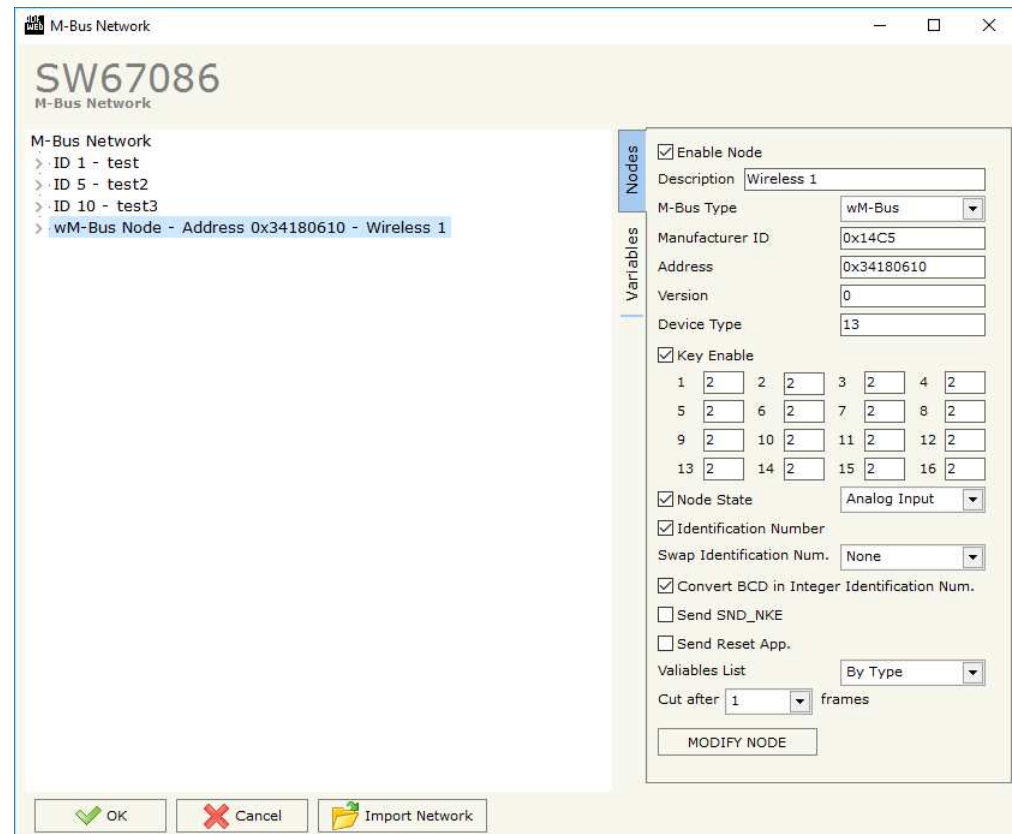


The screenshot shows the 'M-Bus Network' configuration window. The title bar says 'M-Bus Network'. The main area displays 'SW67086' and 'M-Bus Network'. Below this, a list of nodes is shown: 'ID 1 - test', 'ID 5 - test2', 'ID 10 - test3', and 'wM-Bus Node - Address 0x34180610 - Wireless 1'. The 'wM-Bus Node' is selected. To the right, a 'Variables' panel is open, showing configuration options for the selected node. The 'Nodes' tab is active, showing 'Enable Node' checked, 'Description' as 'Wireless 1', 'M-Bus Type' as 'wM-Bus', 'Manufacturer ID' as '0x14C5', 'Address' as '0x34180610', 'Version' as '0', and 'Device Type' as '13'. The 'Key Enable' section has a grid of 16 checkboxes, all of which are checked. The 'Node State' is set to 'Analog Input'. The 'Identification Number' is checked, 'Swap Identification Num.' is set to 'None', and 'Convert BCD in Integer Identification Num.' is checked. The 'Send SND_NKE' and 'Send Reset App.' options are unchecked. The 'Variables List' is set to 'By Type'. The 'Cut after' field is set to '1' frames. At the bottom, there are 'OK', 'Cancel', and 'Import Network' buttons. A 'MODIFY NODE' button is also present at the bottom of the 'Variables' panel.


After that, pressing the "**ADD NODE**" button, a new node appears in the left side of the window. In order to modify a created node it is necessary to select the desired node, change the wrong items and then press the "**MODIFY NODE**" button.

SECTION VARIABLES (BY TYPE):

Selecting the desired node it is possible to add a variable. In order to create a new variable it is necessary to fill these items:

- To use the created variable the field **"Enable Variable"** must be checked. If you have created a variable but for the moment it is unused it is possible to uncheck the field "Enable Variable" without delete it;
- In the field **"Description"** it is possible to write a description of the variable (it isn't a necessary information,
- it helps the readability of the tree of network);
- The field **"Type of Data"** is used to select the unit of measure;
- In the field **"VIF ASCII String"** insert the string of VIF. It is possible to use this field only if the "Type of Data" is "VIF is in ASCII";
- In the field **"Function Field"** it is necessary to select the type of data;
- The field **"Dimension"** is used to select the dimension of the variable (8, 16, 24, 32, 32 real, 48, 64 bit, Variable Length);
- In the field **"Length(Variable Len)"** insert the length of the data in the case of the dimension is "Variable Length";
- In the field **"Unit"** if it is necessary it is possible to select the unit of that variable. The Unit is used for indicates from which device the data come;
- In the field **"Storage Number"** if it is necessary it is possible to insert the value of storage counter of that variable. With this field the slave can indicate and transmit various stored counter states or historical values, in the order in which they occur;
- In the field **"Tariff"** if it is necessary it is possible to insert the value of the tariff of that variable. The Tariff is used for indicates from which device the data come;
- In the field **"VIFE"** it is possible to select a sub-type of "Type of Data";

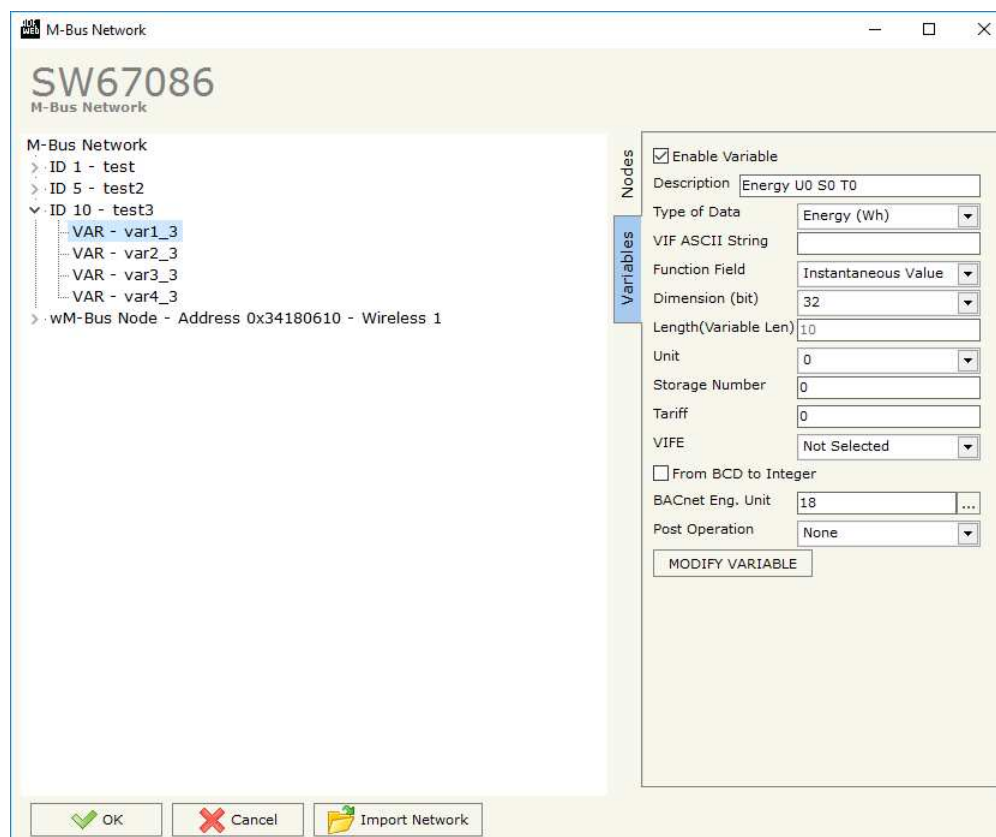

- If the field "**From BCD to Integer**" is checked the Converter converts the BCD value of variable in Integer format. This happens only if the variable is in BCD format; if it isn't nothing changes.
- In the field "**BACnet Eng. Unit**" it is possible to select a Engineering Unit of the Object by pressing to the  button (see 'BACNET ENG. UNIT' section for more details);
- In the field "**Post Operation**" it is possible to select to do a math operation to the value. The possibilities are: :10, :100, :1000, :10000, :100000, *10, *100, *1000, *10000, *100000.

Having completed this fields, to add the variable the button "**ADD VARIABLE**" must be pressed.

In order to modify a created variable it is necessary to select the desired variable, change the wrong items and then press the "**MODIFY VARIABLE**" button.


SECTION VARIABLES (BY POSITION):

Selecting the desired node it is possible to add a variable. In order to create a new variable it is necessary to fill these items:

- To use the created variable the field **"Enable Variable"** must be checked. If you have created a variable but for the moment it is unused it is possible to uncheck the field "Enable Variable" without delete it;
- In the field **"Description"** it is possible to write a description of the variable (it isn't a necessary information, it helps the readability of the tree of network);
- The field **"Dimension"** is used to select the dimension of the variable (8, 16, 24, 32, 32 real, 48, 64 bit, Variable Length);
- In the field **"Length(Variable Len)"** insert the length of the data in the case of the dimension is "Variable Length";
- If the field **"From BCD to Integer"** is checked the Converter converts the BCD value of variable in Integer format. This happens only if the variable is in BCD format; if it isn't nothing changes;
- In the field **"Position"** insert the number of the variable that you want on Modbus;
- In the field **"BACnet Eng. Unit"** it is possible to select a Engineering Unit of the Object by pressing to the ... button (see 'BACNET ENG. UNIT' section for more details).
- In the field **"BACnet Data Type"** it is possible to select a type of Object used for saving the variable (see 'BACNET DATA TYPE' section for more details);
- In the field **"Post Operation"** it is possible to select to do a math operation to the value. The possibilities are: :10, :100, :1000, :10000, :100000, *10, *100, *1000, *10000, *100000.

Having completed this fields, to add the variable the button **"ADD VARIABLE"** must be pressed.

In order to modify a created variable it is necessary to select the desired variable, change the wrong items and then press the **"MODIFY VARIABLE"** button.

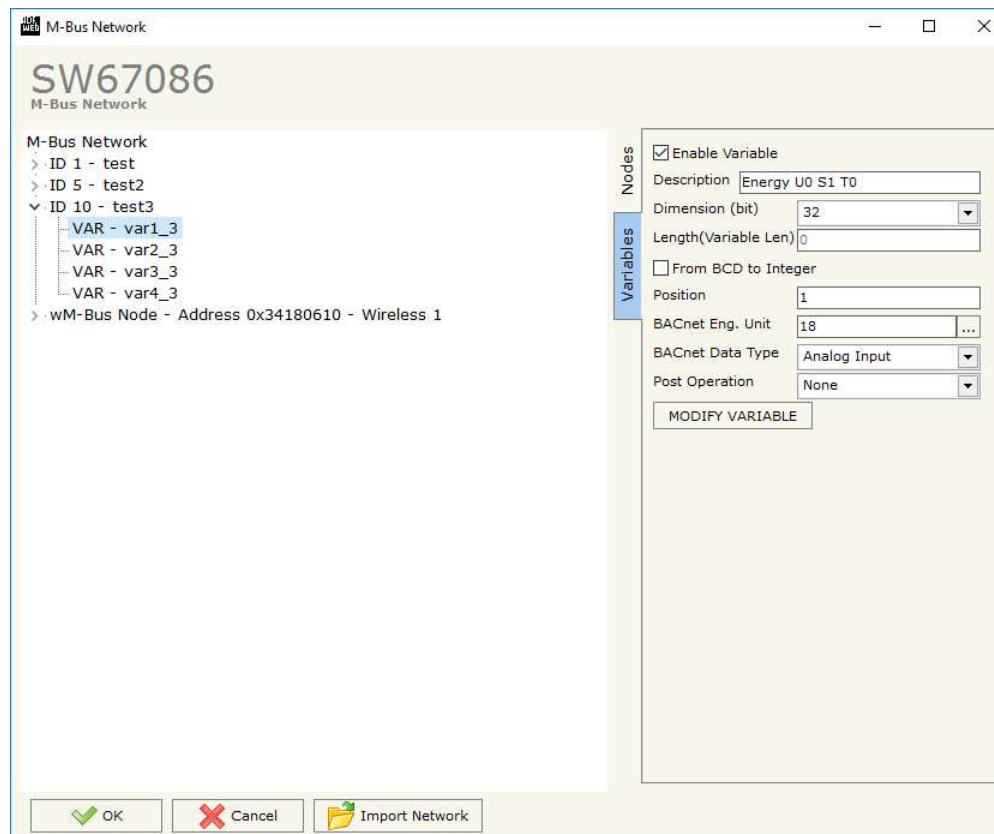

The screenshot shows the 'M-Bus Network' software window. On the left, a tree view shows the network structure with nodes like 'ID 1 - test', 'ID 5 - test2', 'ID 10 - test3', and 'VAR - var1_3'. The 'Variables' tab is selected, showing the configuration for 'VAR - var1_3'. The configuration panel on the right includes the following fields:

- Enable Variable:** Checked.
- Description:** Energy U0 S1 T0
- Dimension (bit):** 32
- Length(Variable Len):** 0
- From BCD to Integer:** Unchecked.
- Position:** 1
- BACnet Eng. Unit:** 18
- BACnet Data Type:** Analog Input
- Post Operation:** None
- MODIFY VARIABLE** button

At the bottom of the window, there are buttons for 'OK', 'Cancel', and 'Import Network'.

Example:

0x68 - Start Byte
0xBD - L Field
0xBD - L Field
0x68 - Start Byte
0x08 - C Field
0x02 - A Field
0x72 - CI Field

0x71 - Identification Number (Byte 4of4)
0x65 - Identification Number (Byte 3of4)
0x45 - Identification Number (Byte 2of4)
0x28 - Identification Number (Byte 1of4)
0x4D - Manufacturer (Byte 2of2)
0x6A - Manufacturer (Byte 1of2)
0x81 - Version
0x04 - Medium
0x3E - Access Number
0x27 - Status
0x00 - Signature (Byte 2of2)
0x00 - Signature (Byte 1of2)


0x04 - DIF
0x79 - VIF Identification
0x00 - Data (Byte 4of4)
0x00 - Data (Byte 3of4)
0x00 - Data (Byte 2of4)
0x00 - Data (Byte 1of4)

0x04 - DIF
0x06 - VIF Energy
0x00 - Data (Byte 4of4)
0x00 - Data (Byte 3of4)
0x00 - Data (Byte 2of4)
0x00 - Data (Byte 1of4)

0x44 - DIF
0x06 - VIF Energy
0x00 - Data (Byte 4of4)
0x00 - Data (Byte 3of4)
0x00 - Data (Byte 2of4)
0x00 - Data (Byte 1of4)

... Other Variables

0x55 - Check Sum
0x16 - Stop Byte

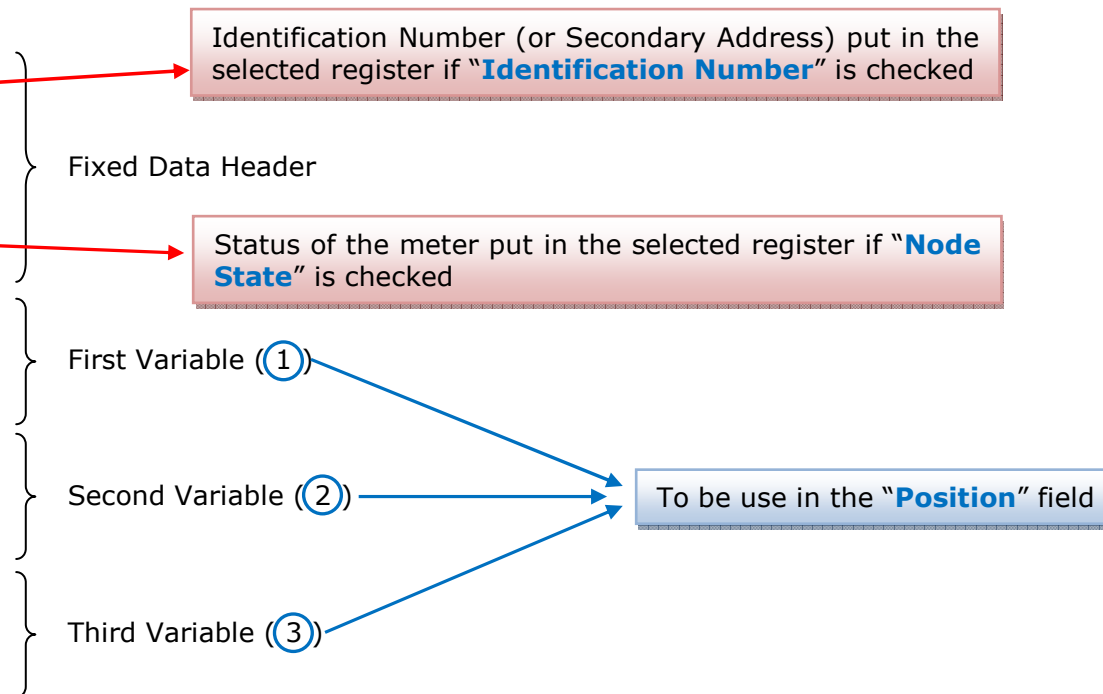

COPY, PASTE AND DELETE ITEMS:

By pressing the right button of the mouse over an item (Variable or Node) it is possible to Copy, Paste and Delete.


It is possible to Copy a variable from a Node and copy it to another Node, or copy a Variable from a project and paste in another one.

It is also possible to copy an entire Node with all its Variables.





Note:

By pressing the "**Import Network**" button is possible to import the file generated by the Analyzer HD67031.

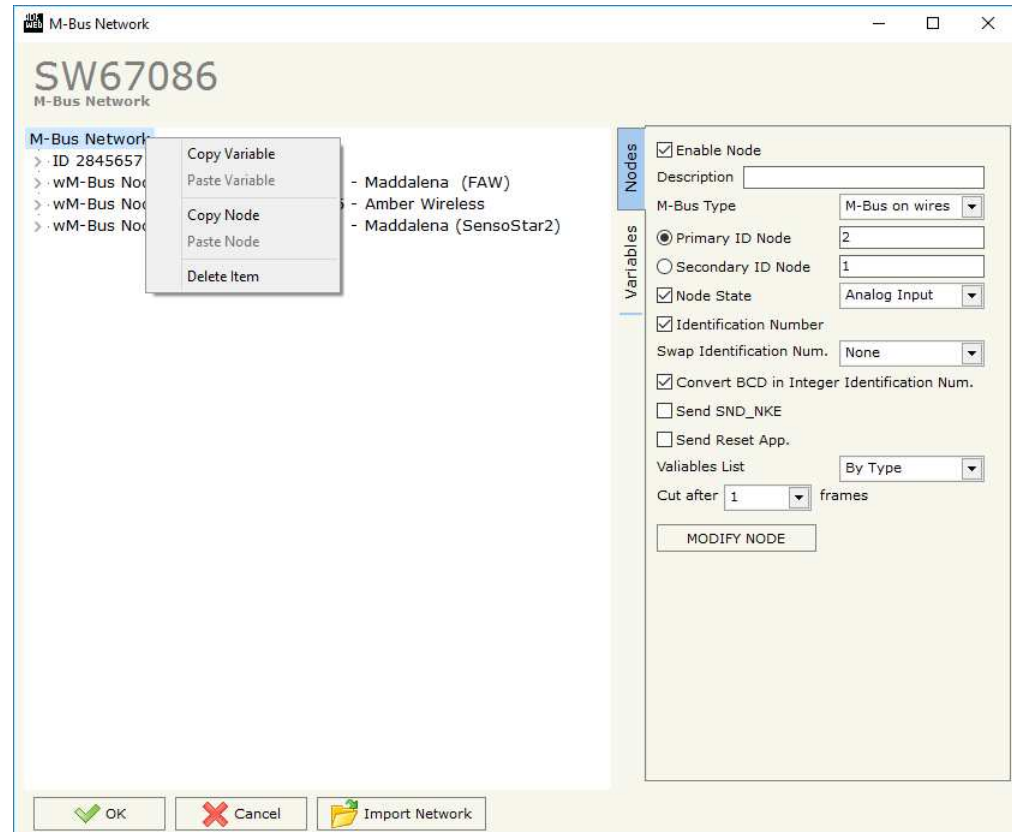

BACNET ENG. UNIT:

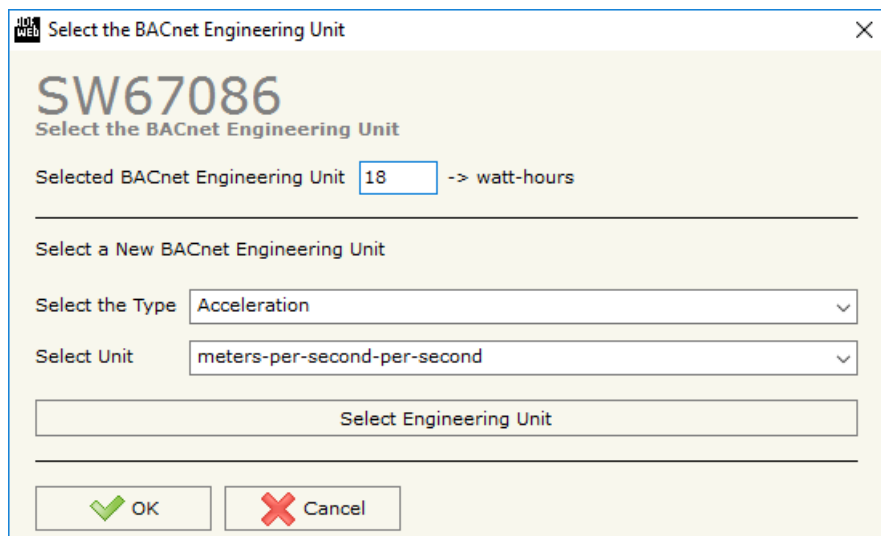

By pressing to  button the left window appears (Fig. 5).

Is possible to insert directly the Unit (using its unique number) by compiling the "**Selected BACnet Engineering Unit**" field; or by selecting with the fields "**Select the Type**" and "**Select unit**" the Type/Unit desired. If the second way is used, is necessary to press the "**Select Engineering Unit**" button for confirm the choice.

Figure 5: "Select the BACnet Engineering Unit" window

BACNET DATA TYPE:

When using the "Variables List → By Position" is necessary to select the Data Type of the variable. Is possible to select from these types: Analog Input (1), DateTime (3), Positive Integer (2), String (4). See the number between [\[\]](#) in the VIFE section for know the type to assign to a variable.

Possible choices for the fields used to create a variable:

Type of Data:

|_Energy (Wh) [\[BACnet Data Type: 1\]](#)
 |_Energy (J) [\[1\]](#)
 |_Volume (m³) [\[1\]](#)
 |_Mass (Kg) [\[1\]](#)
 |_On Time [\[1\]](#)
 |_Operating Time [\[1\]](#)
 |_Power (W) [\[1\]](#)
 |_Power (J/h) [\[1\]](#)
 |_Volume Flow (m³/h) [\[1\]](#)
 |_Volume Flow Ext. (m³/min) [\[1\]](#)
 |_Volume Flow Ext. (m³/s) [\[1\]](#)
 |_Mass Flow (Kg/h) [\[1\]](#)
 |_Flow Temperature (°C) [\[1\]](#)
 |_Return Temperature (°C) [\[1\]](#)
 |_Temperature Difference (K) [\[1\]](#)
 |_External Temperature (°C) [\[1\]](#)
 |_Pressure (bar) [\[1\]](#)
 |_Averaging Duration [\[1\]](#)
 |_Actuality Duration [\[1\]](#)
 |_Type of data in VIFE
 |_Time Point [\[3\]](#)
 |_VIF is in ASCII [\[2\]](#)
 |_Unit for H.C.A. [\[2\]](#)
 |_Fabrication No [\[2\]](#)
 |_Enhanced Identification [\[2\]](#)
 |_Bus Address [\[2\]](#)

Function Field:

|_Instantaneous Value
 |_Minimum Value
 |_Maximum Value
 |_Value During Error State

Dimension (bit):

|_8
 |_16
 |_24
 |_32
 |_32 real
 |_48
 |_64
 |_Variable Length [\[4\]](#)

VIFE:

- _ Not Selected
- _ Credit of the nominal local legal currency units [2]
- _ Debit of the nominal local legal currency units [2]
- _ Access Number (transmission count) [2]
- _ Medium (as in fixed header) [2]
- _ Manufacturer (as in fixed header) [2]
- _ Parameter set identification [2]
- _ Model/Version [2]
- _ Hardware Version # [2]
- _ Firmware Version # [2]
- _ Software Version # [2]
- _ Customer Location [2]
- _ Customer [2]
- _ Access Code User [2]
- _ Access Code Operator [2]
- _ Access Code System Operator [2]
- _ Access Code Developer [2]
- _ Password [2]
- _ Error flags (binary) [2]
- _ Error mask [2]
- _ Digital Output (binary) [2]
- _ Digital Input (binary) [2]
- _ Baudrate [Baud] [2]
- _ response delay time [bittimes] [2]
- _ Retry [2]
- _ First storage # for cyclic storage [2]
- _ Last storage # for cyclic storage [2]
- _ Size of storage block [2]
- _ Storage interval [sec(s)..day(s)] [2]
- _ Storage interval month(s) [2]
- _ Storage interval year(s) [2]
- _ Duration since last readout[sec(s)..day(s)] [2]
- _ Start (date/time) of tariff [2]
- _ Duration of tariff (nn=01..11:min to day) [2]
- _ Period of tariff [sec(s) to day(s)] [2]
- _ Period of tariff months(s) [2]
- _ Period of tariff year(s) [2]
- _ dimensionless/ no VIF [2]
- _ Volts [1]
- _ Ampere [1]
- _ Reset counter [2]
- _ Comulation counter [2]
- _ Control signal [2]
- _ Day of week [2]
- _ Week number [2]
- _ Time point of day change [2]
- _ State of parameter activation [2]
- _ Special supplier information [2]
- _ Duration since last comulation [hour(s)..year(s)] [2]
- _ Operation time battery [hour(s)..year(s)] [2]
- _ Date and time of battery change [3]
- _ Energy MWh [1]
- _ Energy GJ [1]
- _ Volume [1]
- _ Mass [1]
- _ Volume 0,1 feet^3 [1]
- _ Volume 0,1 american gallon [1]
- _ Volume 1 american gallon [1]
- _ Volume flow 0,001 american gallon/min [1]
- _ Volume flow 1 american gallon/min [1]
- _ Volume flow 1 american gallon/h [1]
- _ Power MW [1]
- _ Power GJ/h [1]
- _ Flow Temperature [1]
- _ Return Temperature [1]
- _ Temperature Difference [1]
- _ External Temperature [1]
- _ Cold/Warm Temperature Limit °F [1]
- _ Cold/Worm Temperature Limit °C [1]
- _ Cumul. Count max power [1]

|_ per second [2]
 |_ per minute [2]
 |_ per hour [2]
 |_ per day [2]
 |_ per week [2]
 |_ per month [2]
 |_ per year [2]
 |_ per revolution/measurement [2]
 |_ increment per input pulse on input channel [2]
 |_ increment per output pulse on output channel [2]
 |_ per liter [2]
 |_ per m³ [2]
 |_ per kg [2]
 |_ per K (Kelvin) [2]
 |_ per kWh [2]
 |_ per GJ [2]
 |_ per kW [2]
 |_ per (K*I)(Kelvin*liter) [2]
 |_ per V (Volt) [2]
 |_ per A (Ampere) [2]
 |_ multiplied by sek [2]
 |_ multiplied by sek/V [2]
 |_ multiplied by sek/A [2]
 |_ start date(/time) of [2]
 |_ VIF contains uncorrected unit instead of corrected unit [2]
 |_ Accumulation only if positive contributions [2]
 |_ Accumulation of abs value only if negative contributions [2]
 |_ upper/lower limit value [2]

|_ # of exceeds of lower/upper limit [2]
 |_ Date(/time) of begin/end of first/last lower/upper limit exceed [2]
 |_ Duration of limit exceed [2]
 |_ Duration of first/last [2]
 |_ Date(/time) of first/last begin/end [2]
 |_ Multiplicative correction factor [2]
 |_ Additive correction constant * unit of VIF (offset) [2]
 |_ Multiplicative correction factor: 10³ [2]
 |_ future value [2]
 |_ next VIFE's and data of this block are manufacturer specific [2]
 |_ None [2]
 |_ Too many DIFE's [2]
 |_ Storage number not implemented [2]
 |_ Unit number not implemented [2]
 |_ Tariff number not implemented [2]
 |_ Function not implemented [2]
 |_ Data class not implemented [2]
 |_ Data size not implemented [2]
 |_ Too many VIFE's [2]
 |_ Illegal VIF-Group [2]
 |_ Illegal VIF-Exponent [2]
 |_ VIF/DIF mismatch [2]
 |_ Unimplemented action [2]
 |_ No data available (undefined value) [2]
 |_ Data overflow [2]
 |_ Data underflow [2]
 |_ Data error [2]
 |_ Premature end of record [2]

OBJECTS MAP:

By Pressing the “**Objects Map**” button from the main window for SW67056 (Fig. 2) is possible to create a .csv document with the map of BACnet Objects.

	A	B	C	D	E
1	M-Bus ID Node	Var Description	Istance	BACnet Data Type	BACnet Eng. Unit
8	Primary ID Node - 2	Time Point U0 S8	0	DateTime Value Object	no-units
9	Primary ID Node - 2	Energy U0 S8 T0	4	Analog Input Object	watt-hours
10	Primary ID Node - 2	Energy U0 S9 T0	5	Analog Input Object	watt-hours
11	Primary ID Node - 2	Volume U0 S9 T0	6	Analog Input Object	cubic-meters
12	Primary ID Node - 2	Volume U0 S10 T0	7	Analog Input Object	cubic-meters
13	Primary ID Node - 2	Volume U0 S0 T0	8	Analog Input Object	cubic-meters
14	Primary ID Node - 2	Volume Flow U0 S	9	Analog Input Object	cubic-meters-per-hour
15	Primary ID Node - 2	Power U0 S0 T0	10	Analog Input Object	watts
16	Primary ID Node - 2	Flow Temperature	11	Analog Input Object	degrees-Celsius
17	Primary ID Node - 2	Return Temperatu	12	Analog Input Object	degrees-Celsius
18	Primary ID Node - 2	Time Point U0 S0	1	DateTime Value Object	no-units
19	Primary ID Node - 2	Time Point U0 S1	2	DateTime Value Object	no-units
20	Primary ID Node - 2	Time Point U0 S3	3	DateTime Value Object	no-units
21	Primary ID Node - 2	Energy U0 S32 T0	13	Analog Input Object	watt-hours
22	Primary ID Node - 2	Energy U0 S32 T0	14	Analog Input Object	watt-hours
23	Primary ID Node - 2	Time Point U0 S3	4	DateTime Value Object	no-units
24	Primary ID Node - 2	Energy U0 S33 T0	15	Analog Input Object	watt-hours
25	Primary ID Node - 2	Energy U0 S33 T0	16	Analog Input Object	watt-hours
26	Primary ID Node - 2	Time Point U0 S3	5	DateTime Value Object	no-units
27	Primary ID Node - 2	Energy U0 S34 T0	17	Analog Input Object	watt-hours
28	Primary ID Node - 2	Energy U0 S34 T0	18	Analog Input Object	watt-hours
29	Secondary ID Node - 28456571	NS_Device 2	2	Positive Integer Value Object	no-units
30	Secondary ID Node - 28456571	IN_Device 2	3	Positive Integer Value Object	no-units
31	Secondary ID Node - 28456571	Energy U0 S0 T0	19	Analog Input Object	watt-hours
32	Secondary ID Node - 28456571	Energy U0 S1 T0	20	Analog Input Object	watt-hours

Figure 6: “Objects Map” example file

UPDATE DEVICE:

By pressing the **"Update Device"** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn off the Device;
- Put Dip2 of 'Dip-Switch A' at ON position;
- Turn on the device
- Connect the Ethernet cable;
- Insert the IP **"192.168.2.205"**;
- Press the **"Ping"** button, "Device Found!" must appear";
- Press the **"Next"** button;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" turn off the Device;
- Put Dip2 of 'Dip-Switch A' at OFF position;
- Turn on the device.

At this point the configuration/firmware on the device is correctly updated.



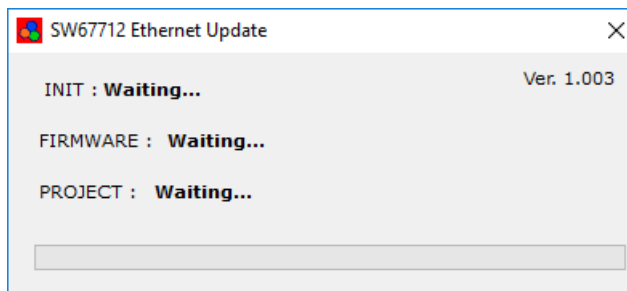


Figure 5: "Update device" windows

If you know the actual IP address of the device you have to use this procedure:

- Turn on the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Press the "**Ping**" button, must appear "Device Found!";
- Press the "**Next**" button;
- Select which operations you want to do;
- Press the "**Execute update firmware**" button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

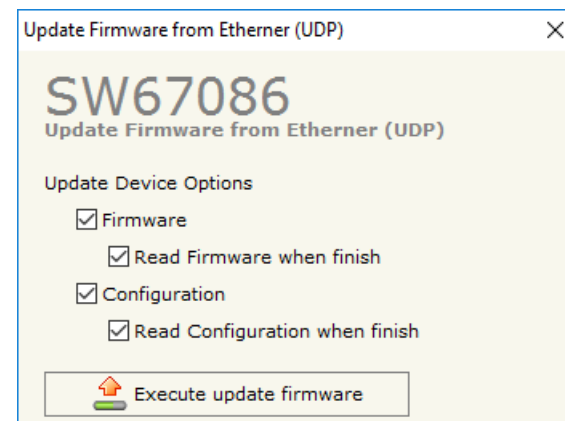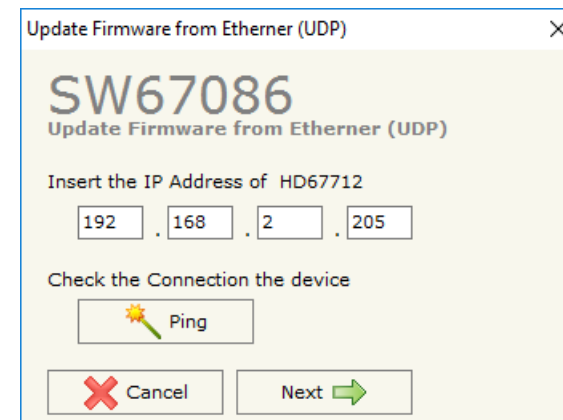

Note:

When you install a new version of the software, if it is the first time it is better you do the update of the Firmware in the HD67086 device.



Note:

When you receive the device, for the first time, you also have to update the Firmware in the HD67086 device.



Warning:

If Fig. 6 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven or Vista or 8, make sure that you have the administrator privileges;
- Take attention at Firewall lock;
- Check the LAN settings.



In the case of HD67086 you have to use the software "SW67086": www.adfweb.com/download/filefold/SW67086.zip.

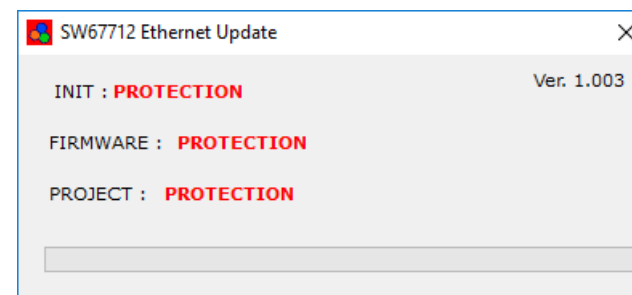


Figure 6: "Protection" window

MECHANICAL DIMENSIONS:

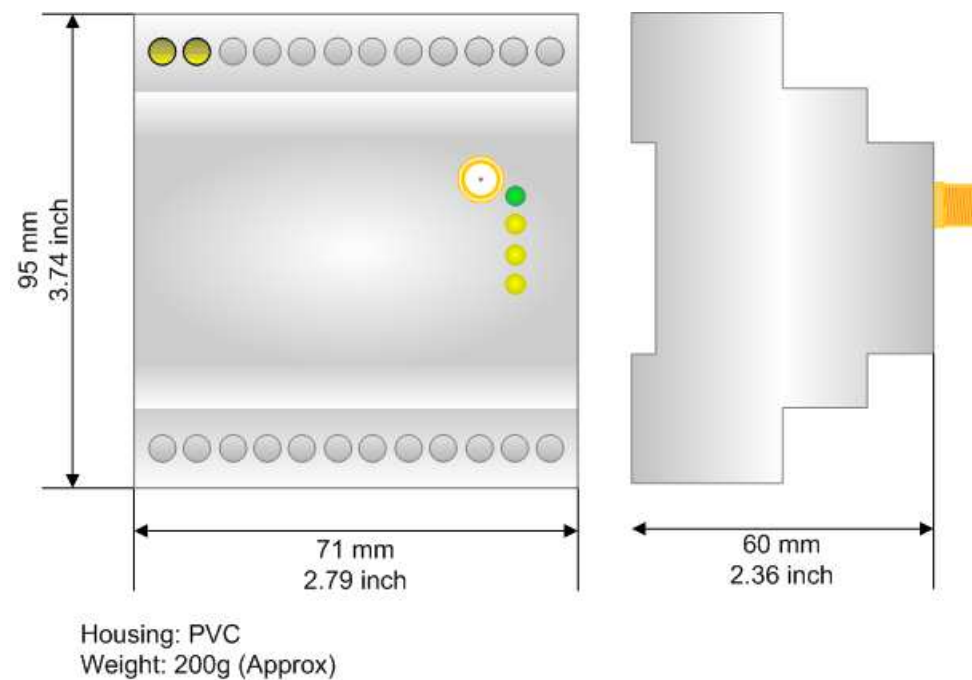


Figure 7: Mechanical dimensions scheme for HD67086-B2-xxxMHz-xxx

ORDERING INFORMATION:

The ordering part number is formed by a valid combination of the following:

HD67086 – B 2 – xxxMHz – xxx

Available M-Bus ports

- 0: only M-Bus Wireless port
- 20: M-Bus Wireless port + M-Bus port (up to 20 standard M-Bus slaves (1.5mA consumption))
- 40: M-Bus Wireless port + M-Bus port (up to 40 standard M-Bus slaves (1.5mA consumption))
- 80: M-Bus Wireless port + M-Bus port (up to 80 standard M-Bus slaves (1.5mA consumption))
- 160: M-Bus Wireless port + M-Bus port (up to 160 standard M-Bus slaves (1.5mA consumption))
- 250: M-Bus Wireless port + M-Bus port (up to 250 standard M-Bus slaves (1.5mA consumption))

M-Bus Wireless Frequency

- 169MHz: M-Bus Wireless communication @ 169 MHz
- 868MHz: M-Bus Wireless communication @ 868 MHz

Connectors Type

- 2: Fixed Screw Terminal

Enclosure Type

- B: Modulbox 4M, 35mm DIN Rail mounting

Device Family

- HD67086: M-Bus Wireless / BACnet Slave - Converter

Order Code: HD67086-B2-169MHz-0	-	M-Bus Wireless / BACnet Slave – Converter (only M-Bus Wireless Port)
Order Code: HD67086-B2-868MHz-0	-	M-Bus Wireless / BACnet Slave – Converter (only M-Bus Wireless Port)
Order Code: HD67086-B2-169MHz-20	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)
Order Code: HD67086-B2-868MHz-20	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)
Order Code: HD67086-B2-169MHz-40	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)
Order Code: HD67086-B2-868MHz-40	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)
Order Code: HD67086-B2-169MHz-80	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)
Order Code: HD67086-B2-868MHz-80	-	M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port)

- | | | |
|--|---|--|
| Order Code: HD67086-B2-169MHz-160 | - | M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port) |
| Order Code: HD67086-B2-868MHz-160 | - | M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port) |
| Order Code: HD67086-B2-169MHz-250 | - | M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port) |
| Order Code: HD67086-B2-868MHz-250 | - | M-Bus Wireless / BACnet Slave – Converter (M-Bus Wireless Port + M-Bus Port) |

ACCESSORIES:

- | | | |
|---------------------------|---|---|
| Order Code: APW020 | - | Power Supply for M-Bus Master device that supports up to 20 Slaves |
| Order Code: APW040 | - | Power Supply for M-Bus Master device that supports up to 40 Slaves |
| Order Code: APW080 | - | Power Supply for M-Bus Master device that supports up to 80 Slaves |
| Order Code: APW160 | - | Power Supply for M-Bus Master device that supports up to 160 Slaves |
| Order Code: APW250 | - | Power Supply for M-Bus Master device that supports up to 250 Slaves |

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:**WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING

The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com. Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



ADFweb.com S.r.l.
Via Strada Nuova, 17
IT-31010 Mareno di Piave
TREVISO (Italy)
Phone +39.0438.30.91.31
Fax +39.0438.49.20.99
www.adfweb.com

