

PPC-2150 Series

21.5" Widescreen Multi-touch Bezel-Free Flat Panel PC
with Intel® Skylake / Kaby Lake U-Series Processors

User's Guide



Content

Content.....	2
Figures & Tables.....	3
Safety Instructions.....	5
Before You Begin.....	5
When Working Inside a Computer.....	6
Preventing Electrostatic Discharge.....	7
Instructions for Lithium Battery.....	7
Preface.....	8
How to Use This Guide.....	8
Unpacking.....	8
Regulatory Compliance Statements.....	8
Maintaining Your Computer.....	9
Chapter 1 Introduction.....	12
Overview.....	12
Product Specifications.....	13
System tour.....	15
Mechanical Dimensions.....	17
Chapter 2 Getting Started.....	18
Setting up your PC.....	18
VESA Mounting.....	22
Panel Mounting.....	23
Chapter 3 AMI BIOS Setup.....	25
Overview.....	25
Main Menu.....	26
Advanced Menu.....	27
Power Menu.....	40
Boot Menu.....	41
Security Menu.....	42
Save & Exit Menu.....	43
Chapter 4 Driver Installation.....	45

Figures & Tables

Figure 1 I/Os.....	15
Figure 2 PPC-2150 Series Mechanical Dimensions.....	17
Figure 3 HDMI / DP	18
Figure 4 Connect USB mouse & keyboard.....	19
Figure 5 RJ45 connector.....	19
Figure 6 COM ports.....	20
Figure 7 Turning on the system	21
Figure 8 VESA Mounting Hole Locations	22
Figure 9 PPC-2150 Series Panel Mount Cut-out hole and maximum panel thickness.....	23
Figure 10 Panel Mounting.....	24
Table 1 PPC-2150 Series product specification.....	14
Table 2 PPC-2150 Series BIOS Main Menu	26
Table 3 Advanced Menu	27
Table 4 Advanced Menu – Display Configuration.....	28
Table 5 Advanced Menu – Super IO Configuration.....	29
Table 6 Advanced Menu – Super IO Configuration – Serial Port 1 Configuration.....	29
Table 7 Advanced Menu – Super IO Configuration – Serial Port 2 Configuration.....	30
Table 8 Advanced Menu – CPU Chipset Configuration.....	31
Table 9 Advanced Menu – SATA Configuration.....	32
Table 10 Advanced Menu – USB Configuration.....	33
Table 11 Advanced Menu – AMT Configuration.....	34
Table 12 Advanced Menu – Trusted Computing.....	34
Table 13 Advanced Menu – Network Stack.....	35
Table 14 Advanced Menu – DIO Configuration	36
Table 15 Advanced Menu – H/W Monitor.....	37
Table 16 Advanced Menu – Intel I210 Gigabit Network Connection.....	38
Table 17 Advanced Menu – Intel Ethernet Connection I219-LM.....	39
Table 18 Power Configuration.....	40
Table 19 Boot Menu	41

Figures & Tables

Table 20 Security Menu	42
Table 21 Save & Exit Menu.....	43

Safety Instructions

■ Before You Begin

Before handling the product, read the instructions and safety guidelines on the following pages to prevent damage to the product and to ensure your own personal safety. Refer to the “Advisories” section in the Preface for advisory conventions used in this user’s guide, including the distinction between Warnings, Cautions, Important Notes, and Notes.

- Always use caution when handling/operating a computer. Only qualified, experienced, authorized electronics service personnel should access the interior of a computer. The power supplies produce high voltages and energy hazards, which can cause bodily harm.
- Use extreme caution when installing or removing components. Refer to the installation instructions in this user’s guide for precautions and procedures. If you have any questions, please contact our Post-Sales Technical Support.
- Access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken; and access is through the use of a tool or lock and key, or other means of security, and is controlled by authority responsible for the location.

WARNING



High voltages are present inside the chassis when the unit’s power cord is plugged into an electrical outlet. Turn off system power, turn off the power supply, and then disconnect the power cord from its source before removing the chassis cover. Turning off the system power switch does not remove power to components.

■ When Working Inside a Computer

Before taking covers off a computer, perform the following steps:

1. Turn off the computer and any peripherals.
2. Disconnect the computer and peripherals from their power sources or subsystems to prevent electric shock or system board damage. This does not apply when hot swapping parts.
3. Follow the guidelines provided in “Preventing Electrostatic Discharge” on the following page.
4. Disconnect any telephone or telecommunications lines from the computer.

In addition, take note of these safety guidelines when appropriate:

- To help avoid possible damage to system boards, wait five seconds after turning off the computer before removing a component, removing a system board, or disconnecting a peripheral device from the computer.
- When you disconnect a cable, pull on its connector or on its strain-relief loop, not on the cable itself. Some cables have a connector with locking tabs. If you are disconnecting this type of cable, press in on the locking tabs before disconnecting the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before connecting a cable, make sure both connectors are correctly oriented and aligned.

CAUTION



Do not attempt to service the system yourself except as explained in this user's guide.
Follow installation and troubleshooting instructions closely.

■ Preventing Electrostatic Discharge

Static electricity can harm system boards. Perform service at an ESD workstation and follow proper ESD procedure to reduce the risk of damage to components. We strongly encourages you to follow proper ESD procedure, which can include wrist straps and smocks, when servicing equipment.

You can also take the following steps to prevent damage from electrostatic discharge (ESD):

- When unpacking a static-sensitive component from its shipping carton, do not remove the component's antistatic packing material until you are ready to install the component in a computer. Just before unwrapping the antistatic packaging, be sure you are at an ESD workstation or grounded. This will discharge any static electricity that may have built up in your body.
- When transporting a sensitive component, first place it in an antistatic container or packaging.
- Handle all sensitive components at an ESD workstation. If possible, use antistatic floor pads and workbench pads.
- Handle components and boards with care. Don't touch the components or contacts on a board. Hold a board by its edges or by its metal mounting bracket.
- Do not handle or store system boards near strong electrostatic, electromagnetic, magnetic, or radioactive fields.

■ Instructions for Lithium Battery



WARNING

Danger of explosion when battery is replaced with incorrect type. Only replace with the same or equivalent type recommended by the manufacturer.

Do not dispose of lithium batteries in domestic waste. Dispose of the battery according to the local regulations dealing with the disposal of these special materials (e.g. to the collecting points for disposal of batteries)

Preface

■ How to Use This Guide

This guide is designed to be used as step-by-step instructions for installation, and as a reference for operation, troubleshooting, and upgrades.

■ Unpacking

When unpacking, follow these steps:

1. After opening the box, save it and the packing material for possible future shipment.
2. Remove all items from the box. If any items listed on the purchase order are missing, notify our customer service immediately.
3. Inspect the product for damage. If there is damage, notify our customer service immediately. Refer to “Warranty Policy” for the return procedure.

■ Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices.

FCC Compliance Statement:

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radiofrequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by us could void the user's authority to operate the equipment.

NOTE



The assembler of a personal computer system may be required to test the system and/or make necessary modifications if a system is found to cause harmful interference or to be noncompliant with the appropriate standards for its intended use.

■ Maintaining Your Computer

Environmental Factors

■ Temperature

The ambient temperature within an enclosure may be greater than room ambient temperature. Installation in an enclosure should be such that the amount of air flow required for safe operation is not compromised.

Consideration should be given to the maximum rated ambient temperature. Overheating can cause a variety of problems, including premature aging and failure of chips or mechanical failure of devices.

If the system has been exposed to abnormally cold temperatures, allow a two-hour warm-up period to bring it up to normal operating temperature before turning it on. Failure to do so may cause damage to internal components, particularly the hard disk drive.

■ Humidity

High-humidity can cause moisture to enter and accumulate in the system. This moisture can cause corrosion of internal components and degrade such properties as electrical resistance and thermal conductivity. Extreme moisture buildup inside the system can result in electrical shorts, which can cause serious damage to the system.

Buildings in which climate is controlled usually maintain an acceptable level of humidity for system equipment. However, if a system is located in an unusually humid location, a dehumidifier can be used to maintain the humidity within an

acceptable range. Refer to the “Specifications” section of this user’s guide for the operating and storage humidity specifications.

■ **Altitude**

Operating a system at a high altitude (low pressure) reduces the efficiency of the cooling fans to cool the system. This can cause electrical problems related to arcing and corona effects. This condition can also cause sealed components with internal pressure, such as electrolytic capacitors, to fail or perform at reduced efficiency.

Power Protection

The greatest threats to a system's supply of power are power loss, power spikes, and power surges caused by electrical storms, which interrupt system operation and/or damage system components. To protect your system, always properly ground power cables and one of the following devices.

■ Surge Protector

Surge protectors are available in a variety of types and usually provide a level of protection proportional with the cost of the device. Surge protectors prevent voltage spikes from entering a system through the AC power cord. Surge protectors, however, do not offer protection against brownouts, which occur when the voltage drops more than 20 percent below the normal AC line voltage level.

■ Line Conditioner

Line conditioners go beyond the overvoltage protection of surge protectors. Line conditioners keep a system's AC power source voltage at a fairly constant level and, therefore, can handle brownouts. Because of this added protection, line conditioners cost more than surge protectors. However, line conditioners cannot protect against a complete loss of power.

■ Uninterruptible Power Supply

Uninterruptible power supply (UPS) systems offer the most complete protection against variations on power because they use battery power to keep the server running when AC power is lost. The battery is charged by the AC power while it is available, so when AC power is lost, the battery can provide power to the system for a limited amount of time, depending on the UPS system.

UPS systems range in price from a few hundred dollars to several thousand dollars, with the more expensive units allowing you to run larger systems for a longer period of time when AC power is lost. UPS systems that provide only 5 minutes of battery power let you conduct an orderly shutdown of the system, but are not intended to provide continued operation. Surge protectors should be used with all UPS systems, and the UPS system should be Underwriters Laboratories (UL) safety approved.

Chapter 1

Introduction

■ Overview

Powered by Intel® Skylake / Kaby Lake U-Series Processors, PPC-2150 Series Flat Panel PC has greatly improved graphics performance, power efficiency and wireless connectivity. In addition, it reserves 1x mPCIe and 1x M.2 Key B for wireless, storage or other possible functional expansion.

The 21.5" widescreen and 10-point PCT multi-touch function can provide comfortable viewing experience to operators and allow multi-window display without toggling.

Checklist

- PPC-2150 Series
- Power Adapter
- Power Cord
- Driver CD
- Quick installation Guide
- Optional VESA Mounting Kit
- Optional wireless LAN
- 1x Panel Mounting Kit (with screw bag)

Features

- 21.5" widescreen 10-point PCT multi-touch LCD display
- Intel® Skylake / Kaby Lake U-Series Processors
- 2x DDR4 SO-DIMM memory socket
- 1x HDMI2.0, 1x DP for video output
- 4x USB3.0, 2x RS-232/422/485 for peripheral connection
- 1x 2.5" SATA3.0 HDD / SSD for Storage
- 1x mPCIe, 1x M.2 Key B for expansion
- Passive cooling design
- IP65-rated front design
- Glass hardness of 6H

■ Product Specifications

CPU Support	Intel® Skylake / Kaby Lake U-Series Processor (FCBGA1356 Socket, 15W TDP)
Memory	2x DDR4 SO-DIMM
LCD Panel Size	21.5"
Aspect Ratio	16:9
Backlight	LED
Resolution	1920 x 1080 Full HD
Brightness (cd/m ² , typical)	250
Contrast Ratio (typical)	5000:1
Color	16.7M
Viewing Angle (L, R, H, L)	89°, 89°, 89°, 89°
Touch Sensor	10-point PCT
External Display	1x HDMI2.0 (on rear, 3840 x 2160 @ 60Hz) 1x DP (on rear, 4096 x 2304 @ 60Hz)
Multiple Display	Triple
Audio Chipset	Realtek ALC662
Audio Interfaces	2x Speaker-out (3W) 1x Line-in (on rear) 1x Line-out (on rear) 1x Mic-in (on rear)
Ethernet	2x GbE LAN (RJ-45 on rear, 1x Intel® I219-LM, 1x Intel® I210-AT)
USB	4x USB3.0 (Type A on rear)
Serial Ports	2x RS-232/422/485 (DB9 on rear, w/ auto flow control for RS-485)
Storage & Expansion	1x 2.5" SATA3.0 HDD / SSD 1x mPCIe (full size) 1x M.2 Key B Socket (mixed w/ USB2.0 or SATA) 1x SIM Card Cage (optional, switchable for mPCIe or M.2)
Power Supply	Connector: Phoenix Connector (on rear) Input Voltage: DC 12V Power Adapter: AC to DC, 100V ~ 240V
Firmware	BIOS: AMI uEFI BIOS w/ 128Mb SPI Flash Watchdog: Programmable WDT to generate system reset event H/W Monitor: Voltages, Temperatures Real Time Clock: Processor integrated RTC TPM: Supported for PPC-2150/2151/2154/2155, optional for others Infineon SLB 9660 TPM1.2 for PPC-2150/2151 (Skylake)

	<p>Intel Core i7-6700HQ for PPC-2153/2154/2156 (Kaby Lake)</p> <p>iAMT: Supported for PPC-2150/2151/2154</p>
System Control & Monitoring	1x Power Switch (on rear)
Cooling	Passive
OS Support	Windows 7, Windows 8, Windows 10, Linux
Construction	Glass Surface + Ultra-narrow Aluminum Front Bezel + Metal Chassis + Aluminum Heat Sink
Dimensions (W x H x D)	542.6 x 339.2 x 59.8 mm / 21.36" x 13.35" x 2.35"
Weight	TBD
Mounting	VESA Mount, Panel Mount
Environment	<p>Operation Temperature: 0°C ~ 50°C / 32°F ~ 122°F</p> <p>Storage Temperature: -20°C ~ 70°C / -4°F ~ 158°F</p> <p>Humidity: 0% ~ 95%</p>
Certification	CE, FCC Class A, IP65 (front)

Table 1 PPC-2150 Series product specification

■ System tour

Refer to the diagrams below to identify the components of the system.

■ I/Os

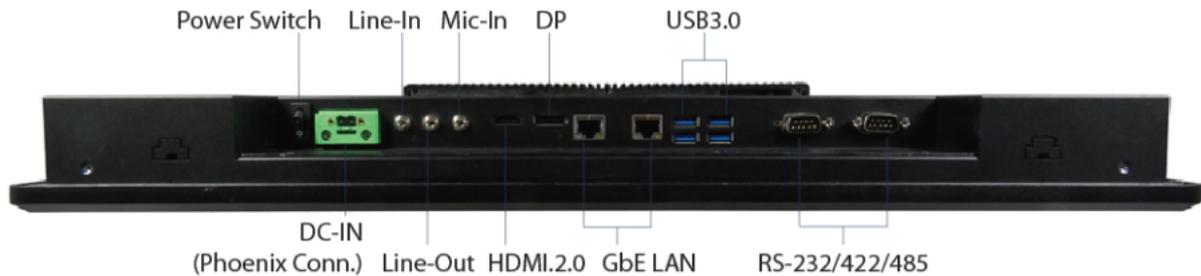


Figure 1 I/Os

Power Input

The supplied power adapter converts AC power to DC for use with this connector. Power supplied through this connector supplies power to the PC. To prevent damage to the PC, always use the supplied power adapter.

Power Switch

The power switch allows powering ON and OFF the system.

Ethernet

The eight-pin RJ-45 LAN port supports a standard Ethernet cable for connection to a local network.

USB

The USB (Universal Serial Bus) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives. USB allows many devices to run simultaneously on a single computer, with some peripheral acting as additional plug-in sites or hubs.

HDMI

HDMI connector for display output

DP

DP is a display interface used to connect a video source to a display device such as a computer monitor or a television set.

Line-IN (Blue)

The Line-in jack is designed to take input from a higher-powered sound source.

Line-Out (Green)

The stereo headphone jack is used to connect the system's audio out signal to amplified speakers or headphones.


MIC-IN (Pink)

The microphone jack is designed to connect the microphone used for video conferencing, voice narrations, or simple audio recordings.

COM

D-Sub 9 pin connector for RS-232/422/485 connection

Mechanical Dimensions

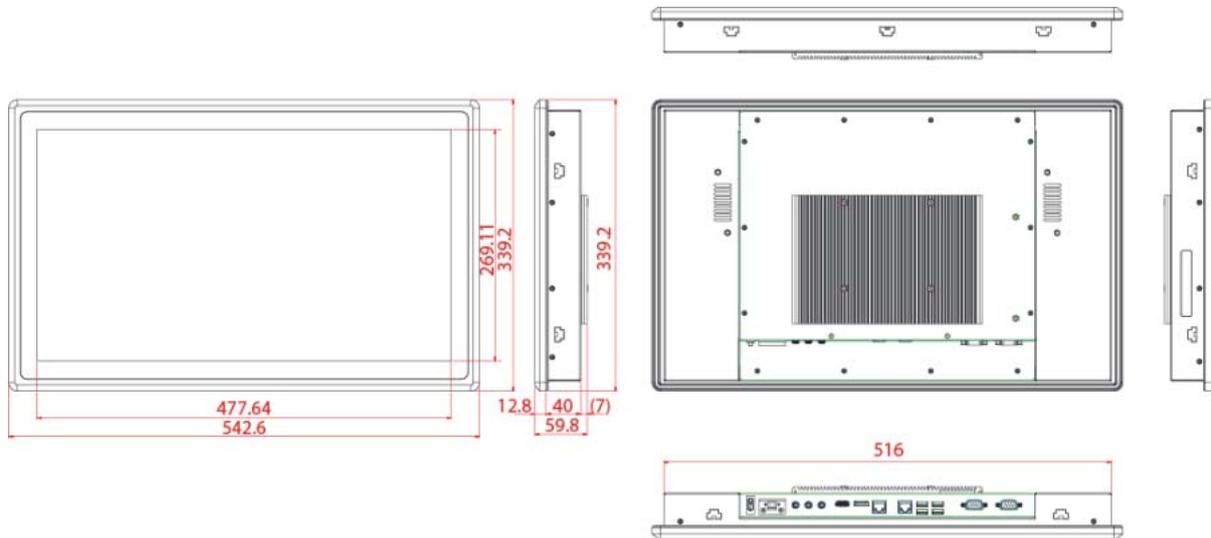

542.6 x 339.2 x 59.8 mm (W x H x D)

Figure 2 PPC-2150 Series Mechanical Dimensions

Chapter 2

Getting Started

■ Setting up your PC

■ Connecting the monitor

Connect the HDMI / DP cable from your display to the HDMI / DP port.

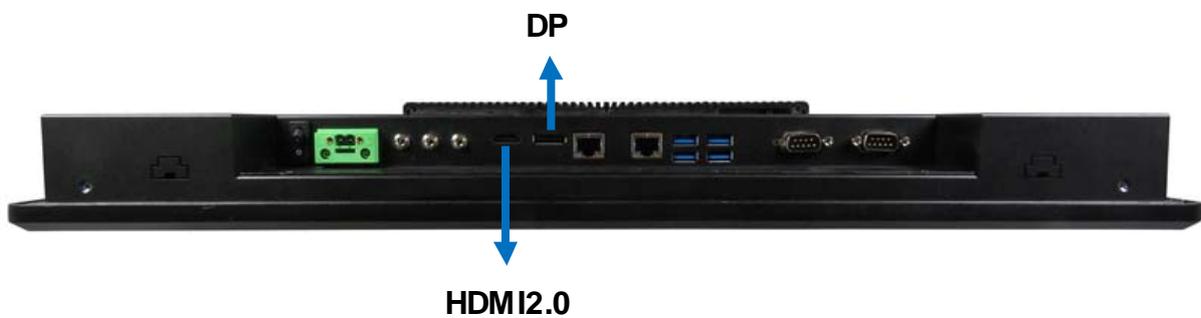


Figure 3 HDMI / DP

■ Connecting USB mouse & keyboard

Your PPC-2150 Series does not come with a keyboard and mouse, but you can use any USB keyboard or mouse with your computer.

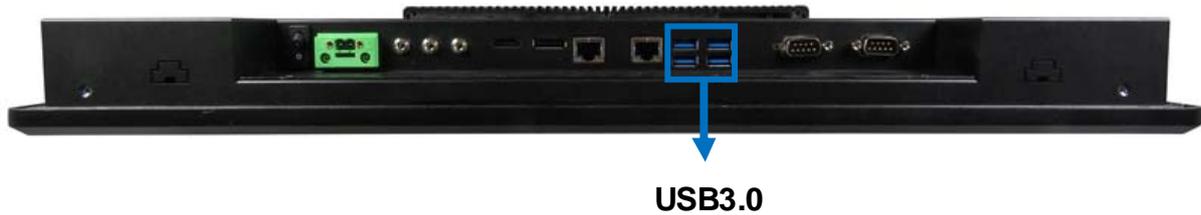


Figure 4 Connect USB mouse & keyboard

NOTE



Using a third-party USB mouse or keyboard may require software drivers. Check the manufacturer's website for the latest software drivers.

■ Connecting to a network device

Connect one end of a network cable to the LAN port on the system rear panel and the other end to a hub or switch.

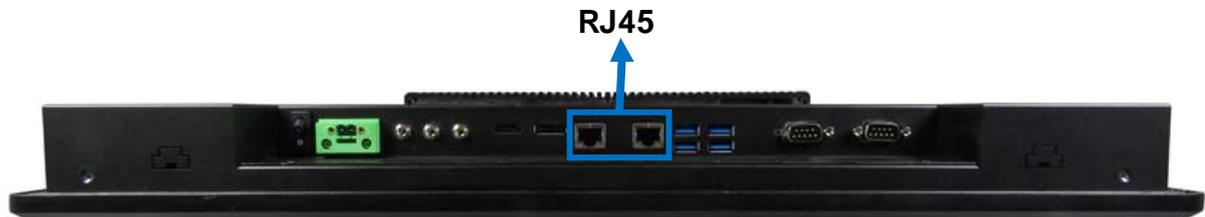



Figure 5 RJ45 connector

■ **COM ports**

COM ports with the pin definitions.



COM1~COM2 RS-232 / 422 / 485 Port DB-9

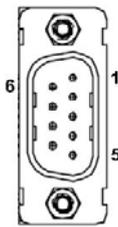

Pin	RS-232	RS-422	Half Duplex RS-485	Full Duplex RS-485
1	DCD	TX-	DATA-	TX-
2	RXD	RX+	N/A	RX+
3	TXD	TX+	DATA+	TX+
4	DTR	RX-	N/A	RX-
5	GND	GND	GND	GND
6	DSR	N/A	N/A	N/A
7	RTS	N/A	N/A	N/A
8	CTS	N/A	N/A	N/A
9	+5V	+5V	+5V	+5V

Figure 6 COM ports

■ **Turning on the system**

1. Connect the power adapter cable to the Phoenix connector (DC IN) of the PPC-2150 Series
2. Connect the power cable to the power adapter
3. Connect the power cable to a power outlet
4. Press the power switch to turn on the system



Figure 7 Turning on the system

■ VESA Mounting

The product comes with VESA FDMI 100 standard mounting holes as shown below. Use 4 screws with the appropriate length for your mounting bracket.

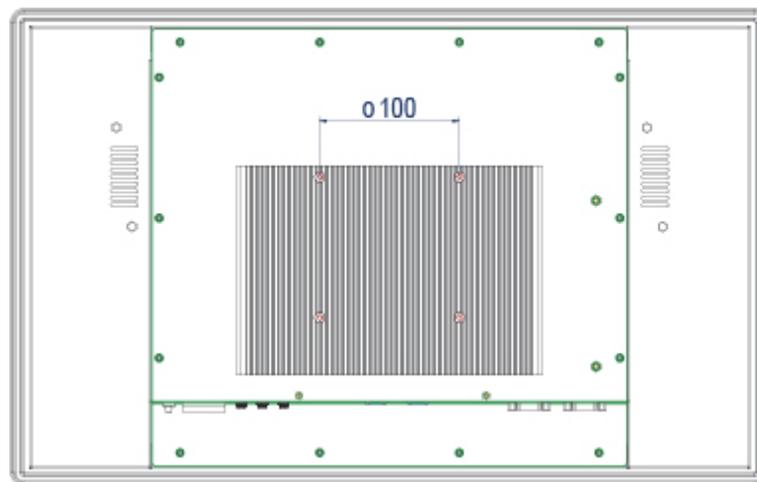


Figure 8 VESA Mounting Hole Locations

NOTE



To fasten the metal shelf, your monitor must comply with VESA100 standard. The VESA mounting kit is optional.

■ Panel Mounting

The Panel PC can be panel mounted and comes with brackets and screws for this purpose. The required cutout for panel mounting and maximum panel thickness is shown below.

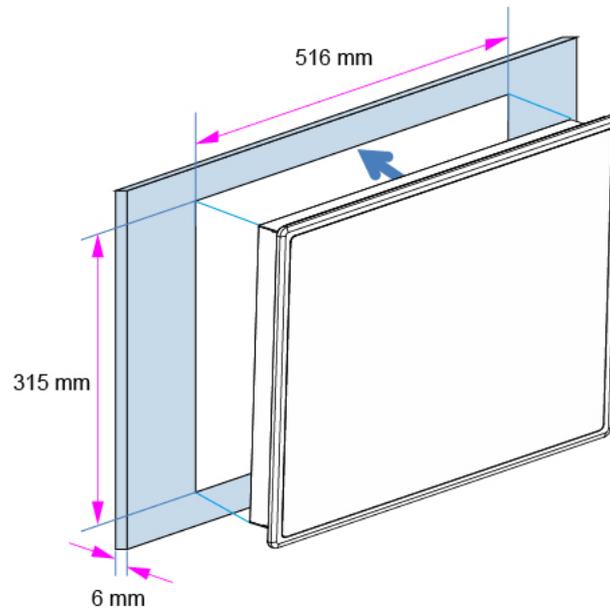


Figure 9 PPC-2150 Series Panel Mount Cut-out hole and maximum panel thickness

Below are the demonstrations of how to do panel mounting.

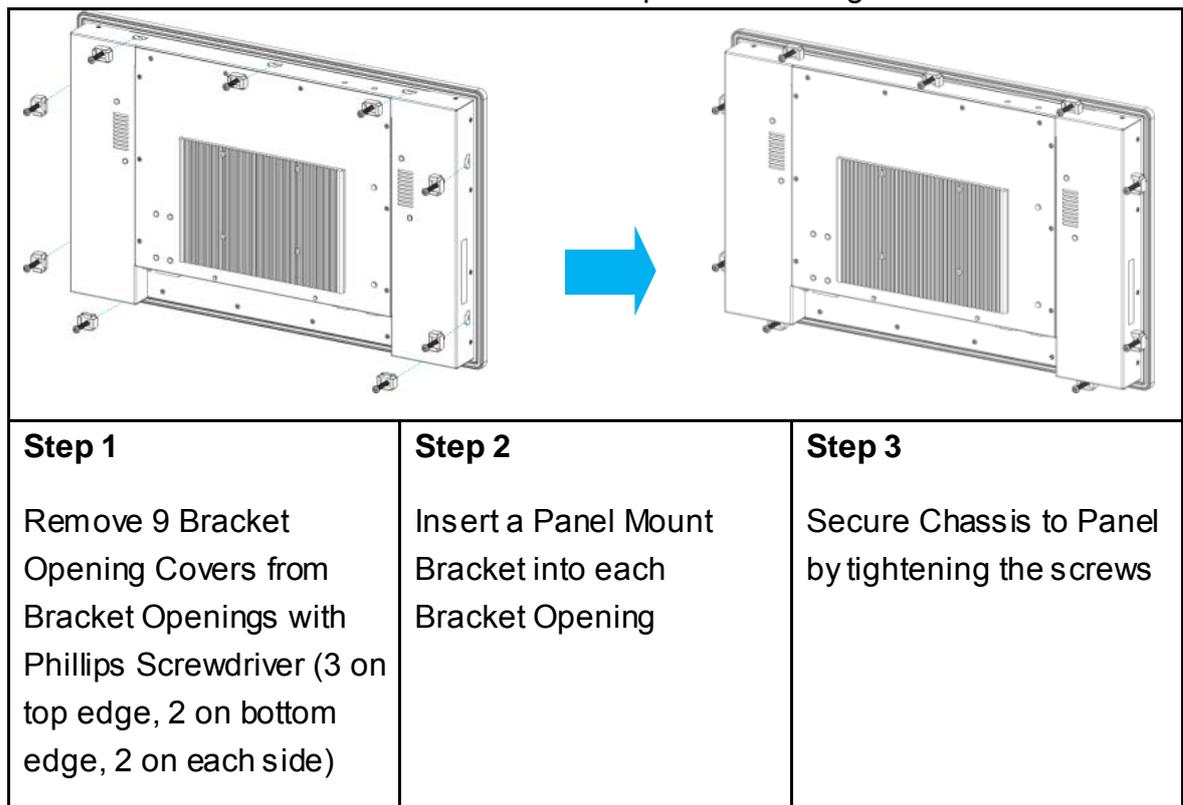


Figure 10 Panel Mounting

Chapter 3

AMI BIOS Setup

■ Overview

This chapter provides a description of the AMI BIOS. The BIOS setup menus and available selections may vary from those of your product. For specific information on the BIOS for your product, please contact us.



NOTE: The BIOS menus and selections for your product may vary from those in this chapter. For the BIOS manual specific to your product, please contact us

AMI's ROM BIOS provides a built-in Setup program, which allows the user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will not need to be changed unless there is a configuration change in the system, such as a hard drive replacement or when a device is added.

It is possible for the CMOS battery to fail, which will cause data loss in the CMOS only. If this happens you will need to reconfigure your BIOS settings.

■ Main Menu

The BIOS Setup is accessed by pressing the DEL key after the Power-On Self-Test (POST) memory test begins and before the operating system boot begins. Once you enter the BIOS Setup Utility, the Main Menu will appear on the screen. The Main Menu provides System Overview information and allows you to set the System Time and Date. Use the “<” and “>” cursor keys to navigate between menu screens.

Table 2 PPC-2150 Series BIOS Main Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Product Information Product Name PPC-2151 BIOS Version R0.0C (x64) BIOS Build Date 06/26/2017 ME Firmware SKU Corporate SKU ME Firmware Version 11.6.29.3287 CPU Information Intel® Core™ i5-6300U CPU @ 2.40GHz Microcode Revision BA Processor Cores 2Core(s) / 4Thread(s) Memory Information Total Size 4096 MB (DDR4) Frequency 2133 MHz System Date [Wed 08/09/2017] System Time [11:20:40] Access Level Administrator					→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

■ Advanced Menu

Table 3 Advanced Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Onboard LAN1 Controller			[Enabled]		
Onboard LAN1 Boot			[Disabled]		
Onboard LAN2 Controller			[Enabled]		
Onboard LAN2 Boot			[Disabled]		
Audio Controller			[Enabled]		
> Display Configuration					
> Super IO Configuration					
> CPU Chipset Configuration					
> SATA Configuration					
> USB Configuration					
> AMT Configuration					
> Trusted Computing					
> Network Stack					
> DIO Configuration					
> H/W Monitor					
> Intel® I210 Gigabit Network Connection - 00:50:08:09:E1:95					
> Intel® Ethernet Connection I219-LM - 00:50:08:09:E1:94					
					→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Onboard LAN 1 Controller

Options: Disabled, Enabled

Onboard LAN 1 Boot

Options: Disabled, Enabled

Onboard LAN 2 Controller

Options: Disabled, Enabled

Onboard LAN 2 Boot

Options: Disabled, Enabled

Audio Controller

Options: Disabled, Enabled

Table 4 Advanced Menu – Display Configuration

BIOS SETUP UTILITY						
Main	Advanced	Power	Boot	Security	Save & Exit	
Display Configuration					→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Primary Display		[Auto]				
Aperture Size		[256MB]				
DVMT Pre-Allocated		[64M]				
DVMT Total Gfx Mem		[256MB]				
Primary IGFX Boot Display		[VBIOS Default]				
Active LVDS		[Enabled]				
LVDS Panel Type		[1920x1080 2CH]				
LVDS Panel Color Depth		[24Bit]				
PWM Backlight Control		[By External]				
LVDS Backlight Control - PWM		190				
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.						

Primary Display

Options: Auto, IGFX, PCIE

Aperture Size

Options: 128MB, 256MB, 512MB, 1024MB, 2048MB

DVMT Pre-Allocated

Options: 32M, 64M, 4M, 8M, 12M, 16M, 20M, 24M, 28M, 32M/F7, 36M, 40M, 44M, 48M, 52M, 56M, 60M

DVMT Total Gfx Mem

Options: 128M, 256M, MAX

Primary IGFX Boot Display

Options: VBIOS Default, DP, HDMI, LVDS

LVDS Panel Type

Options: 800x600 1CH,
 1024x768 1CH,
 1280x1024 2CH,
 1366x768 1CH,
 1366x768 2CH,
 1600x1200 2CH,
 1920x1080 2CH

LVDS Panel Color Depth

Options: 18Bit, 24Bit

PWM Backlight Control

Options: By External, By Internal

Table 5 Advanced Menu – Super IO Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Super IO Configuration				→←: Select Screen	
>Serial Port 1 Configuration				↑↓: Select Item	
>Serial Port 2 Configuration				Enter: Select	
				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Table 6 Advanced Menu – Super IO Configuration – Serial Port 1 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 1 Configuration				→←: Select Screen	
Serial Port				↑↓: Select Item	
Device Settings				Enter: Select	
[Enabled]				+/-: Change Opt.	
IO=3F8h ; IRQ=4;				F1: General Help	
Change Settings				F2: Previous Values	
[Auto]				F3: Optimized Defaults	
Serial Port 1 Type				F4: Save & Exit	
[RS232]				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Serial Port

Options: Disabled, Enabled

Change Settings

Options: Auto,

IO=3F8h; IRQ=4;

IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

Serial Port 1 Type

Options: RS232, RS422, RS485

RS485 Duplex Mode

Options: Half Duplex, Full Duplex

RS485 Auto Flow Control

Options: Disabled, Enabled

Table 7 Advanced Menu – Super IO Configuration – Serial Port 2 Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Serial Port 2 Configuration					→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Serial Port Device Settings		[Enabled]	IO=2F8h ; IRQ=3;		
Change Settings Serial Port 2 Type		[Auto]	[RS232]		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Serial Port

Options: Disabled, Enabled

Change Settings

Options: Auto,

IO=2F8h; IRQ=3;

IO=3F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2F8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=3E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12;

IO=2E8h; IRQ=3, 4, 5, 6, 7, 9, 10, 11, 12

Serial Port 2 Type

Options: RS232, RS422, RS485

RS485 Duplex Mode

Options: Half Duplex, Full Duplex

RS485 Auto Flow Control

Options: Disabled, Enabled

Table 8 Advanced Menu – CPU Chipset Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
CPU Chipset Configuration				→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
EIST		[Enabled]			
Turbo Mode		[Enabled]			
Hyper-threading		[Enabled]			
VT-d		[Enabled]			
Active Processor Cores		[All]			
Intel (VMX) Virtualization Technology		[Enabled]			
Intel Trusted Execution Technology		[Disabled]			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

EIST

Options: Disabled, Enabled

Turbo Mode

Options: Disabled, Enabled

Hyper-threading

Options: Disabled, Enabled

VT-d

Options: Disabled, Enabled

Active Processor Cores

Options: All, 1

Intel® (VMX) Virtualization Technology

Options: Disabled, Enabled

Table 9 Advanced Menu – SATA Configuration

BIOS SETUP UTILITY			
Main	Advanced	Power Boot Security Save & Exit	
SATA Configuration			
SATA Controller(s)	[Enabled]	→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
SATA Mode Selection	[AHCI]		
Serial ATA Port 1	Empty		
Port 1	[Enabled]		
Serial ATA Port 2	Empty		
Port 2	[Enabled]		
M.2 SATA Port 1	M.2 SATA M3B (32.0GB)		
Port 1	[Enabled]		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.			

SATA Controller(s)

Options: Enabled, Disabled

SATA Mode Selection

Options: AHCI, Intel RST Premium

Serial ATA Port 1

Options: Disabled, Enabled

Serial ATA Port 2

Options: Disabled, Enabled

M.2 SATA Port 1

Options: Disabled, Enabled

Table 10 Advanced Menu – USB Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
USB Configuration				→←: Select Screen	
USB Devices: 1 Keyboard, 1 Mouse, 1 Point				↑↓: Select Item	
LegacyUSB Support [Enabled]				Enter: Select	
XHCI Hand-off [Enabled]				+/-: Change Opt.	
USB Mass Storage Driver Support [Enabled]				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Legacy USB Support

Options: Enabled, Disabled, Auto

XHCI Hand-off

Options: Enabled, Disabled

USB Mass Storage Driver Support

Options: Disabled, Enabled

Table 11 Advanced Menu – AMT Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
AMT Configuration				→←: Select Screen	
AMT BIOS Features				↑↓: Select Item	
Unconfigure ME				Enter: Select	
[Enabled]				+/-: Change Opt.	
[Disabled]				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

AMT BIOS Features

Options: Disabled, Enabled

Unconfigure ME

Options: Disabled, Enabled

Table 12 Advanced Menu – Trusted Computing

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Configuration				→←: Select Screen	
Security Device Support				↑↓: Select Item	
NO Security Device Found				Enter: Select	
[Disabled]				+/-: Change Opt.	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Security Device Support

Options: Disabled, Enabled

Table 13 Advanced Menu – Network Stack

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Network Stack		[Disabled]		→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Network Stack

Options: Disabled, Enabled

Table 14 Advanced Menu – DIO Configuration

BIOS SETUP UTILITY						
Main	Advanced	Power	Boot	Security	Save & Exit	
DIO Configuration						
User Configuration		[Disabled]				
DI_1		1			→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
DI_2		1				
DI_3		1				
DI_4		1				
DO_1		0				
DO_2		0				
DO_3		0				
DO_4		0				
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.						

User Configuration

Options: Enabled, Disabled

DO_1

Options: Output Low, Output High

DO_2

Options: Output Low, Output High

DO_3

Options: Output Low, Output High

DO_4

Options: Output Low, Output High

Table 15 Advanced Menu – H/W Monitor

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
PC Health Status					
CPU Temperature		: +46 C		→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Memory Temperature		: +46 C			
System Temperature		: +45 C			
+VCORE		: +0.920 V			
+VIN		: +12.000 V			
+3VCC		: +3.360 V			
+3VSB		: +3.360 V			
+VBAT		: +3.120 V			
+5VA		: +5.160 V			
+3VA		: +3.296 V			
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Table 16 Advanced Menu – Intel I210 Gigabit Network Connection

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
> NIC Configuration					
Blink LED	0				
UEFI Driver	Intel® PRO/1000 7.4.25 PCI-E				→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Adapter PBA	200500-000				
Device Name	Intel® I210 Gigabit Network Connection				
Chip Type	Intel i210				
PCI Device ID	1533				
PCI Address	02:00:00				
Link Status	[Disconnected]				
MAC Address	00:50:08:09:E1:95				
Virtual MAC Address	00:00:00:00:00:00				
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

NIC Configuration

- **Link Speed** [Auto Negotiated]

Options: Auto Negotiated, 10 Mbps Half, 10 Mbps Full, 100 Mbps Half, 100 Mbps Full

- **Wake On LAN** [Enabled]

Options: Disabled, Enabled

Table 17 Advanced Menu – Intel Ethernet Connection I219-LM

BIOS SETUP UTILITY			
Main	Advanced	Power Boot Security Save & Exit	
PORT CONFIGURATION MENU			
> NIC Configuration			
Blink LEDs	0	→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
PORT CONFIGURATION INFORMATION			
UEFI Driver:	Intel® Gigabit 0.0.16		
Adapter PBA:	FFFFFF-OFF		
Chip Type	Intel PCH SPT		
PCI Device ID	156F		
PCI Address	00:1F:06		
Link Status	[Disconnected]		
MAC Address	00:50:08:09:E1:94		
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.			

NIC Configuration

- **Link Speed** [Auto Negotiated]
 Options: Auto Negotiated, 10 Mbps Half, 10 Mbps Full, 100 Mbps Half, 100 Mbps Full
- **Wake On LAN** [Enabled]
 Options: Disabled, Enabled

■ Power Menu

Table 18 Power Configuration

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Power Configuration					
ACPI Sleep State		[S3 (Suspend to RAM)]			
Restore AC Power Loss		[Power Off]			
Power Saving Mode		[Disabled]			
Resume Event Control					
Resume By LAN Device		[Disabled]			
Resume By PCI-E Device		[Disabled]			
Resume By Ring Device		[Disabled]			
Resume By RTC Alarm		[Disabled]			
>WatchDog Timer Configuration					
→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit					
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Restore AC Power Loss

Options: Power Off, Power On, Last State

Power Saving Mode

Options: Disabled, EUP Enabled, DeepSx Enabled

Resume By LAN Device

Options: Disabled, Enabled

Resume By PCI-E Device

Options: Disabled, Enabled

Resume By Ring Device

Options: Disabled, Enabled

Resume By RTC Alarm

Options: Disabled, Enabled

Watchdog Timer Configuration

■ WDT Function [Disabled]

Options: Disabled, Enabled

■ Boot Menu

Table 19 Boot Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Boot Configuration					→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Full Screen LOGO Display		[Disabled]			
Setup Prompt Timeout		1			
Bootup NumLock State		[On]			
CSM Support		[Enabled]			
Boot Option Filter		[UEFI and Legacy]			
Boot Option Priorities					
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Full Screen LOGO Display

Options: Disabled, Enabled

Bootup Numlock State

Options: On, Off

CSM Support

Options: Enabled, Disabled

Boot Option Filter

Options: UEFI and Legacy, Legacy only, UEFI only

■ Security Menu

Table 20 Security Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Password Description If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights The password length must be in the following range: Minimum Length 3 Maximum length 20 Administrator Password User Password				→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

■ Save & Exit Menu

Table 21 Save & Exit Menu

BIOS SETUP UTILITY					
Main	Advanced	Power	Boot	Security	Save & Exit
Save Changes and Reset Discard Changes and Reset Save Options Save Changes Discard Changes Restore Defaults				→←: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.18.1263. Copyright (C) 2017, American Megatrends, Inc.					

Save Changes and Exit

Exit system setup after saving the changes. Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. The CMOS RAM is sustained by an onboard backup battery and stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select [Yes] to save changes and exit.

Discard Changes and Exit

Exit system setup without saving any changes. Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than system date, system time, and password, the BIOS asks for a confirmation before exiting.

Discard Changes

Discards changes done so far to any of the setup values. This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select [Yes] to discard any changes and load the previously saved values.

Load Optimal Defaults

Load Optimal Default values for all the setup values. This option allows you to load optimal default values for each of the parameters on the Setup menus, which will provide the best performance settings for your system. The F9 key can be used for this operation.

Load Failsafe Defaults

Load Optimal Default values for all the setup values. This option allows you to load failsafe default values for each of the parameters on the Setup menus, which will provide the most stable performance settings. The F8 key can be used for this operation.

Chapter 4

Driver Installation

If your PPC-2150 Series does not come with an operating system pre-installed, you will need to install an operating system and the necessary drivers to operate it. After you have finished assembling your system and connected the appropriate power source, power it up using the power supply and install the desired operating system. You can download the drivers for the PPC-2150 Series from our website and install as instructed there. For other operating systems, please contact us.